

OWNER'S SERVICE MANUAL

YZ450FR

LIT-11626-16-38

5TA-28199-10

A WARNING

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

YAMAHA LIT-CALIF-65-01

YZ450FR
OWNER'S SERVICE MANUAL
©2002 by Yamaha Motor Corporation, U.S.A.
1st Edition, June 2002
All rights reserved. Any reprinting or
unauthorized use without the written
permission of Yamaha Motor Corporation
U.S.A. is expressly prohibited.
Printed in Japan
P/N. LIT-11626-16-38

INTRODUCTION

Congratulations on your purchase of a Yamaha YZ series. This model is the culmination of Yamaha's vast experience in the production of pacesetting racing machines. It represents the highest grade of craftsmanship and reliability that have made Yamaha a leader.

This manual explains operation, inspection, basic maintenance and tuning of your machine. If you have any questions about this manual or your machine, please contact your Yamaha dealer.

NOTE: _

As improvements are made on this model, some data in this manual may become out-dated. If you have any questions, please consult your Yamaha dealer.

A WARNING

PLEASE READ THIS MANUAL CAREFULLY AND COMPLETELY BEFORE OPERATING THIS MACHINE. DO NOT ATTEMPT TO OPERATE THIS MACHINE UNTIL YOU HAVE **ATTAINED** Α **SATISFACTORY** KNOWLEDGE OF ITS CONTROLS AND **OPERATING FEATURES AND UNTIL YOU** HAVE BEEN TRAINED IN SAFE AND PROPER RIDING TECHNIQUES. REGULAR INSPECTIONS AND CAREFUL MAINTE-NANCE, ALONG WITH GOOD RIDING SKILLS, WILL ENSURE THAT YOU SAFETY **ENJOY THE CAPABILITIES AND THE RELI-**ABILITY OF THIS MACHINE.

FC030002

YAMAHA MOTOR CORPORATION, U.S.A. YZ/WR MOTORCYCLE LIMITED WARRANTY

Yamaha Motor Corporation, U.S.A. hereby warrants to the original retail purchaser that the following components equipped on new Yamaha YZ or WR motorcycles purchased from an authorized Yamaha motorcycle dealer in the continental United States will be free from defects in material and workmanship for the period of time stated herein, subject to certain stated limitations, YZ or WR components included under this warranty are the engine, frame, swingarm, and monoshock. It is understood that the balance of the YZ or WR components are not covered by any warranty, expressed or implied. The balance of the components equipped on the unit are sold on an "as is" basis. This warranty applies to the original purchaser only and is not transferable.

THE PERIOD OF WARRANTY for the above-listed Yamaha YZ or WR components as originally installed on the unit shall be thirty (30) days from the date of purchase.

MODELS EXCLUDED FROM WARRANTY include those used for non-Yamaha-authorized renting, leasing, or other commercial purposes.

DURING THE PERIOD OF WARRANTY any authorized Yamaha motorcycle dealer will, free of charge, repair or replace, at Yamaha's option, any part adjudged defective by Yamaha due to faulty workmanship or material from the factory. Parts used in warranty repairs will be warranted for the balance of the product's warranty period. All parts replaced under warranty become property of Yamaha Motor Corporation U.S.A.

GENERAL EXCLUSIONS from this warranty shall include any failures caused by:

- Installation of parts or accessories that are not qualitatively equivalent to genuine Yamaha parts.
- b. Abnormal strain, neglect, or abuse.
- c. Accident or collision damage.
- d. Modification to original parts.
- e. Lack of proper maintenance.
- f. Damage due to improper transportation.

SPECIFIC EXCLUSIONS from this warranty shall include parts replaced due to normal wear or routine maintenance.

THE CUSTOMER'S RESPONSIBILITY under this warranty shall be to:

- Operate and maintain the YZ or WR as specified in the appropriate Owner's Service Manual, and
- Give notice to an authorized Yamaha motorcycle dealer of any and all apparent defects within ten (10) days after discovery, and make the machine available at that time for inspection and repairs at such dealer's place of business.

YAMAHA MOTOR CORPORATION, U.S.A. MAKES NO OTHER WARRANTY OF ANY KIND, EXPRESSED OR IMPLIED. ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE WHICH EXCEED THE OBLIGATIONS AND TIME LIMITS STATED IN THIS WARRANTY ARE HEREBY DISCLAIMED BY YAMAHA MOTOR CORPORATION, U.S.A. AND EXCLUDED FROM THIS WARRANTY.

SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. ALSO EXCLUDED FROM THIS WARRANTY ARE ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES INCLUDING LOSS OF USE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

YAMAHA MOTOR CORPORATION, U.S.A.
Post Office Box 6555
Cypress, California 90630

WARRANTY QUESTIONS AND ANSWERS

- Q. What costs are my responsibility during the warranty period?
- A. The customer's responsibility includes all costs of normal maintenance services, non-warranty repairs, accident and collision damage, and oil, oil filters, air filters, spark plugs, and brake shoes or pads.
- Q. What are some examples of "abnormal" strain, neglect, or abuse?
- A. These terms are general and overlap each other in areas. Specific examples include: Running the machine without oil; operating the machine with a broken or damaged part which causes another part to fail, damage or failure due to improper or, careless transportation and or tie down; and so on. If you have any specific questions on operation or maintenance, please contact your dealer for advice.
- Q. Does the warranty cover incidental costs such as towing or transportation due to a failure?
- A. No. The warranty is limited to repair of the machine itself.
- Q. May I perform any or all of the recommended maintenance shown in the Owner's Service Manual instead of having the dealer do them?
- x. Yes, if you are a qualified mechanic and follow the procedures specified in the Owner's Service Manual. We do recommend, however, that items requiring special tools or equipment be done by a Yamaha motorcycle dealer.
- Q. Will the warranty be void or canceled if I do not operate or maintain my new YZ or WR exactly as specified in the Owner's Service Manual?
- A. No. The warranty on a new motorcycle cannot be "voided" or "cancelled." However, if a particular failure is caused by operation or maintenance other than as shown in the Owner's Service Manual, that failure may not be covered under warranty.
- Q. What responsibility does my dealer have under this warranty?
- A. Each Yamaha motorcycle dealer is expected to:
 - 1. Completely set up every new machine before sale.
 - Explain the operation, maintenance, and warranty requirements to your satisfaction at the time of sale, and upon your request at any later date. In addition, each Yamaha motorcycle dealer is held responsible for his setup, service and warranty repair work.
- Q. Does the warranty on the engine include the carburetor, air filter, air box, and exhaust pipe?
- A. No. The warranty covers only the engine components.

CUSTOMER SERVICE

If your machine requires warranty service, you must take it to any authorized Yamaha motorcycle dealer within the continental United States. Be sure to bring your warranty registration identification or other valid proof of the original date of purchase. If a question or problem arises regarding warranty, first contact the owner of the dealer-ship. Since all warranty matters are handled at the dealer level, this person is in the best position to help you. If you are still not satisfied and require additional assistance, please write:

YAMAHA MOTOR CORPORATION U.S.A.
CUSTOMER RELATIONS DEPARTMENT
P.O. Box 6555
Cypress, California 90630

When contacting Yamaha Motor Corporation, U.S.A. don't forget to include any important information such as names, addresses, model, V.I.N. (frame number), dates, and receipts.

CHANGE OF ADDRESS

The federal government requires each manufacturer of a motor vehicle to maintain a complete, up-to-date list of all first purchasers against the possibility of a safety-related defect and recall. This list is compiled from the purchase registrations sent to Yamaha Motor Corporation, U.S.A. by the selling dealer at the time of your purchase.

If you should move after you have purchased your new motorcycle, please advise us of your new address by sending a postcard listing your motorcycle model name, V.I.N. (frame number), dealer number (or deale's name) as it is shown on your warranty identification, your name and new mailing address. Mail to:

YAMAHA MOTOR CORPORATION, U.S.A.
WARRANTY DEPARTMENT
P.O.Box 6555
Cypress, California 90630

This will ensure that Yamaha Motor Corporation, U.S.A. has an up-to-date registration record in accordance with federal law.

IMPORTANT NOTICE

THIS MACHINE IS DESIGNED STRICTLY FOR COMPETITION USE, ONLY ON A CLOSED COURSE. It is illegal for this machine to be operated on any public street, road, or highway. Off-road use on public lands may also be illegal. Please check local regulations before riding.

▲ SAFETY INFORMATION

- THIS MACHINE IS TO BE OPERATED BY AN EXPERIENCED RIDER ONLY.
 Do not attempt to operate this machine at maximum power until you are totally familiar with its characteristics.
- 2. THIS MACHINE IS DESIGNED TO BE RIDDEN BY THE OPERATOR ONLY.

 Do not carry passengers on this machine.
- 3. ALWAYS WEAR PROTECTIVE APPAREL.

When operating this machine, always wear an approved helmet with goggles or a face shield. Also wear heavy boots, gloves, and protective clothing. Always wear proper fitting clothing that will not be caught in any of the moving parts or controls of the machine.

- 4. ALWAYS MAINTAIN YOUR MACHINE IN PROPER WORKING ORDER.
 - For safety and reliability, the machine must be properly maintained. Always perform the pre-operation checks indicated in this manual. Correcting a mechanical problem before you ride may prevent an accident.
- 5. GASOLINE IS HIGHLY FLAMMABLE. Always turn off the engine while refueling. Take care to not spill any gasoline on the engine or exhaust system. Never refuel in the vicinity of an open flame, or while smoking.

- 6. GASOLINE CAN CAUSE INJURY.
 - If you should swallow some gasoline, inhale excess gasoline vapors, or allow any gasoline to get into your eyes, contact a doctor immediately. If any gasoline spills onto your skin or clothing, immediately wash skin areas with soap and water, and change your clothes.
- 7. ONLY OPERATE THE MACHINE IN AN AREA WITH ADEQUATE VENTILA-

Never start the engine or let it run for any length of time in an enclosed area. Exhaust fumes are poisonous. These fumes contain carbon monoxide, which by itself is odorless and colorless. Carbon monoxide is a dangerous gas which can cause unconsciousness or can be lethal.

- 8. PARK THE MACHINE CAREFULLY; TURN OFF THE ENGINE.
 - Always turn off the engine if you are going to leave the machine. Do not park the machine on a slope or soft ground as it may fall over.
- 9. THE ENGINE, EXHAUST PIPE, MUF-FLER, AND OIL TANK WILL BE VERY HOT AFTER THE ENGINE HAS BEEN RUN.
 - Be careful not to touch them or to allow any clothing item to contact them during inspection or repair.
- 10. PROPERLY SECURE THE MACHINE BEFORE TRANSPORTING IT.

When transporting the machine in another vehicle, always be sure it is properly secured and in an upright position and that the fuel cock is in the "OFF" position. Otherwise, fuel may leak out of the carburetor or fuel tank.

TO THE NEW OWNER

This manual will provide you with a good basic understanding of features, operation, and basic maintenance and inspection items of this machine. Please read this manual carefully and completely before operating your new machine. If you have any questions regarding the operation or maintenance of your machine, please consult your Yamaha dealer.

NOTE:

This manual should be considered a permanent part of this machine and should remain with it even if the machine is subsequently sold.

EC060000

NOTICE

Some data in this manual may become outdated due to improvements made to this model in the future. If there is any question you have regarding this manual or your machine, please consult your Yamaha dealer.

EC070001

F.I.M. MACHINE WEIGHTS:

Weights of machines without fuel

The minimum weights for motocross machines are:

for the class 125 cc..... minimum 88 kg (194 lb)

for the class 250 cc..... minimum 98 kg (216 lb)

for the class 500 cc.....minimum

102 kg (225 lb)

In modifying your machine (e.g., for weight reduction), take note of the above limits of weight.

HOW TO USE THIS MANUAL

EC08100

PARTICULARLY IMPORTANT INFORMATION



The Safety Alert Symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!

A WARNING

Failure to follow WARNING instructions <u>could</u> result in severe injury or death to the machine operator, a bystander, or a person inspecting or repairing the machine.

CAUTION:

A CAUTION indicates special precautions that must be taken to avoid damage to the machine.

NOTE:

A NOTE provides key information to make procedures easier or clearer.



EC082000

FINDING THE REQUIRED PAGE

- 1. This manual consists of seven chapters; "General Information", "Specifications", "Regular inspection and adjustments", "Engine", "Chassis", "Electrical" and "Tuning".
- 2. The table of contents is at the beginning of the manual. Look over the general layout of the book before finding then required chapter and item.

Bend the book at its edge, as shown, to find the required fore edge symbol mark and go to a page for required item and description.

MANUAL FORMAT

All of the procedures in this manual are organized in a sequential, step-by-step format. The information has been complied to provide the mechanic with an easy to read, handy reference that contains comprehensive explanations of all disassembly, repair, assembly, and inspection operations. In this revised format, the condition of a faulty component will precede an arrow symbol and the course of action required will follow the symbol, e.g.,


Bearings
 Pitting/damage → Replace.


EC084002

HOW TO READ DESCRIPTIONS

To help identify parts and clarify procedure steps, there are exploded diagrams at the start of each removal and disassembly section.

- 1. An easy-to-see exploded diagram (1) is provided for removal and disassembly jobs.
- 2. Numbers ② are given in the order of the jobs in the exploded diagram. A number that is enclosed by a circle indicates a disassembly step.
- 3. An explanation of jobs and notes is presented in an easy-to-read way by the use of symbol marks ③. The meanings of the symbol marks are given on the next page.
- 4. A job instruction chart ④ accompanies the exploded diagram, providing the order of jobs, names of parts, notes in jobs, etc.
- 5. Extent of removal (5) is provided in the job instruction chart to save the trouble of an unnecessary removal job.
- 6. For jobs requiring more information, the step-by-step format supplements (6) are given in addition to the exploded diagram and job instruction chart.

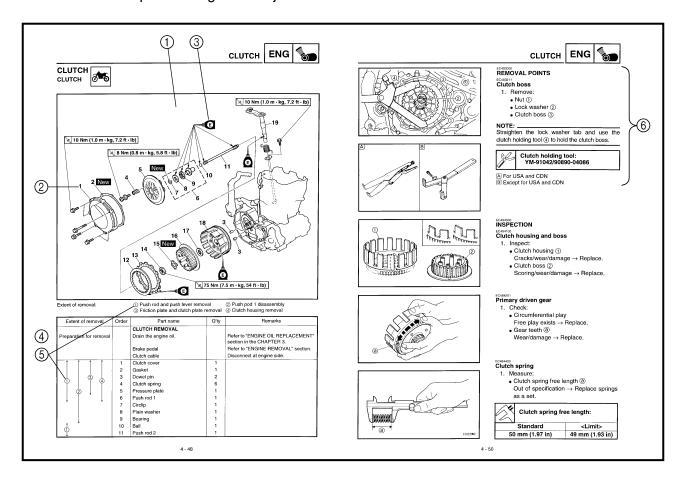

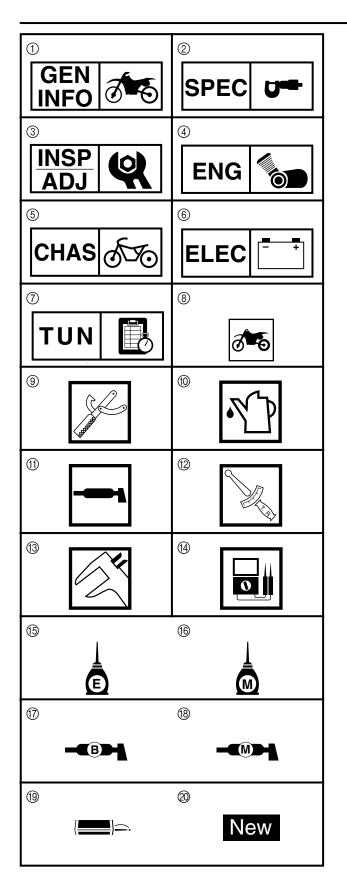

ILLUSTRATED SYMBOLS (Refer to the illustration)

Illustrated symbols ① to ⑦ are designed as thumb tabs to indicate the chapter's number and content.

- (1) General information
- ② Specifications
- 3 Regular inspection and adjustments
- 4 Engine
- (5) Chassis
- 6 Electrical
- 7 Tuning

Illustrated symbols (8) to (4) are used to identify the specifications appearing in the text.

- (8) With engine mounted
- Special tool
- Filling fluid
- ① Lubricant
- 12 Tightening
- (3) Specified value, Service limit
- 4 Resistance (Ω) , Voltage (V), Electric current (A)

Illustrated symbols (5) to (8) in the exploded diagrams indicate grade of lubricant and location of lubrication point.

- (5) Apply engine oil
- (6) Apply molybdenum disulfide oil
- (7) Apply lightweight lithium-soap base grease
- (8) Apply molybdenum disulfide grease

Illustrated symbols (9) to (20) in the exploded diagrams indicate where to apply a locking agent and where to install new parts.

- (19) Apply locking agent (LOCTITE®)
- 1 Use new one

MEMO

INDEX

GENERAL	1	5
INFORMATION	GEN INFO	
SPECIFICATIONS	n-e-	•
SPECIFICATIONS	SPEC	2
REGULAR INSPECTION AND	Q	
ADJUSTMENTS	INSP ADJ	3
ENGINE	ENG	4
CHASSIS	Ø\$€	Ď
СПАЗЗІЗ	CHAS	5
ELECTRICAL	- +	
ELECINICAL	ELEC	6
TUNING		
	TUN	7
· ·		

CONTENTS

CHAPTER 1 GENERAL INFORMATION

DESCRIPTION	1-
MACHINE IDENTIFICATION	
IMPORTANT INFORMATION	
CHECKING OF CONNECTION	1-6
SPECIAL TOOLS	1-7
CONTROL FUNCTIONS	1-10
FUEL	
STARTING AND BREAK-IN	1-14
TORQUE-CHECK POINTS	
CLEANING AND STORAGE	1-19
CHAPTER 2	
SPECIFICATIONS	
GENERAL SPECIFICATIONS	2 -
MAINTENANCE SPECIFICATIONS	
GENERAL TORQUE	2
SPECIFICATIONS	2-18
DEFINITION OF UNITS	
LUBRICATION DIAGRAMS	
CABLE ROUTING DIAGRAM	
CHAPTER 3	
• · · · · · · · · · · · · · · · · · · ·	
REGULAR INSPECTION	AND
ADJUSTMENTS	
MAINTENANOE INTENANO	
MAINTENANCE INTERVALS	3-
PRE-OPERATION INSPECTION	0
AND MAINTENANCE	
CHASSIS	
ELECTRICAL	
	U-4

CHAPTER 4 ENGINE

SEAT, FUEL TANK	
AND SIDE COVERS	4-1
EXHAUST PIPE AND SILENCER	4-3
RADIATOR	4-5
CARBURETOR	4-8
CAMSHAFTS	. 4-21
CYLINDER HEAD	
VALVES AND VALVE SPRINGS	. 4-33
CYLINDER AND PISTON	. 4-42
CLUTCH	. 4-48
OIL FILTER, WATER PUMP	
AND CRANKCASE COVER (RIGHT)	. 4-55
BALANCER	. 4-62
OIL PUMP	. 4-65
KICK AXLE AND SHIFT SHAFT	
CDI MAGNETO	. 4-76
ENGINE REMOVAL	. 4-80
CRANKCASE AND CRANKSHAFT	. 4-85
TRANSMISSION, SHIFT CAM	
AND SHIFT FORK	. 4-94

CHAPTER 5 CHASSIS

FRONT WHEEL AND REAR WHEEL	5-1
FRONT BRAKE AND REAR BRAKE.	5-10
FRONT FORK	5-26
HANDLEBAR	5-39
STEERING	5-45
SWINGARM	5-50
REAR SHOCK ABSORBER	5-58

CHAPTER 6 ELECTRICAL

ELECTRICAL COMPONENTS
AND WIRING DIAGRAM6-1
MAP-CONTROLLED CDI UNIT 6-2
IGNITION SYSTEM 6-3
TPS (THROTTLE POSITION SENSOR)
SYSTEM 6-7
CHAPTER 7 TUNING


GENERAL INFORMATION


DESCRIPTION


- 1 Clutch lever
- ② Hot starter lever
- ③ Front brake lever
- 4 Throttle grip
- (5) Radiator cap
- 6 Fuel tank cap
- ⑦ "ENGINE STOP" button
- ® Kick starter
- 9 Fuel tank
- Radiator
- (1) Coolant drain bolt
- 12 Rear brake pedal
- (3) Valve joint
- (4) Fuel cock
- (5) Cold starter knob
- (6) Drive chain
- Air cleaner
- ® Shift pedal
- (9) Oil dipstick
- @ Front fork

NOTE:

- The machine you have purchased may differ slightly from those shown in the following.
- Designs and specifications are subject to change without notice.

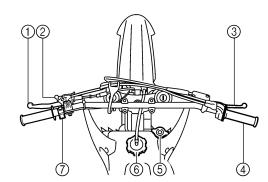

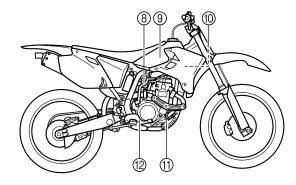

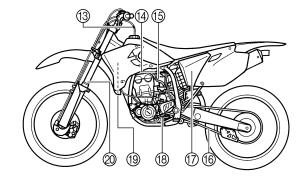

MACHINE IDENTIFICATION



EC120001

MACHINE IDENTIFICATION


There are two significant reasons for knowing the serial number of your machine:

- 1. When ordering parts, you can give the number to your Yamaha dealer for positive identification of the model you own.
- 2. If your machine is stolen, the authorities will need the number to search for and identify your machine.



VEHICLE IDENTIFICATION NUMBER


The vehicle identification number ① is stamped on the right of the steering head pipe.

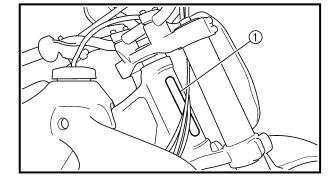

EC123001

ENGINE SERIAL NUMBER


The engine serial number ① is stamped into the elevated part of the right-side of the engine.

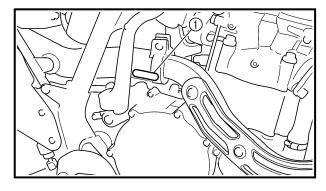


EC124000


MODEL LABEL

The model label ① is affixed to the frame under the rider's seat. This information will be needed to order spare parts.

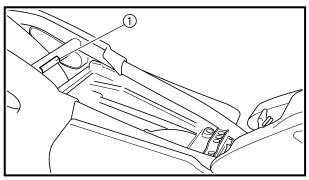



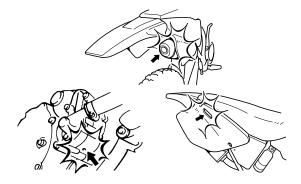

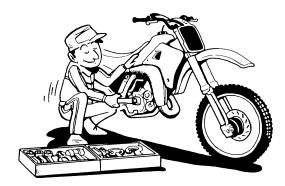





IMPORTANT INFORMATION

EC131010

PREPARATION FOR REMOVAL AND DISASSEMBLY

 Remove all dirt, mud, dust, and foreign material before removal and disassembly.

When washing the machine with high pressured water, cover the parts as follows.

- Silencer exhaust port
- Side cover air intake port
- Water pump housing hole at the bottom
- Drain hole on the cylinder head (right side)

2. Use proper tools and cleaning equipment. Refer to "SPECIAL TOOLS" section.

- When disassembling the machine, keep mated parts together. They include gears, cylinders, pistons, and other mated parts that have been "mated" through normal wear. Mated parts must be reused as an assembly or replaced.
- During the machine disassembly, clean all parts and place them in trays in the order of disassembly. This will speed up assembly time and help assure that all parts are correctly reinstalled.
- 5. Keep away from fire.




ALL REPLACEMENT PARTS

 We recommend to use Yamaha genuine parts for all replacements. Use oil and/or grease recommended by Yamaha for assembly and adjustment.

EC133000

GASKETS, OIL SEALS AND O-RINGS


- All gaskets, oil seals, and O-rings should be replaced when an engine is overhauled. All gasket surfaces, oil seal lips, and O-rings must be cleaned.
- Properly oil all mating parts and bearings during reassembly. Apply grease to the oil seal lips.

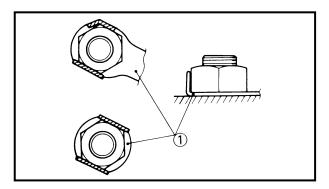

EC134000

LOCK WASHERS/PLATES AND COTTER PINS


 All lock washers/plates ① and cotter pins must be replaced when they are removed. Lock tab(s) should be bent along the bolt or nut flat(s) after the bolt or nut has been properly tightened.

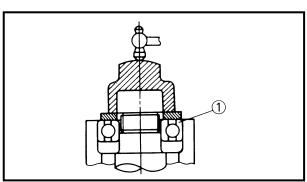

EC13500

BEARINGS AND OIL SEALS

Install the bearing(s) ① and oil seal(s) ② with their manufacturer's marks or numbers facing outward. (In other words, the stamped letters must be on the side exposed to view.) When installing oil seal(s), apply a light coating of lightweight lithium base grease to the seal lip(s). Oil the bearings liberally when installing.

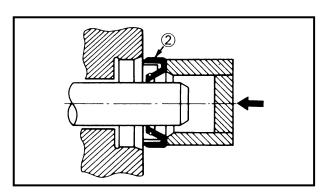


CAUTION:

Do not use compressed air to spin the bearings dry. This causes damage to the bearing surfaces.

IMPORTANT INFORMATION



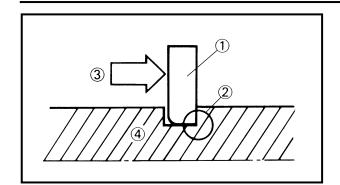


CIRCLIPS

- 1. All circlips should be inspected carefully before reassembly. Always replace piston pin clips after one use. Replace distorted circlips. When installing a circlip ①, make sure that the sharp-edged corner ② is positioned opposite to the thrust ③ it receives. See the sectional view.
- 4 Shaft

CHECKING OF CONNECTION



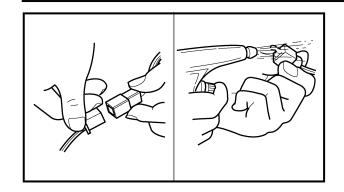


EC1C0001


CHECKING OF CONNECTION

Dealing with stains, rust, moisture, etc. on the connector.

- 1. Disconnect:
 - Connector
- 2. Dry each terminal with an air blower.

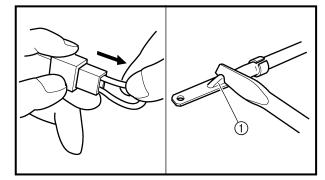

- 3. Connect and disconnect the connector two or three times.
- 4. Pull the lead to check that it will not come off
- 5. If the terminal comes off, bend up the pin ① and reinsert the terminal into the connector.

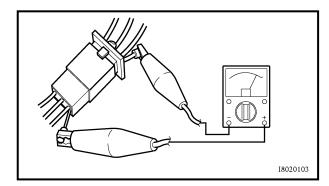

6. Connect:

Connector


NOTE: .

The two connectors "click" together.

7. Check for continuity with a tester.

NOTE: _

- If there in no continuity, clean the terminals.
- Be sure to perform the steps 1 to 7 listed above when checking the wireharness.
- For a field remedy, use a contact revitalizer available on the market.
- Use the tester on the connector as shown.

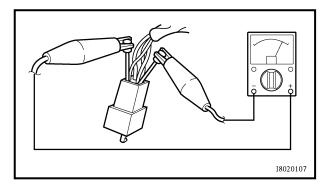

SPECIAL TOOLS



EC140001

SPECIAL TOOLS

The proper special tools are necessary for complete and accurate tune-up and assembly. Using the correct special tool will help prevent damage caused by the use of improper tools or improvised techniques. The shape and part number used for the special tool differ by country, so two types are provided. Refer to the list provided to avoid errors when placing an order.

NOTE:

- For U.S.A. and Canada, use part number starting with "YM-", "YU-" or "ACC-".
- For others, use part number starting with "90890-".

Part number	Tool name/How to use	Illustration	
YU-1135-A, 90890-01135	Crankcase separating tool	YU-1135-A	90890-01135
	These tool is used to remove the crankshaft from either case.		
YU-1235, 90890-01235	Rotor holding tool	YU-1235	90890-01235
	This tool is used when loosening or tightening the flywheel magneto securing nut.		
YU-3097, 90890-01252 YU-1256	Dial gauge and stand Stand These tools are used to check each part for runout or	YU-3097 YU-1256	90890-01252
	bend.		
YU-90050, 90890-01274 YU-90050, 90890-01275 YU-91044, 90890-04081 YU-90063, 90890-01278	Crankshaft installing tool Crankshaft installing pot Crankshaft installing bolt Spacer (crankshaft installer) Adapter (M12) These tools are used to install the crankshaft.	YU-90050 YU-90063 YU-91044	90890-01274 90890-01275 90890-01278 90890-04081
YU-1304, 90890-01304	Piston pin puller	YU-1304	90890-01304
	This tool is used to remove the piston pin.		
YU-24460-01, 90890-01325	Radiator cap tester	YU-24460-01	90890-01325
YU-33984, 90890-01352	Adapter These tools are used for checking the cooling system.	YU-33984	90890-01352
YM-1189, 90890-01189	Flywheel puller	YM-1189	90890-01189
	This tool is used to remove the flywheel magneto.		

SPECIAL TOOLS



Part number	Tool name/How to use	Illustration		
YU-33975, 90890-01403	Ring nut wrench	YU-33975	90890-01403	
	This tool is used when tighten the steering ring nut to specification.			
YM-1423, 90890-01423	Damper rod holder	YM-1423	90890-01423	
	Use this tool to remove and install the damper rod.			
YM-01442, 90890-01442	Fork seal driver	YM-01442	90890-01442	
	This tool is used when install the fork oil seal.			
YU-3112-C, 90890-03112	Yamaha pocket tester	YU-3112-C	90890-03112	
	Use this tool to inspect the coil resistance, output voltage and amperage.	*		
YU-8036-B 90890-03113	Inductive tachometer Engine tachometer	YU-8036-B	90890-03113	
	This tool is needed for observing engine rpm.			
YM-33277-A, 90890-03141	Timing light	YM-33277-A	90890-03141	
	This tool is necessary for checking ignition timing.			
YM-4019, 90890-04019	Valve spring compressor	YM-4019	90890-04019	
	This tool is needed to remove and install the valve assemblies.	O CONTROL OF THE PARTY OF THE P	South of the second	
YM-91042, 90890-04086	Clutch holding tool	YM-91042	90890-04086	
	This tool is used to hold the clutch when removing or installing the clutch boss securing nut.			
YM-4116, 90890-04116 YM-4097, 90890-04097	Valve guide remover Intake 4.5 mm (0.18 in) Exhaust 5.0 mm (0.20 in)	YM-4116 YM-4097	90890-04116 90890-04097	
	This tool is needed to remove and install the valve guide.			


SPECIAL TOOLS



Part number	Tool name/How to use	Illustration		
YM-4117, 90890-04117	Valve guide installer	YM-4117	90890-04117	
YM-4098, 90890-04098	Intake	YM-4098	90890-04098	
	Exhaust This tool is needed to install the valve guide.			
YM-4118, 90890-04118	Valve guide reamer	YM-4118	90890-04118	
YM-4099, 90890-04099	Intake 4.5 mm (0.18 in)	YM-4099	90890-04099	
	Exhaust 5.0 mm (0.20 in) This tool is needed to rebore the new valve guide.			
YM-34487	Dynamic spark tester	YM-34487	90890-06754	
90890-06754	Ignition checker This instrument is necessary for checking the ignition system components.			
ACC-QUICK-GS-KT	Quick gasket®	ACC-QUICK-GS-KT	90890-85505	
90890-85505	YAMAHA Bond No. 1215			
	This sealant (Bond) is used for crankcase mating surface, etc.			

CONTROL FUNCTIONS



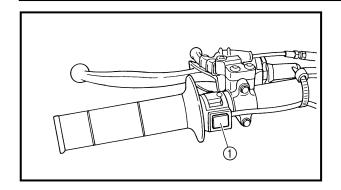


CONTROL FUNCTIONS

FC151000

"ENGINE STOP" BUTTON


The "ENGINE STOP" button ① is located on the left handlebar. Continue pushing the "ENGINE STOP" button till the engine comes to a stop.

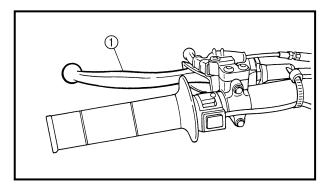

EC152000

CLUTCH LEVER


The clutch lever ① is located on the left handlebar; it disengages or engages the clutch. Pull the clutch lever to the handlebar to disengage the clutch, and release the lever to engage the clutch. The lever should be pulled rapidly and released slowly for smooth starts.

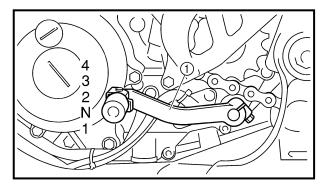

EC153000

SHIFT PEDAL


The gear ratios of the constant-mesh 4 speed transmission are ideally spaced. The gears can be shifted by using the shift pedal ① on the left side of the engine.

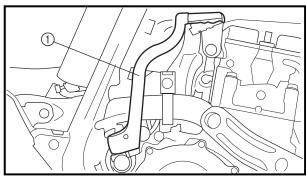

EC154000

KICK STARTER

Rotate the kick starter ① away from the engine. Push the starter down lightly with your foot until the gears engage, then kick smoothly and forcefully to start the engine. This model has a primary kick starter so the engine can be started in any gear if the clutch is disengaged. In normal practices, however, shift to neutral before starting.

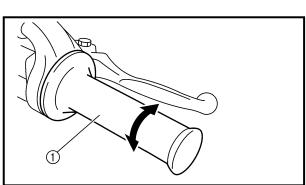


EC155001

THROTTLE GRIP

The throttle grip ① is located on the right handlebar; it accelerates or decelerates the engine. For acceleration, turn the grip toward you; for deceleration, turn it away from you.

CONTROL FUNCTIONS




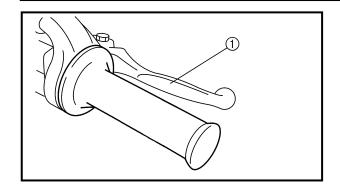

EC156000

FRONT BRAKE LEVER


The front brake lever ① is located on the right handlebar. Pull it toward the handlebar to activate the front brake.

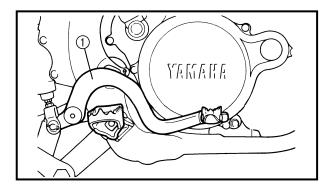

EC157000

REAR BRAKE PEDAL

The rear brake pedal ① is located on the right side of the machine. Press down on the brake pedal to activate the rear brake.

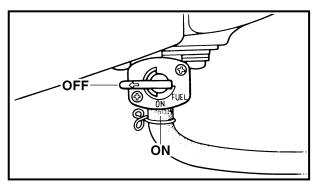


EC158001

FUEL COCK

The fuel cock supplies fuel from the tank to carburetor while filtering the fuel. The fuel cock has the two positions:


OFF: With the lever in this position, fuel will not flow. Always return the lever to this position when the engine is not running.

ON: With the lever in this position, fuel flows to the carburetor. Normal riding is done with the lever in this position.

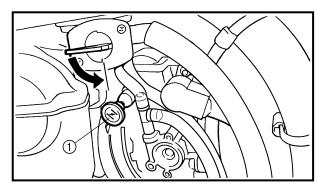

COLD STARTER KNOB

When cold, the engine requires a richer air-fuel mixture for starting. A separate starter circuit, which is controlled by the cold starter knob ①, supplies this mixture. Pull the cold starter knob out to open the circuit for starting. When the engine has warmed up, push it in to close the circuit.

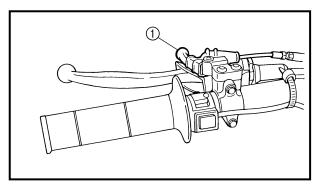


HOT STARTER LEVER


The hot starter lever ① is used when starting a warm engine.


Use the hot starter lever when starting the engine again immediately after it was stopped (the engine is still warm). Pulling the hot starter lever injects secondary air to thin the air-fuel mixture temporarily, allowing the engine to be started more easily.


CONTROL FUNCTIONS



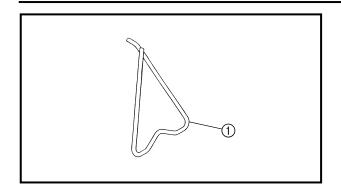

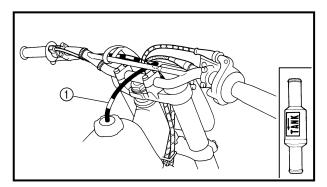

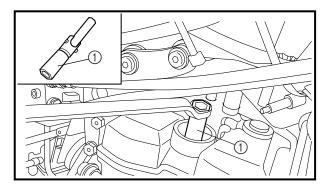

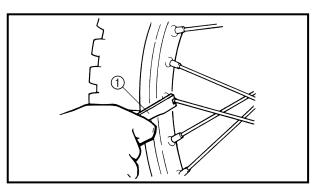

EC15R001

DETACHABLE SIDESTAND

This sidestand ① is used to support only the machine when standing or transporting it.

▲ WARNING

- Never apply additional force to the sidestand.
- Remove this sidestand before starting out.

EC15F000

VALVE JOINT

This valve joint ① prevents fuel from flowing out and is installed to the fuel tank breather hose.

CAUTION:

In this installation, make sure the arrow faces the fuel tank and also downward.

SPARK PLUG WRENCH

This spark plug wrench ① is used to remove and install the spark plug.

NIPPLE WRENCH

This nipple wrench ① is used to tighten the spoke.

FUEL



FUEL

Always use the recommended fuel as stated below. Also, be sure to use new gasoline the day of a race.



Recommended fuel:

Except for ZA:

Premium unleaded gasoline only with a research octane number of 95 or higher.

For ZA:

Premium gasoline

CA	U	111	IC) [

Use only unleaded gasoline. The use of leaded gasoline will cause severe damage to the engine internal parts such as valves, piston rings, and exhaust system, etc.

NOTE:

If knocking or pinging occurs, use a different brand of gasoline or higher octane grade.

▲ WARNING

- For refueling, be sure to stop the engine and use enough care not to spill any fuel.
 Also be sure to avoid refueling close to a fire.
- Refuel after the engine, exhaust pipe, etc. have cooled off.


STARTING AND BREAK-IN

Λ.	M	ΑΙ	-1	ч	NI	G
	w	ΑΙ	- 1	м	IN	ı

Never start or run the engine in a closed area. The exhaust fumes are poisonous; they can cause loss of consciousness and death in a very short time. Always operate the machine in a well-ventilated area.

CAUTION:

- The carburetor on this motorcycle has a built-in accelerator pump. Therefore, when starting the engine, do not operate the throttle or the spark plug will foul.
- Unlike a two-stroke engine, this engine cannot be kick started when the throttle is open because the kick starter may kick back. Also, if the throttle is open the air/ fuel mixture may be too lean for the engine to start.
- Before starting the machine, perform the checks in the pre-operation check list.

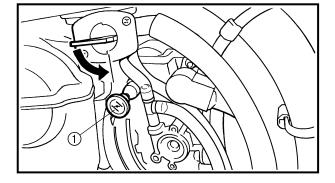

STARTING A COLD ENGINE

- 1. Inspect the coolant level.
- 2. Turn the fuel cock to "ON".
- 3. Shift the transmission into neutral.
- 4. Fully open the cold starter knob ①.
- 5. Kick the kick starter.

▲ WARNING


Do not open the throttle while kicking the kick starter. Otherwise, the kick starter may kick back.



6. Return the cold starter knob to its original position and run the engine at 3,000 ~ 5.000 r/min for 1 or 2 minutes.

5,000 r/min for 1 or 2 minutes.
NOTE:
Since this model is equipped with an accelera-
tor pump, if the engine is raced (the throttle opened and closed), the air/fuel mixture will be
too rich and the engine may stall. Also unlike a
two-stroke engine, this model can idle.
CAUTION:
Do not warm up the engine for extended
periods of time.



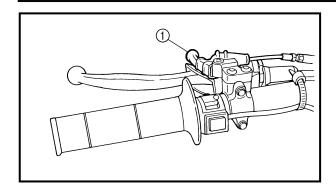

STARTING A WARM ENGINE

Do not operate the cold starter knob and throttle. Pull the hot starter lever ① and start the engine by kicking the kick starter forcefully with a firm stroke.

As soon as the engine starts, release the hot starter lever to close the air passage.

Restarting an engine after a fall

Pull the hot starter lever and start the engine. As soon as the engine starts, release the hot starter lever to close the air passage.

The engine fails to start

Pull the hot starter lever all the way out and while holding the lever, kick the kick starter 10 to 20 times to clear the engine.

Then, restart the engine.

Refer to "Restarting an engine after a fall".

		Throttle grip oper- ation*	Cold starter knob	Hot starter lever
ine	Air temperature = less than $5 ^{\circ}\text{C} (41 ^{\circ}\text{F})$	Open 3 or 4 times	ON	OFF
cold engine	Air temperature = more than 5 °C (41 °F)	None	ON	OFF
Starting a co	Air temperature (normal temperature) = between 5 °C (41 °F) and 25 °C (77 °F)	None	ON/OFF	OFF
St	Air temperature = more than 25 °C (77 °F)	None	OFF	OFF
	rting an engine after a long iod of time	None	ON	OFF
Res	starting a warm engine	None	OFF	ON
Res	starting an engine after a fall	None	OFF	ON

^{*} Operate the throttle grip before kick starting.

CAUTION:

Observe the following break-in procedures during initial operation to ensure optimum performance and avoid engine damage.



BREAK-IN PROCEDURES

- 1. Before starting the engine, fill the fuel tank with the fuel.
- 2. Perform the pre-operation checks on the machine.
- 3. Start and warm up the engine. Check the idle speed, and check the operation of the controls and the "ENGINE STOP" button. Then, restart the engine and check its operation within no more than 5 minutes after it is restarted.
- 4. Operate the machine in the lower gears at moderate throttle openings for five to eight minutes.
- Check how the engine runs when the motorcycle is ridden with the throttle 1/4 to 1/2 open (low to medium speed) for about one hour.
- Restart the engine and check the operation of the machine throughout its entire operating range. Restart the machine and operate it for about 10 to 15 more minutes. The machine will now be ready to race.

CAUTION:

 After the break-in or before each race, you must check the entire machine for loose fittings and fasteners as per "TORQUE-CHECK POINTS".

Tighten all such fasteners as required.

 When any of the following parts have been replaced, they must be broken in.
 CYLINDER AND CRANKSHAFT:

About one hour of break-in operation is necessary.

PISTON, RING, VALVES, CAMSHAFTS AND GEARS:

These parts require about 30 minutes of break-in operation at half-throttle or less. Observe the condition of the engine carefully during operation.

TORQUE-CHECK POINTS



TORQUE-CHECK POINTS

Frame construction —	Co	Frame to rear frame Fuel tank to frame	— Fuel tank to frame		
Exhaust system ——					———— Silencer to rear frame
Engine mounting ——				Frame to engine Engine bracket to engine Engine bracket to frame	
Steering ————	Steering shaft to handlebar			Steering shaft to frame Steering shaft to handle crow Handle crown to handlebar	'n
Suspension ———	— Front —	Front ——Steering shaft to front ———fork		Front fork to handle crown Front fork to under bracket	
	— Rear —	For link type		Assembly of links Link to frame Link to shock absorber Link to swingarm	
	— Rear —	——Installation of shock ———absorber		Shock absorber to frame	
	—Rear —	——Installation of swing- ———— arm		———— Tightening of pivot shaft	
Wheel ————	—— Installatio	n of wheel —		Tightening of front axle Tightening of axle holder Tightening of rear axle Wheel to sprocket	
Brake ————			Front ——	Caliper to front fork Brake disc to wheel Tightening of union bolt Master cylinder to handlebar Tightening of air bleeder	
			Rear ——	Brake pedal to frame Brake disc to wheel Tightening of union bolt Master cylinder to frame Tightening of air bleeder	
Fuel system ———				——— Fuel tank to fuel cock	
Lubrication system —				Tightening of oil hose clamp	

NOTE: ______ Concerning the tightening torque, refer to "MAINTENANCE SPECIFICATIONS" section in the CHAPTER 2.

CLEANING AND STORAGE



EC1B0000

CLEANING AND STORAGE

EC1B1000

CLEANING

Frequent cleaning of your machine will enhance its appearance, maintain good overall performance, and extend the life of many components.

- Before washing the machine, block off the end of the exhaust pipe to prevent water from entering. A plastic bag secured with a rubber band may be used for this purpose.
- If the engine is excessively greasy, apply some degreaser to it with a paint brush.
 Do not apply degreaser to the chain, sprockets, or wheel axles.
- Rinse the dirt and degreaser off with a garden hose; use only enough pressure to do the job.

CAUTION:

Excessive hose pressure may cause water seepage and contamination of wheel bearings, front forks, brakes and transmission seals. Many expensive repair bills have resulted from improper high pressure detergent applications such as those available in coin-operated car washers.

- After the majority of the dirt has been hosed off, wash all surfaces with warm water and a mild detergent. Use an old toothbrush to clean hard-to-reach places.
- 5. Rinse the machine off immediately with clean water, and dry all surfaces with a soft towel or cloth.
- Immediately after washing, remove excess water from the chain with a paper towel and lubricate the chain to prevent rust
- Clean the seat with a vinyl upholstery cleaner to keep the cover pliable and glossy.

CLEANING AND STORAGE



- Automotive wax may be applied to all painted or chromed surfaces. Avoid combination cleaner-waxes, as they may contain abrasives.
- After completing the above, start the engine and allow it to idle for several minutes.

EC1B2001

STORAGE

If your machine is to be stored for 60 days or more, some preventive measures must be taken to avoid deterioration. After cleaning the machine thoroughly, prepare it for storage as follows:

- 1. Drain the fuel tank, fuel lines, and the carburetor float bowl.
- Remove the spark plug, pour a tablespoon of SAE 10W-30 motor oil in the spark plug hole, and reinstall the plug. With the engine stop switch pushed in, kick the engine over several times to coat the cylinder walls with oil.
- Remove the drive chain, clean it thoroughly with solvent, and lubricate it. Reinstall the chain or store it in a plastic bag tied to the frame.
- 4. Lubricate all control cables.
- 5. Block the frame up to raise the wheels off the ground.
- 6. Tie a plastic bag over the exhaust pipe outlet to prevent moisture from entering.
- If the machine is to be stored in a humid or salt-air environment, coat all exposed metal surfaces with a film of light oil. Do not apply oil to rubber parts or the seat cover.

N	(1		-	-
14	v	•	느	•

Make any necessary repairs before the machine is stored.



SPECIFICATIONS

GENERAL SPECIFICATIONS

Model name:	YZ450FR (USA) YZ450F (EUROPE) YZ450F(R) (CDN, AUS, NZ, ZA)
Model code number:	5TA1 (USA) 5TA2 (EUROPE) 5TA4 (CDN, AUS, NZ, ZA)
Dimensions:	
Overall length	2,171 mm (85.5 in)
Overall width	827 mm (32.6 in)
Overall height	1,303 mm (51.3 in)
Seat height	995 mm (39.2 in)
Wheelbase	1,485 mm (58.5 in)
Minimum ground clearance	371 mm (14.6 in)
Basic weight:	
With oil and full fuel tank	113.0 kg (249 lb)
Engine:	
Engine type	Liquid cooled 4-stroke, DOHC
Cylinder arrangement	Single cylinder, forward inclined
Displacement	449 cm ³ (15.8 lmp oz, 15.2 US oz)
Bore × stroke	95.0 × 63.4 mm (3.74 × 2.50 in)
Compression ratio	12.5 : 1
Starting system	Kick starter
Lubrication system:	Dry sump
Oil type or grade:	
Engine oil	(For USA and CDN)
Temp.	At 5 °C (40 °F) or higher A
30 40 50 60°F	Yamalube 4 (20W-40) or SAE 20W-40 type SG motor oil (Non-Friction modified)
A	At 15 °C (60 °F) or lower B
	Yamalube 4 (10W-30) or SAE 10W-30 type SG
	motor oil (Non-Friction modified) and/or
B →	Yamalube 4-R (15W-50) (Non-Friction modi-
0 5 10 15°C	fied)
	(Event for LICA and CDN)
Temp. °C	(Except for USA and CDN) API "SG" or higher grade
-20 -10 0 10 20 30 40 50 	7 T Ga of Higher grade
10W-30 >	
10W-40	
15W-40	
20W-40	
20W-50	
-4 14 30 50 68 86 104 122 °F	



Oil capacity:			
Engine oil			
Periodic oil change	1.0 L (0.88 Imp qt, 1.06 US qt)		
With oil filter replacement	1.1 L (0.97 Imp qt, 1.16 US qt)		
Total amount	1.2 L (1.06 Imp qt, 1.27	• 1	
Coolant capacity (including all routes):	1.2 L (1.06 Imp qt, 1.27	1 /	
Air filter:	Wet type element		
Fuel:	Trottype didd		
Туре	Premium unleaded gase octane number of 95 or	oline only with a research	
	Premium gasoline (For		
Tank capacity	7.0 L (1.54 Imp gal, 1.8		
Carburetor:	- (- p g · ·) -	9 /	
Type	FCR MX39		
Manufacturer	KEIHIN		
Spark plug:			
Type/manufacturer	CR8E/NGK (resistance	type)	
Gap	0.7 ~ 0.8 mm (0.028 ~ 0		
Clutch type:	Wet, multiple-disc	,	
Transmission:	USA, CDN, ZA, AUS, NZ	EUROPE	
Primary reduction system	Gear	←	
Primary reduction ratio	62/22 (2.818)	· ←	
Secondary reduction system	Chain drive		
Secondary reduction ratio	48/14 (3.429)	47/14 (3.357)	
Transmission type	Constant mesh,	←	
<u>'</u>	4-speed		
Operation	Left foot operation	←	
Gear ratio: 1st	27/14 (1.929)	←	
2nd	25/16 (1.563)	←	
3rd	23/18 (1.278)	←	
4th	21/20 (1.050)	←	
Chassis:			
Frame type	Semi double cradle		
Caster angle	27.2°		
Trail	118 mm (4.65 in)		
Tire:			
Туре	With tube		
Size (front)	80/100-21 51M (For USA, CDN, ZA, AUS, NZ		
	and F)	· - ·	
	80/100-21 51R (For EUROPE except F)		
Size (rear)	110/90-19 62M (For USA, CDN, ZA, AUS, NZ		
	and F) 110/90-19 NHS (For El	IROPE except EV	
Tire pressure (front and rear)	100 kPa (1.0 kgf/cm², 1	' '	
Tire pressure (front and rear)	i too kra (1.0 kgi/ciffs, 1	ว หอเ)	

GENERAL SPECIFICATIONS |SPEC|



Brake:	
Front brake type	Single disc brake
Operation	Right hand operation
Rear brake type	Single disc brake
Operation	Right foot operation
Suspension:	
Front suspension	Telescopic fork
Rear suspension	Swingarm (link type monocross suspension)
Shock absorber:	
Front shock absorber	Coil spring/oil damper
Rear shock absorber	Coil spring/gas, oil damper
Wheel travel:	
Front wheel travel	300 mm (11.8 in)
Rear wheel travel	315 mm (12.4 in)
Electrical:	
Ignition system	CDI magneto

MAINTENANCE SPECIFICATIONS |SPEC|

MAINTENANCE SPECIFICATIONS ENGINE

Item		Standard	Limit
Cylinder head: Warp limit *			0.05 mm (0.002 in)
Cylinder: Bore size		95.00 ~ 95.01 mm	
Out of round limit		(3.7402 ~ 3.7406 in)	0.05 mm (0.002 in)
Camshaft:		· · · · · · · · · · · · · · · · · ·	
Drive method		Chain drive (Left) 22.000 ~ 22.021 mm	
Camshaft cap inside diameter		(0.8661 ~ 0.8670 in)	
Camshaft journal diameter		21.967 ~ 21.980 mm	
		(0.8648 ~ 0.8654 in)	
Shaft-to-cap clearance		0.020 ~ 0.054 mm (0.0008 ~ 0.0021 in)	0.08 mm (0.003 in)
Cam dimensions		(0.0000 ~ 0.0021 111)	(0.003 111)
B	A		
Intake	"A"	31.200 ~ 31.300 mm	31.100 mm
	"B"	(1.2283 ~ 1.2323 in)	(1.2244 in)
	D	22.550 ~ 22.650 mm (0.8878 ~ 0.8917 in)	22.450 mm (0.8839 in)
Exhaust	"A"	30.950 ~ 31.050 mm	30.850 mm
	"D"	(1.2185 ~ 1.2224 in)	(1.2146 in)
	"B"	22.494 ~ 22.594 mm (0.8856 ~ 0.8895 in)	22.394 mm (0.8817 in)
Camshaft runout limit			0.03 mm
	-		(0.0012 in)



Item		Standard		Limit
Cam chain:				
Cam chain type/No. of links		98XRH2010-118M/118		
Cam chain adjustment me	thod	Automatic		
Valve, valve seat, valve guid	e:			
Valve clearance (cold)	IN	0.10 ~ 0.15 mm		
Valve elearance (eela)		(0.0039 ~ 0.0059 in)		
	EX	0.20 ~ 0.25 mm		
	LX	(0.0079 ~ 0.0098 in)		
Valve dimensions:		(0.0079 ~ 0.0098 111)		
valve difficultions.			1	
			\	
) B	C		
Δ -				D
Head Diameter	Face Width	Seat Width	Manain	This less as a
Head Diameter			iviargin	Thickness
"A" head diameter	IN	26.9 ~ 27.1 mm		
		(1.0591 ~ 1.0669 in)		
	EX	27.9 ~ 28.1 mm		
		(1.0984 ~ 1.1063 in)		
"B" face width	IN	2.26 mm (0.089 in)		
	EX	2.26 mm (0.089 in)		
"C" seat width	IN	0.9 ~ 1.1 mm		1.6 mm
		(0.0354 ~ 0.0433 in)		(0.0630 in)
	EX	0.9 ~ 1.1 mm		1.6 mm
		(0.0354 ~ 0.0433 in)		(0.0630 in)
"D" margin thickness	IN	1 mm (0.0394 in)		0.85 mm
		,		(0.033 in)
	EX	1 mm (0.0394 in)		0.85 mm
		(0.000)		(0.033 in)
Stem outside diameter	IN	4.475 ~ 4.490 mm		4.445 mm
		(0.1762 ~ 0.1768 in)		(0.1750 in)
	EX	4.965 ~ 4.980 mm		4.935 mm
	- /	(0.1955 ~ 0.1961 in)		(0.1943 in)
Guide inside diameter	IN	4.500 ~ 4.512 mm		4.550 mm
Guide manneter	11.4	4.500 ~ 4.512 mm (0.1772 ~ 0.1776 in)		(0.1791 in)
	EX	5.000 ~ 5.012 mm		5.050 mm
	LA	(0.1969 ~ 0.1973 in)		(0.1988 in)
Stom to guide elegrance	INI	0.010 ~ 0.037 mm		0.08 mm
Stem-to-guide dearance	Stem-to-guide clearance IN			(0.003 in)
FV		(0.0004 ~ 0.0015 in)		, , ,
	EX	0.020 ~ 0.047 mm		0.10 mm
Otana mana ant lineit		(0.0008 ~ 0.0019 in)		(0.004 in)
Stem runout limit				0.01 mm
Į.				(0.0004 in)
	__ _			
	<u> </u>			
7777777777	7777777			



Item		Standard	Limit
Valve spring:			
Free length	IN	37.03 mm (1.46 in)	35.17 mm (1.38 in)
	EX	37.68 mm (1.48 in)	35.79 mm (1.41 in)
Set length (valve closed)	IN EX	27.87 mm (1.10 in) 27.38 mm (1.08 in)	
Compressed force (installed)	IN	111.3 ~ 127.9 N at 27.87 mm (11.3 ~ 13.0 kg at 27.87 mm,	
	EX	24.91 ~ 28.66 lb at 1.10 in) 127.4 ~ 146.4 N at 27.38 mm (13.0 ~ 14.9 kg at 27.38 mm, 28.66 ~ 32.85 lb at 1.08 in)	
Tilt limit X	IN		2.5°/1.61 mm (2.5°/0.063 in)
	EX		2.5°/1.65 mm (2.5°/0.065 in)
Direction of winding (top view)	IN	Clockwise	
	EX	Clockwise	
Piston:			
Piston to cylinder clearance		0.040 ~ 0.065 mm	0.1 mm
		(0.0016 ~ 0.0026 in)	(0.004 in)
Piston size "D"	_	94.945 ~ 94.960 mm (3.738 ~ 3.739 in)	
	Н		
Measuring point "H"		8 mm (0.315 in)	
Piston off-set		1 mm (0.0394 in)	
Piston pin bore inside diameter		18.004 ~ 18.015 mm	18.045 mm
		(0.7088 ~ 0.7093 in)	(0.7104 in)
Piston pin outside diameter		17.991 ~ 18.000 mm (0.7083 ~ 0.7087 in)	17.971 mm (0.7075 in)



Item	Standard	Limit
Piston rings:		
Top ring:		
D D B D D D D D D D D D D D D D D D D D		
Type	Barrel	
Dimensions (B × T)	$1.2 \times 3.5 \text{ mm } (0.05 \times 0.14 \text{ in})$	
End gap (installed)	0.20 ~ 0.30 mm	0.55 mm
	(0.008 ~ 0.012 in)	(0.022 in)
Side clearance (installed)	0.030 ~ 0.065 mm	0.12 mm
	(0.0012 ~ 0.0026 in)	(0.005 in)
2nd ring:		
□ ↓ B □ T → □		
Type	Taper	
Dimensions (B × T)	$1.00 \times 3.35 \text{ mm} (0.04 \times 0.13 \text{ in})$	
End gap (installed)	0.35 ~ 0.50 mm	0.85 mm
	(0.014 ~ 0.020 in)	(0.033 in)
Side clearance	0.020 ~ 0.055 mm	0.12 mm
	(0.0008 ~ 0.0022 in)	(0.005 in)
Oil ring:		
□ □ □ □ B		
Dimensions (B × T)	2.0 × 2.9 mm (0.08 × 0.11 in)	
End gap (installed)	0.2 ~ 0.5 mm (0.01 ~ 0.02 in)	
Crankshaft:		
Crank width "A"	61.95 ~ 62.00 mm	
	(2.439 ~ 2.441 in)	
Runout limit "C"	0.03 mm (0.0012 in)	0.05 mm
Big end side clearance "D"	0.15 ~ 0.45 mm	(0.002 in) 0.50 mm
Dig end side clearance D	0.15 ~ 0.45 mm (0.0059 ~ 0.0177 in)	(0.02 in)
Small end free play "F"	0.4 ~ 1.0 mm (0.02 ~ 0.04 in)	2.0 mm
	(0.02 0.01 11)	(0.08 in)
Balancer:		
Balancer drive method	Gear	
Air filter oil grade:	Foam-air-filter oil or equivalent oil	



Item		Standard	Limit
Clutch:			
Friction plate thickness		2.92 ~ 3.08 mm	2.8 mm
		(0.115 ~ 0.121 in)	(0.110 in)
Quantity		9	
Clutch plate thickness		1.1 ~ 1.3 mm (0.043 ~ 0.051 in)	
Quantity		8	
Warp limit			0.1 mm
1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1			(0.004 in)
Clutch spring free length		50 mm (1.97 in)	49 mm
		,	(1.93 in)
Quantity		6	
Clutch housing thrust clearance		0.10 ~ 0.35 mm	
		(0.0039 ~ 0.0138 in)	
Clutch housing radial clearance		0.010 ~ 0.044 mm	
		(0.0004 ~ 0.0017 in)	
Clutch release method		Inner push, cam push	
Shifter:			
Shifter type		Cam drum and guide bar	
Guide bar bending limit			0.05 mm
_			(0.002 in)
Kick starter:			
Туре		Ratchet type	
Carburetor:			
I. D. mark		5TA1 00	
Main jet	(M.J)	#165	
Main air jet	(M.A.J)	#200	
Jet needle - clip position	(J.N)	NCVQ-4	
Cutaway	(C.A)	1.5	
Pilot jet	(P.J)	#42	
Pilot air jet	(P.A.J)	#100	
Pilot outlet	(P.O)	ø0.9	
Pilot screw (example)	(P.S)	2	
Bypass	(B.P)	ø1.0	
Valve seat size	(V.S)	ø3.8	
Starter jet	(G.S)	#72	
Float height	(F.H)	8 mm (0.31 in)	
Engine idle speed		1,900 ~ 2,100 r/min	
Intake vacuum		28.0 ~ 33.3 kPa (210 ~ 250 mmHg,	
		8.27 ~ 9.84 inHg)	
Hot starter lever free play		3 ~ 6 mm (0.12 ~ 0.24 in)	


MAINTENANCE SPECIFICATIONS | SPEC |



Item	Standard	Limit
Lubrication system:		
Oil filter type	Wire mesh type	
Oil pump type	Trochoid type	
Tip clearance "A"	0.12 mm or less	0.20 mm
	(0.0047 in or less)	(0.008 in)
Tip clearance "B"	0.09 ~ 0.17 mm	0.24 mm
	(0.0035 ~ 0.0067 in)	(0.009 in)
Side clearance	0.03 ~ 0.10 mm	0.17 mm
(1977) (1977) (1977) (1977) (1977) (1977) (1977) (1977) (1977) (1977) (1977) (1977) (1977) (1977) (1977) (1977)	(0.0012 ~ 0.0039 in)	(0.007 in)
Bypass valve setting pressure	40 ~ 80 kPa (0.4 ~ 0.8 kg/cm ² ,	
	5.69 ~ 11.38 psi)	
Cooling:		
Radiator core size		
Width	117.8 mm (4.6 in)	
Height	260 mm (10.2 in)	
Thickness	32 mm (1.26 in)	
Radiator cap opening pressure	110 kPa (1.1 kg/cm², 15.6 psi)	
Radiator capacity (total)	0.71 L (0.62 Imp qt, 0.75 US qt)	
Water pump		
Туре	Single-suction centrifugal pump	

MAINTENANCE SPECIFICATIONS



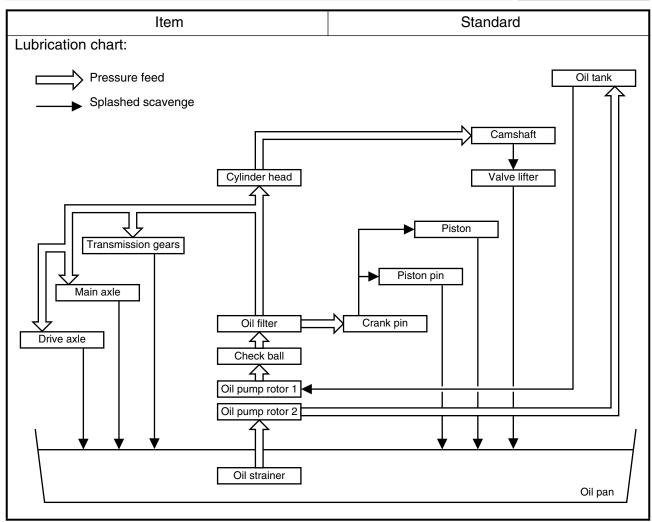

MAINTENANCE SPECIFICATIONS | SPEC |





	B	T	0.11	Tight		tening torque	
	Part to be tightened	Thread size	Q'ty	Nm	m⋅kg	ft⋅lb	
	Spark plug	M10S × 1.0	1	13	1.3	9.4	
	Camshaft cap	M6 × 1.0	10	10	1.0	7.2	
	Cylinder head blind plug screw	M12 × 1.0	1	37	3.7	27	
	Cylinder head (stud bolt)	M6 × 1.0	2	7	0.7	5.1	
		M8 × 1.25	1	15	1.5	11	
	(bolt)	$M10 \times 1.25$	4	Refe	er to NOT	E.*1	
	(nut)	M6 × 1.0	2	10	1.0	7.2	
	Cylinder head cover	M6 × 1.0	2	10	1.0	7.2	
	Cylinder	M6 × 1.0	1	10	1.0	7.2	
	Timing chain tensioner	M6 × 1.0	2	10	1.0	7.2	
	Tensioner cap bolt	M6 × 1.0	1	7	0.7	5.1	
	Timing chain guide (rear)	M6 × 1.0	2	10	1.0	7.2	
	Exhaust pipe (nut)	M8 × 1.25	1	13	1.3	9.4	
	(bolt)	M8 × 1.25	1	24	2.4	17	
\triangle	Silencer	M8 × 1.25	2	35	3.5	25	
	Silencer clamp	M8 × 1.25	1	20	2.0	14	
	Exhaust pipe protector	M6 × 1.0	3	10	1.0	7.2	
	Clamp (cylinder head side)	$M5 \times 0.8$	1	3	0.3	2.2	
	Clamp (carburetor side)	$M4 \times 0.7$	1	3	0.3	2.2	
	Air filter case	M6 × 1.0	2	8	0.8	5.8	
	Air filter joint clamp	M6 × 1.0	1	3	0.3	2.2	
	Air filter joint and air filter case	$M5 \times 0.8$	1	4	0.4	2.9	
	Throttle cable cover	$M5 \times 0.8$	2	4	0.4	2.9	
	Hot starter plunger	$M12 \times 1.0$	1	2	0.2	1.4	
	Air filter element	M6 × 1.0	1	2	0.2	1.4	
	Radiator panel (upper)	M6 × 1.0	2	10	1.0	7.2	
	Radiator	M6 × 1.0	6	10	1.0	7.2	
	Radiator hose clamp	M6 × 1.0	8	2	0.2	1.4	
	Radiator pipe 1, 2	$M10 \times 1.0$	2	10	1.0	7.2	
	Impeller	M8 × 1.25	1	14	1.4	10	
	Water pump housing cover	M6 × 1.0	3	10	1.0	7.2	
	Coolant drain bolt	M6 × 1.0	1	10	1.0	7.2	
	Oil pump cover	$M4 \times 0.7$	1	3	0.3	2.2	
	Oil pump	M6 × 1.0	3	10	1.0	7.2	
	Engine oil drain bolt (oil filter)	M6 × 1.0	1	10	1.0	7.2	
	Oil filter cover	M6 × 1.0	2	10	1.0	7.2	
	Oil delivery pipe 1	$M10 \times 1.25$	1	20	2.0	14	
		M8 × 1.25	2	18	1.8	13	
	Oil delivery pipe 2	M6 × 1.0	1	10	1.0	7.2	
	Oil hose	M6 × 1.0	2	10	1.0	7.2	
	Oil check bolt	M6 × 1.0	1	10	1.0	7.2	
\triangle	Oil hose clamp	_	2	2	0.2	1.4	
	Clutch cover	M6 × 1.0	7	10	1.0	7.2	

MAINTENANCE SPECIFICATIONS



		Tightening torqu			orque
Part to be tightened	Thread size	Q'ty	Nm	m⋅kg	ft·lb
Crankcase cover (right)	M6 × 1.0	10	10	1.0	7.2
Crankcase cover (left)	M6 × 1.0	8	10	1.0	7.2
Crankcase	M6 × 1.0	12	12	1.2	8.7
Clutch cable holder	M6 × 1.0	1	10	1.0	7.2
Oil drain bolt (crankcase rear)	M10 × 1.25	1	20	2.0	1.4
(crankcase left)	M6 × 1.0	1	10	1.0	7.2
Oil drain bolt (frame)	M8 × 1.25	1	23	2.3	17
Oil strainer (frame)	M18 × 1.5	1	90	9.0	65
Crankcase bearing stopper	M6 × 1.0	15	10	1.0	7.2
Drive axle oil seal stopper	M6 × 1.0	2	10	1.0	7.2
Ratchet wheel guide	M6 × 1.0	2	12	1.2	8.7
Stopper plate	M6 × 1.0	2	12	1.2	8.7
Kick starter	M8 × 1.25	1	33	3.3	24
Screw (kick starter)	M6 × 1.0	1	7	0.7	5.1
Primary drive gear	M20 × 1.0	1	75	7.5	54
Clutch boss	M20 × 1.0	1	75	7.5	54
Push lever	M6 × 1.0	1	10	1.0	7.2
Clutch spring	M6 × 1.0	6	8	0.8	5.8
Balancer driven gear	M14 × 1.0	1	50	5.0	36
Balancer weight plate	M6 × 1.0	3	10	1.0	7.2
Drive sprocket	M20 × 1.0	1	75	7.5	54
Drive sprocket cover	M6 × 1.0	2	8	0.8	5.8
Shift pedal	M6 × 1.0	1	12	1.2	8.7
Shift guide	M6 × 1.0	2	10	1.0	7.2
Stopper lever	M6 × 1.0	1	10	1.0	7.2
Segment	M8 × 1.25	1	30	3.0	22

NOTE:

 \triangle - marked portion shall be checked for torque tightening after break-in or before each race.

NOTE:

^{*1:} Tighten the cylinder head bolts to 30 Nm (3.0 m \cdot kg, 22 ft \cdot lb) in the proper tightening sequence, remove and retighten the cylinder head bolts to 20 Nm (2.0 m \cdot kg, 14 ft \cdot lb) in the proper tightening sequence, and then tighten the cylinder head bolts further to reach the specified angle 180° in the proper tightening sequence.

MAINTENANCE SPECIFICATIONS |SPEC|



EC212201 CHASSIS

Item	Star	ndard	Limit
Steering system:			
Steering bearing type	Taper roller bearing		
Front suspension:			
Front fork travel	300 mm (11.8 in)		
Fork spring free length	460 mm (18.1 in)		455 mm (17.9 in)
Spring rate, STD	K = 4.51 N/mm		
	(0.46 kg/mm, 25.8	3 lb/in)	
Optional spring/spacer	Yes		
Oil capacity	568 cm ³		
	(20.0 lmp oz, 19.2	2 US oz)	
Oil level	135 mm (5.31 in)		
<min.~max.></min.~max.>	80 ~ 150 mm (3.1	5 ~ 5.91 in)	
(From top of outer tube with inner			
tube and damper rod fully com-			
pressed without spring.)			
Oil grade	Suspension oil "01	1"	
Inner tube outer diameter	46 mm (1.81 in)		
Front fork top end	Zero mm (Zero in)	·	
Rear suspension:	USA, CDN, AUS, NZ, ZA	EUROPE	
Shock absorber travel	132 mm (5.20 in)	←	
Spring free length	260 mm (10.24 in)	275 mm (10.83 in)	
Fitting length	249 mm	264 mm	
	(9.80 in)	(10.39 in)	
<min.~max.></min.~max.>	240.5 ~ 258.5 mm (9.47 ~ 10.18 in)	255.5 ~ 273.5mm (10.06 ~ 10.77 in)	
Spring rate, STD	K = 52.0 N/mm	K = Approx.	
	(5.30 kg/mm,	52.0 N/mm	
	296.8 lb/in)	(5.30 kg/mm,	
	296.8 lb/in)		
Optional spring	Yes ←		
Enclosed gas pressure	1,000 kPa ←		
	(10 kg/cm ² ,		
	142 psi)		
Swingarm:			
Swingarm free play limit			_
End			1.0 mm (0.04 in)

MAINTENANCE SPECIFICATIONS | SPEC |



lka-m-	Cto	Linais	
Item	Star	ndard	Limit
Wheel:			
Front wheel type	Spoke wheel		
Rear wheel type	Spoke wheel		
Front rim size/material	21 imes 1.60/Aluminu		
Rear rim size/material	19 × 2.15/Aluminu	ım	
Rim runout limit:			
Radial			2.0 mm (0.08 in)
Lateral			2.0 mm (0.08 in)
Drive chain:	USA, CDN, AUS, NZ, ZA	EUROPE	
Type/manufacturer	DID520DMA2	←	
	SDH/DAIDO		
Number of links	113 links + joint	111 links + joint	
Chain slack	40 ~ 50 mm	←	
	(1.6 ~ 2.0 in)		(0.001)
Chain length (10 links)		←	152.5 mm (6.00 in)
Front disc brake:			
Disc outside dia. × Thickness	250 × 3.0 mm (9.8	34 × 0.12 in)	250 × 2.5 mm (9.84 × 0.10 in)
Pad thickness	4.4 mm (0.17 in)		1.0 mm (0.04 in)
Master cylinder inside dia.	11.0 mm (0.433 ir	1)	
Caliper cylinder inside dia.	27.0 mm (1.063 ir	n) × 2	
Brake fluid type	DOT #4	•	
Rear disc brake:			
Disc outside dia. × Thickness	245 × 4.0 mm (9.6	65 × 0.16 in)	245 × 3.5 mm
	,	,	(9.65 × 0.14 in)
Deflection limit			0.15 mm (0.006 in)
Pad thickness	6.4 mm (0.25 in)		1.0 mm (0.04 in)
Master cylinder inside dia.	11.0 mm (0.433 ir	1)	
Caliper cylinder inside dia.	25.4 mm (1.000 ir	•	
Brake fluid type	DOT #4	,	
Brake lever and brake pedal:			
Brake lever position	95 mm (3.74 in)		
Brake pedal height	5 mm (0.20 in)		
(vertical height above footrest top)	(=====,		
Clutch lever free play (lever end)	8 ~ 13 mm (0.31 ~	~ 0.51 in)	
Throttle grip free play	3 ~ 5 mm (0.12 ~	•	

MAINTENANCE SPECIFICATIONS



	Doubto be timbtened	Thus ad aims	O't.	Tigh	ntening tor	que
	Part to be tightened	Thread size	Q'ty	Nm	m∙kg	ft⋅lb
Δ	Handle crown and outer tube	M8 × 1.25	4	23	2.3	17
Δ	Under bracket and outer tube	M8 × 1.25	4	20	2.0	14
Δ	Handle crown and steering shaft	$M24 \times 1.0$	1	145	14.5	105
Δ	Handlebar holder (upper)	M8 × 1.25	4	28	2.8	20
Δ	Steering ring nut	$M28 \times 1.0$	1	Re	fer to NO	ГЕ.
	Front fork and cap bolt	$M48 \times 1.0$	2	30	3.0	22
	Front fork and base valve	$M30 \times 1.0$	2	55	5.5	40
	Cap bolt and damper rod (front fork)	$M12 \times 1.25$	2	29	2.9	21
	Bleed screw (front fork) and cap bolt	$M5 \times 0.8$	2	1	0.1	0.7
	Front fork and protector	$M6 \times 1.0$	6	10	1.0	7.2
	Front fork and brake hose holder	$M6 \times 1.0$	2	10	1.0	7.2
	Front fork and hose cover	$M8 \times 1.25$	1	16	1.6	11
	Front fork and hose cover	$M6 \times 1.0$	1	7	0.7	5.1
	Throttle cable cap	$M5 \times 0.8$	2	4	0.4	2.9
	Clutch lever holder mounting	$M5 \times 0.8$	2	4	0.4	2.9
	Clutch lever mounting	$M6 \times 1.0$	1	2	0.2	1.4
	Hot starter lever holder mounting	$M5 \times 0.8$	2	4	0.4	2.9
Δ	Front brake master cylinder and bracket	$M6 \times 1.0$	2	9	0.9	6.5
	Front brake master cylinder cap	$M4 \times 0.7$	2	2	0.2	1.4
	Brake lever mounting (bolt)	$M6 \times 1.0$	1	6	0.6	4.3
	Brake lever mounting (nut)	$M6 \times 1.0$	1	6	0.6	4.3
	Brake lever position locknut	$M6 \times 1.0$	1	5	0.5	3.6
	Cable guide (front brake hose) and guide stay	$M5 \times 0.8$	1	4	0.4	2.9
Δ	Front brake hose union bolt (master cylinder)	$M10 \times 1.25$	1	30	3.0	22
Δ	Front brake hose union bolt (caliper)	$M10 \times 1.25$	1	30	3.0	22
Δ	Front brake caliper and front fork	M8 × 1.25	2	23	2.3	17
Δ	Brake caliper (front and rear) and pad pin plug	$M10 \times 1.0$	1	3	0.3	2.2
Δ	Brake caliper (front and rear) and pad pin	$M10 \times 1.0$	1	18	1.8	13
Δ	Brake caliper (front and rear) and bleed screw	$M8 \times 1.25$	1	6	0.6	4.3
Δ	Front wheel axle and nut	$M16 \times 1.5$	1	105	10.5	75
Δ	Front wheel axle holder	$M8 \times 1.25$	4	23	2.3	17
Δ	Front brake disc and wheel hub	$M6 \times 1.0$	6	12	1.2	8.7
Δ	Rear brake disc and wheel hub	$M6 \times 1.0$	6	14	1.4	10
Δ	Brake pedal mounting	$M8 \times 1.25$	1	26	2.6	19
Δ	Rear brake master cylinder and frame	$M6 \times 1.0$	2	11	1.1	8.0
	Rear brake master cylinder cap	$M4 \times 0.7$	2	2	0.2	1.4
Δ	Rear brake hose union bolt (caliper)	M10 × 1.25	1	30	3.0	22
Δ	Rear brake hose union bolt (master cylinder)	$M10 \times 1.25$	1	30	3.0	22

NOTE:

- 1. First, tighten the ring nut approximately 38 Nm (3.8 m kg, 27 ft lb) by using the ring nut wrench, then loosen the ring nut one turn.
- 2. Retighten the ring nut 7 Nm (0.7 m kg, 5.1 ft lb).

MAINTENANCE SPECIFICATIONS



	Dort to be tightened	Throad aiza	O'ty	Tightening torqu		que
	Part to be tightened	Thread size	Q'ty	Nm	m∙kg	ft⋅lb
\triangle	Rear wheel axle and nut	M20 × 1.5	1	125	12.5	90
\triangle	Driven sprocket and wheel hub	M8 × 1.25	6	42	4.2	30
\triangle	Nipple (spoke)	_	72	3	0.3	2.2
	Disc cover and rear brake caliper	M6 × 1.0	2	7	0.7	5.1
	Protector and rear brake caliper	M6 × 1.0	2	7	0.7	5.1
	Chain puller adjust bolt and locknut	M8 × 1.25	2	16	1.6	11
	Engine mounting:					
\triangle	Engine upper bracket and frame	M10 × 1.25	2	55	5.5	40
\triangle	Engine lower bracket and frame	M8 × 1.25	4	34	3.4	24
\triangle	Engine and frame (front)	M10 × 1.25	1	65	6.5	47
\triangle	Engine and frame (upper)	M10 × 1.25	1	55	5.5	40
\triangle	Engine and frame (lower)	M10 × 1.25	1	69	6.9	50
	Engine guard (lower)	M8 × 1.25	1	23	2.3	17
	Engine skid plate mounting	M6 × 1.0	6	10	1.0	7.2
	CDI unit bracket mounting	M6 × 1.0	1	10	1.0	7.2
\triangle	Pivot shaft and nut	M16 × 1.5	1	85	8.5	61
\triangle	Relay arm and swingarm	M14 × 1.5	1	80	8.0	58
\triangle	Relay arm and connecting rod	M14 × 1.5	1	80	8.0	58
\triangle	Connecting rod and frame	M14 × 1.5	1	80	8.0	58
\triangle	Rear shock absorber and frame	M10 × 1.25	1	56	5.6	40
\triangle	Rear shock absorber and relay arm	M10 × 1.25	1	53	5.3	38
\triangle	Rear frame and frame (upper)	M8 × 1.25	1	32	3.2	23
\triangle	Rear frame and frame (lower)	M8 × 1.25	2	29	2.9	21
	Swingarm and brake hose holder	M5 × 0.8	4	1	0.1	0.7
	Swingarm and patch	M4 × 0.7	4	2	0.2	1.4
	Drive chain tensioner mounting (upper)	M8 × 1.25	1	19	1.9	13
	Drive chain tensioner mounting (lower)	M8 × 1.25	1	20	2.0	14
	Chain support and swingarm	M6 × 1.0	3	7	0.7	5.1
\triangle	Seal guard and swingarm	M5 × 0.8	4	6	0.6	4.3
\triangle	Fuel tank mounting	M6 × 1.0	2	10	1.0	7.2
\triangle	Fuel tank and fuel cock	M6 × 1.0	2	7	0.7	5.1
	Fuel tank and seat set bracket	M6 × 1.0	1	7	0.7	5.1
	Fuel tank and hooking screw (fitting band)	M6 × 1.0	1	7	0.7	5.1
	Fuel tank and fuel tank bracket	M6 × 1.0	4	7	0.7	5.1
	Seat mounting	M8 × 1.25	2	23	2.3	17
	Side cover mounting	M6 × 1.0	2	7	0.7	5.1
	Air scoop and fuel tank	M6 × 1.0	6	4	0.4	2.9
	Air scoop and radiator panel (lower)	M6 × 1.0	2	4	0.4	2.9
	Front fender mounting	M6 × 1.0	4	7	0.7	5.1
	Rear fender mounting (front)	M6 × 1.0	2	7	0.7	5.1
	Rear fender mounting (rear)	M6 × 1.0	2	10	1.0	7.2
	Number plate	M6 × 1.0	1	7	0.7	5.1

NOTE:

 $[\]triangle$ - marked portion shall be checked for torque tightening after break-in or before each race.

MAINTENANCE SPECIFICATIONS |SPEC|



EC212300 ELECTRICAL

Item	Standard	Limit
Ignition system:		
Advancer type	Electrical	
C.D.I.:		
Magneto-model (stator)/manufacturer	5SF-00/YAMAHA	
Source coil 1 resistance (color)	720 ~ 1,080 Ω at 20 °C (68 °F) (Green – Brown)	
Source coil 2 resistance (color)	44 ~ 66 Ω at 20 °C (68 °F) (Black – Pink)	
Pickup coil resistance (color)	248 ~ 372 Ω at 20 °C (68 °F) (White – Red)	
CDI unit-model/manufacturer	5TA-00/YAMAHA	
Ignition coil:		
Model/manufacturer	5TA-00/DENSO	
Minimum spark gap	6 mm (0.24 in)	
Primary winding resistance	0.08 ~ 0.10 Ω at 20 °C (68 °F)	
Secondary winding resistance	4.6 ~ 6.8 kΩ at 20 °C (68 °F)	

Part to be tightened	Thread size	Q'tv	Tigh	ntening torque	
Fait to be lightened	Tilleau Size	Q ty	Nm	m⋅kg	ft⋅lb
Stator	M6 × 1.0	3	10	1.0	7.2
Rotor	$M12 \times 1.25$	1	56	5.6	40
Neutral switch	$M5 \times 0.8$	2	4	0.4	2.9

GENERAL TORQUE SPECIFICATIONS/ DEFINITION OF UNITS

SPEC




EC220001

GENERAL TORQUE SPECIFICATIONS

This chart specifies torque for standard fasteners with standard I.S.O. pitch threads. Torque specifications for special components or assemblies are included in the applicable sections of this book. To avoid warpage, tighten multi-fastener assemblies in a crisscross fashion, in progressive stages, until full torque is reached. Unless otherwise specified, torque specifications call for clean, dry threads. Components should be at room temperature.

A (Nut)	B (Bolt)		TORQUE SPECIFICAT			
(Nut)	(BOIL)	Nm	m•kg	ft•lb		
10 mm	6 mm	6	0.6	4.3		
12 mm	8 mm	15	1.5	11		
14 mm	10 mm	30	3.0	22		
17 mm	12 mm	55	5.5	40		
19 mm	14 mm	85	8.5	61		
22 mm	16 mm	130	13	94		

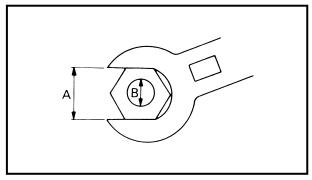

A: Distance between flats

B: Outside thread diameter

EC230000


DEFINITION OF UNITS

Unit	Read	Definition	Measure
mm	millimeter	10 ⁻³ meter	Length
cm	centimeter	10 ⁻² meter	Length
kg	kilogram	10 ³ gram	Weight
N	Newton	1 kg × m/sec ²	Force
Nm	Newton meter	$N \times m$	Torque
m • kg	Meter kilogram	$m \times kg$	Torque
Pa	Pascal	N/m²	Pressure
N/mm	Newton per millimeter	N/mm	Spring rate
L	Liter	_	Volume or capacity
cm ³	Cubic centimeter	_	Volume or capacity
r/min	Revolution per minute	_	Engine speed




LUBRICATION DIAGRAMS

- ① Oil delivery pipe
- ② Intake camshaft
- ③ Exhaust camshaft
- 4 Oil cleaner element
- ⑤ Oil pump
- 6 Main axle
- ⑦ Drive axle

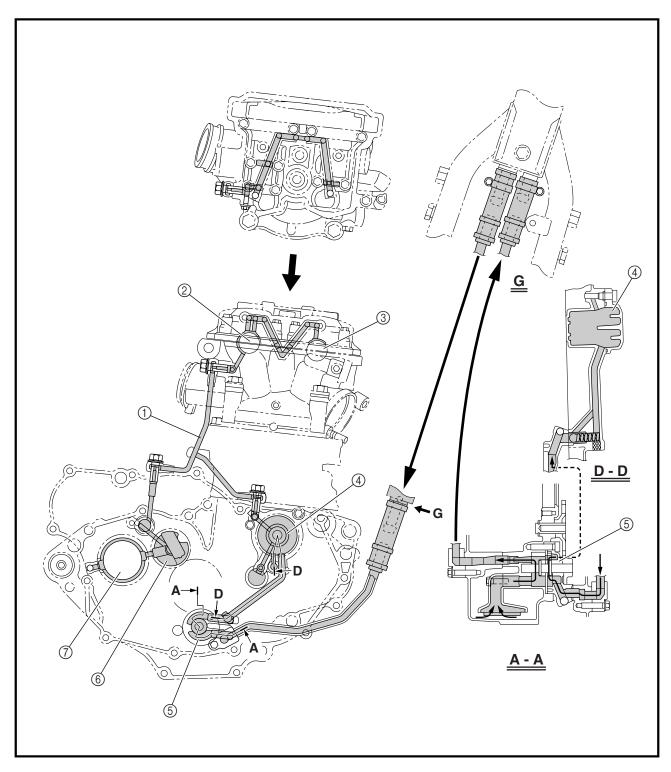

LUBRICATION DIAGRAMS

- ① Camshaft
- ② Connecting rod
- ③ Oil cleaner element
- ④ Crankshaft
- ⑤ Main axle
- ⑥ Drive axle
- Oil delivery pipe

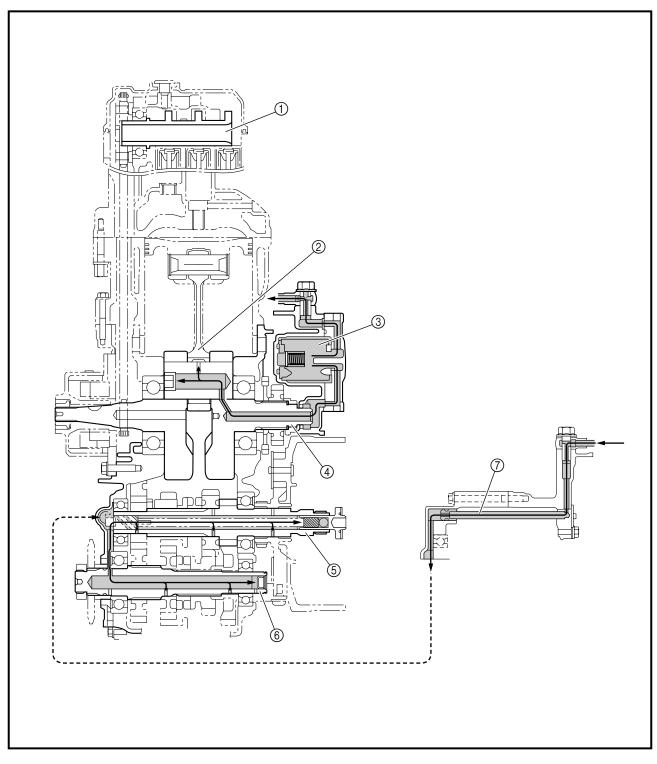


SPEC U

EC240000

- 1) Fuel tank breather hose
- ② Hot starter cable
- ③ Radiator hose 4
- (4) Cylinder head breather hose
- ⑤ Radiator hose 1
- (6) Oil tank breather hose
- (7) Hose guide
- ® Brake hose
- (9) "ENGINE STOP" button lead
- 1 Clamp
- (1) Sub wire harness
- ② TPS (throttle position sensor) lead
- (3) Neutral switch lead
- (14) Oil hose
- (5) Radiator breather hose
- (6) CDI magneto lead

- (7) Carburetor breather hose
- (8) Overflow hose
- A Pass the fuel tank breather hose between the handlebar and tension bar, then insert its end into the hole of the number plate.
- B Pass the hot starter cable between the cylinder head breather hose, oil tank breather hose and ignition coil, then on the outside of the left engine bracket
- © Pass the cylinder head breather hose on the outside of the radiator hose 1 and on the inside of the radiator pipe (radiator hose 4).

- D Fit the brake hose into the guides on the protector.
- E Fasten the "ENGINE STOP" button lead and sub wire harness to the frame with a plastic locking tie and cut off the tie end.
- Fasten the sub wire harness and hot starter cable to the frame at the white tape for the sub wire harness with a plastic locking tie and cut off the tie
- G Fasten the sub wire harness to the frame with a plastic locking tie and cut off the tie end.

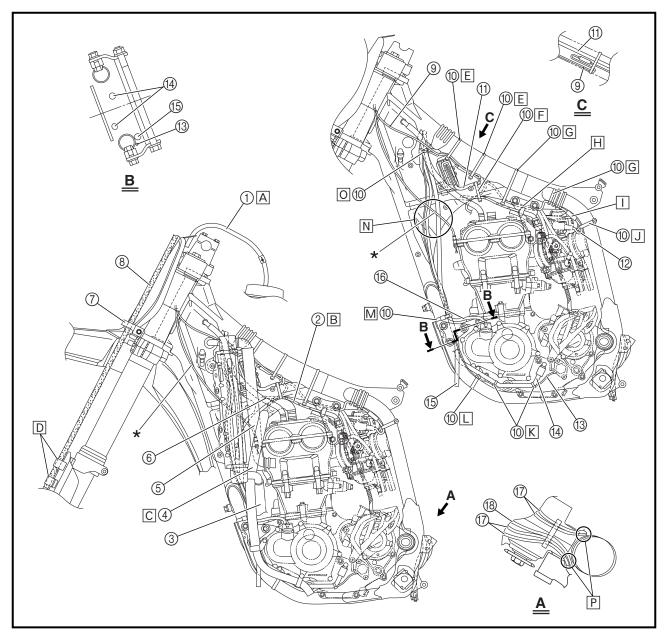




- ☐ Pass the sub wire harness between the engine brackets.
- ☐ Fasten the TPS lead to the frame with a plastic band.
- K Fasten the neutral switch lead and oil hose together with a plastic locking tie and cut off the tie end.
- ☐ Fasten the neutral switch lead to the frame with a plastic band.
- M Fasten the neutral switch lead, CDI magneto lead and radiator breather hose to the frame with a plastic band.

- N Pass the neutral switch lead, CDI magneto lead and radiator breather hose between the radiator and frame.
- Sasten the neutral switch lead and CDI magneto lead to the cable guide with a plastic locking tie and cut off the tie end.
- Pass the carburetor breather hoses and overflow hose so that all there hoses do not contact the rear shock absorber.
- Decompression cable (supplied for Europe and optional for other destinations)

 Pass the decompression cable under the middle radiator mounting boss and on the outside of the neutral switch lead, CDI magneto lead and radiator breather hose.

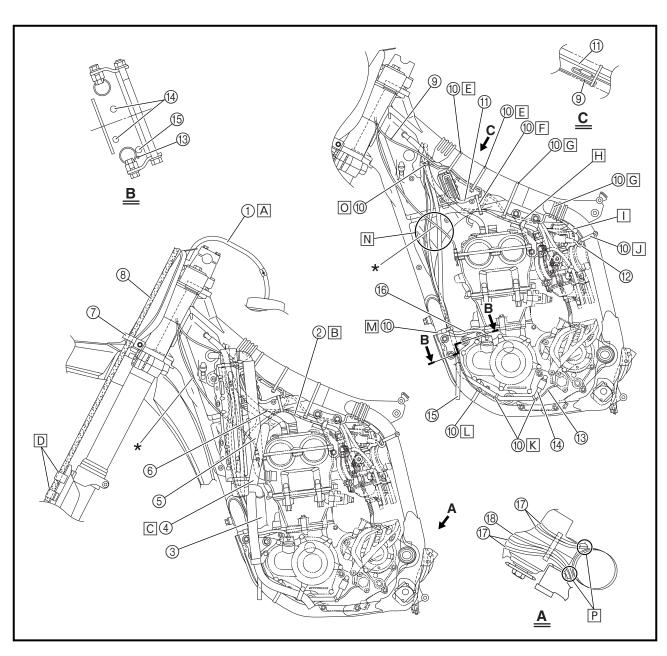




- 1 Cable holder
- ② CDI unit
- ③ Hot starter cable
- 4 Clutch cable
- (5) Throttle cable (return)
- 6 Throttle cable (pull)
- ⑦ Ignition coil
- (8) Radiator breather hose
- © Cylinder head breather hose
- (1) CDI unit bracket
- (2) CDI unit band


- A Fasten the grommet of the clutch cable with the cable holder.
- B Pass the hot starter cable, clutch cable and throttle cables through the cable guides.
- © Pass the hot starter cable over the top radiator mounting boss.
- D Pass the hot starter cable, clutch cable and throttle cables between the radiator and frame, then over the middle radiator mounting boss.
- E Pass the clutch cable and throttle cables on the outside of the ignition coil.
- F Pass the radiator breather hose at the rear of the radiator, on the left of the chassis, and then between the frame and radiator hose 4.

- G Insert the CDI unit band over the CDI unit bracket as far as possible.
- H First install the CDI unit and CDI unit band to the CDI unit bracket, then the CDI unit bracket to the frame.

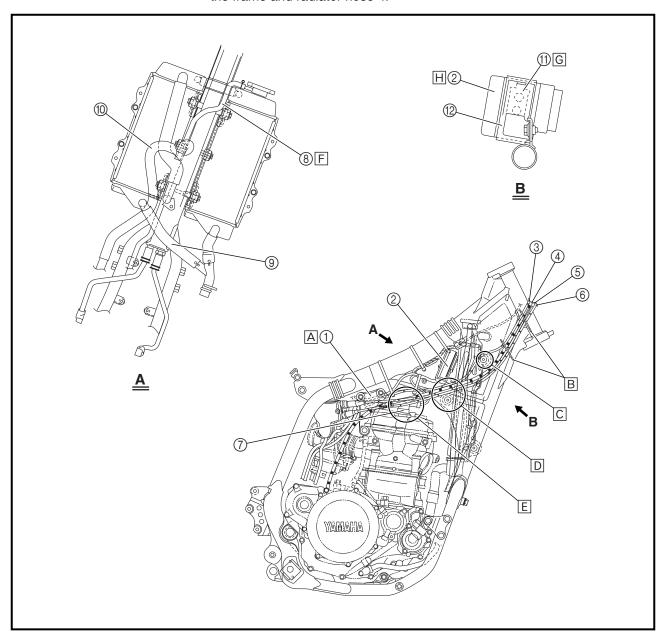




- 1) Master cylinder
- ② Brake hose holder
- ③ Brake hose
- A Install the brake hose so that its pipe portion directs as shown and lightly touches the projection on the caliper.
- B Pass the brake hose into the brake hose holders.
- © If the brake hose contacts the spring (rear shock absorber), correct its twist.
- Install the brake hose so that its pipe portion directs as shown and lightly touches the projection on the master cylinder.

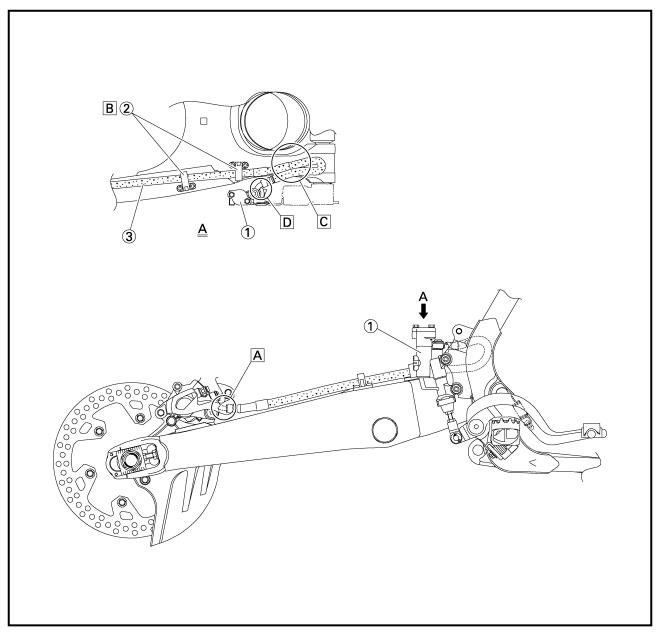

- 1) Throttle cable
- ② Fuel tank breather hose
- ③ Clamp
- 4 Clutch cable
- (5) Hot starter cable
- **(6) "ENGINE STOP" button lead**
- (7) Brake hose
- ® Hose guide

- A Fasten the "ENGINE STOP" button lead to the handlebar with the plastic band.
- B Pass the brake hose in front of the number plate.
- © Pass the hot starter cable, clutch cable and throttle cables through the cable guide.
- * Decompression cable (supplied for Europe and optional for other destinations)

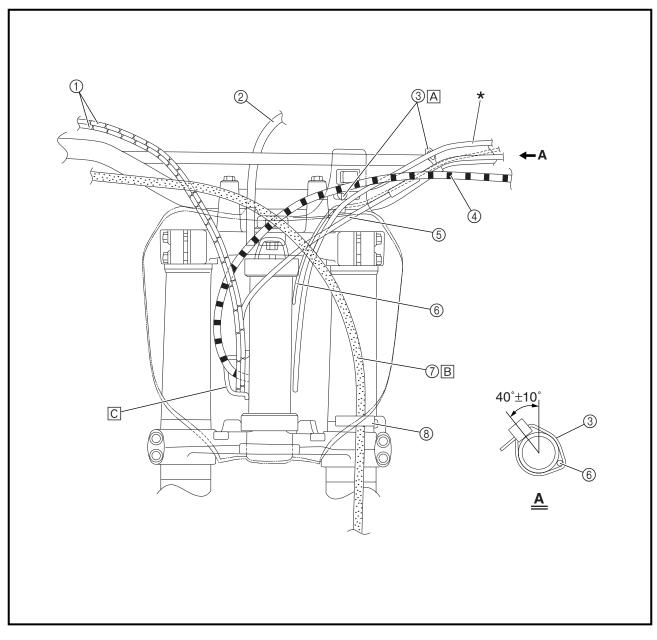

MAINTENANCE INTERVALS



FC300000

REGULAR INSPECTION AND ADJUSTMENTS MAINTENANCE INTERVALS

The following schedule is intended as a general guide to maintenance and lubrication. Bear in mind that such factors as weather, terrain, geographical location, and individual usage will alter the required maintenance and lubrication intervals. If you are a doubt as to what intervals to follow in maintaining and lubricating your machine, consult your Yamaha dealer.

			Every	Every		
Item	After	Every	third	fifth	As re-	Remarks
l item	break-in	race	(or	(or	quired	Hemarks
			500 km)	1,000 km)	-	
ENGINE OIL						
Replace	•			•		
OIL FILTER						
Clean	•			•		
VALVES						The american research has a solution
Check the valve clearances	•		•			The engine must be cold.
Inspect				•		Check the valve seats
Replace					•	and valve stems for wear.
VALVE SPRINGS						
Inspect				•		Check the free length and
Replace					•	the tilt.
VALVE LIFTERS						
Inspect				•		Check for scratches and
Replace					•	wear.
CAMSHAFTS					_	Inspect the camshaft sur-
Inspect						face.
Replace						Inspect the decompres-
neplace					_	
CAMCUAET OPPOCKETO						sion system
CAMSHAFT SPROCKETS						Check for wear on the
Inspect				•		teeth and for damage.
Replace					•	
PISTON					_	Inspect crack
Inspect				•	•	Inspect carbon deposits
Clean					•	and eliminate them.
Replace					•	
PISTON RING						
Inspect				•		Check ring end gap
Replace				•	•	
PISTON PIN						
Inspect				•		
Replace					•	
CYLINDER HEAD						Inspect carbon deposits
Inspect and clean				•		and eliminate them.
						Change gasket
CYLINDER						
Inspect and clean				•		Inspect score marks
Replace					•	Inspect wear
сьитсн						Inspect housing, friction
Inspect and adjust	•	•				plate, clutch plate and
Replace					•	spring
TRANSMISSION						- I - I - J
Inspect					•	
Replace bearing					•	
Ticpiace bearing						

MAINTENANCE INTERVALS



ltem	After break-in	Every race	Every third (or 500 km)	Every fifth (or 1,000 km)	As re- quired	Remarks
SHIFT FORK, SHIFT CAM, GUIDE BAR Inspect			,	,	•	Inspect wear
ROTOR NUT						
Retighten	•			•		
MUFFLER						
Inspect and retighten	•	•				
Clean				•		
Replace					•	* Whichever comes first
CRANK						
Inspect and clean				•	•	
CARBURETOR Inspect, adjust and clean	•	•				When using a high-pressure washer, make sure that water does not enter the accelerator pump.
SPARK PLUG						
Inspect and clean	•		•			
Replace					•	
DRIVE CHAIN						Use chain lube
Lubricate, slack, alignment Replace	•	•			•	Chain slack: 40 ~ 50 mm (1.6 ~ 2.0 in)
COOLING SYSTEM						,
Check coolant level and leakage	•	•				
Check radiator cap operation					•	
Replace coolant					•	Every two years
Inspect hoses		•				
OUTSIDE NUTS AND BOLTS Retighten	•	•				Refer to "STARTING AND BREAK-IN" section
AIR FILTER						in the CHAPTER 1.
Clean and lubricate						Use foam air-filter oil or
Replace		_			•	equivalent oil
OIL FILTER						
Replace						
OIL STRAINER (frame)				_		
Clean				•		
FRAME						
Clean and inspect						
FUEL TANK, COCK		_				
Clean and inspect						
BRAKES						
Adjust lever position and pedal height		•				
Lubricate pivot point	•	•				
Check brake disc surface	•					
Check fluid level and leakage	•	•				
Retighten brake disc bolts, caliper	•	•				
bolts, master cylinder bolts and union						
bolts						
Replace pads					•	
Replace brake fluid					•	Every one year
FRONT FORKS						
Inspect and adjust	•	•				
Replace oil	•			•		Suspension oil "01"
Replace oil seal					•	

MAINTENANCE INTERVALS



Item	After break-in	Every race	Every third (or	Every fifth (or	As re-	Remarks
			500 km)	1,000 km)	9000	
FRONT FORK OIL SEAL AND DUST			,	,		
SEAL						
Clean and lube	•	•				Lithium base grease
REAR SHOCK ABSORBER					(After	Ŭ
Inspect and adjust	•	•			rain ride)	
Lube			•		•	Molybdenum disulfide
Retighten	•	•				grease
CHAIN GUARD AND ROLLERS						
Inspect	•	•				
SWINGARM						Molybdenum disulfide
Inspect, lube and retighten	•	•				grease
RELAY ARM, CONNECTING ROD						Molybdenum disulfide
Inspect, lube and retighten	•	•				grease
STEERING HEAD						
Inspect free play and retighten	•	•				
Clean and lube				•		Lithium base grease
Replace bearing					•	3
TIRE, WHEELS						
Inspect air pressure, wheel run-out,	•	•				
tire wear and spoke looseness						
Retighten sprocket bolt	•	•				
Inspect bearings			•			
Replace bearings					•	
Lubricate			•			Lithium base grease
THROTTLE, CONTROL CABLE						Yamaha cable lube or
Check routing and connection	•	•				SAE 10W-30 motor oil
Lubricate	•	•				CAE 1000-00 motor on
HOT STARTER, CLUTCH LEVER						
Inspect free play					•	

PRE-OPERATION INSPECTION AND MAINTENANCE



EC320000

PRE-OPERATION INSPECTION AND MAINTENANCE

Before riding for break-in operation, practice or a race, make sure the machine is in good operating condition.


Before using this machine, check the following points.

GENERAL INSPECTION AND MAINTENANCE

Item	Routine	Page
Coolant	Check that coolant is filled up to the radiator filler cap. Check the cooling system for leakage.	P.3-5 ~ 9
Fuel	Check that a fresh gasoline is filled in the fuel tank. Check the fuel line for leakage.	P.1-13
Engine oil	Check that the oil level is correct. Check the crankcase and frame oil line for leakage.	P.3-13 ~ 17
Gear shifter and clutch	Check that gears can be shifted correctly in order and that the clutch operates smoothly.	P.3-9
Throttle grip/Housing	Check that the throttle grip operation and free play are correctly adjusted. Lubricate the throttle grip and housing, if necessary.	P.3-10
Brakes	Check the play of front brake and effect of front and rear brake.	P.3-24 ~ 30
Chain	Check chain slack and alignment. Check that the chain is lubricated properly.	P.3-31 ~ 33
Wheels	Check for excessive wear and tire pressure. Check for loose spokes and have no excessive play.	P.3-41 ~ 42
Steering	Check that the handlebar can be turned smoothly and have no excessive play.	P.3-42 ~ 43
Front forks and rear shock absorber	Check that they operate smoothly and there is no oil leakage.	P.3-33 ~ 40
Cables (wires)	Check that the clutch and throttle cables move smoothly. Check that they are not caught when the handlebars are turned or when the front forks travel up and down.	_
Muffler	Check that the muffler is tightly mounted and has no cracks.	_
Sprocket	Check that the driven sprocket tightening bolt is not loose.	P.3-31
Lubrication	Check for smooth operation. Lubricate if necessary.	P.3-44
Bolts and nuts	Check the chassis and engine for loose bolts and nuts.	P.1-18
Lead connectors	Check that the CDI magneto, CDI unit, and ignition coil are connected tightly.	P.1-6
Settings	Is the machine set suitably for the condition of the racing course and weather or by taking into account the results of test runs before racing? Are inspection and maintenance completely done?	P.7-1 ~ 21

ENGINE/COOLANT LEVEL INSPECTION



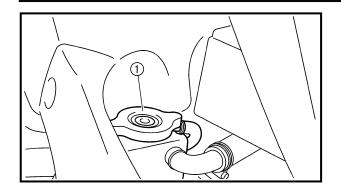

ENGINE

EC351011

COOLANT LEVEL INSPECTION


A WARNING

Do not remove the radiator cap (1), drain bolt and hoses when the engine and radiator are hot. Scalding hot fluid and steam may be blown out under pressure, which could cause serious injury.

When the engine has cooled, place a thick towel over the radiator cap, slowly rotate the cap counterclockwise to the detent. This procedure allows any residual pressure to escape. When the hissing sound has stopped, press down on the cap while turning counterclockwise and remove it.

CAUTION:

Hard water or salt water is harmful to the engine parts. You may use distilled water, if you can't get soft water.

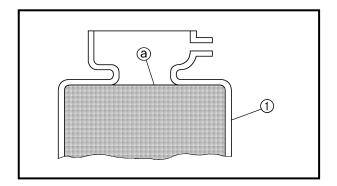

- 1. Place the machine on a level place, and hold it in an upright position.
- 2. Remove:
 - Radiator cap
- 3. Check:
 - Coolant level (a) Coolant level low \rightarrow Add coolant.
- ① Radiator

COOLANT REPLACEMENT



EC353011

COOLANT REPLACEMENT

WARNING

Do not remove the radiator cap when the engine is hot.

CAUTION:

Take care so that coolant does not splash on painted surfaces. If it splashes, wash it away with water.

- 1. Place a container under the engine.
- 2. Remove:
 - Engine guard (1)
 - Coolant drain bolt ②
- 3. Remove:
 - Radiator cap
 Drain the coolant completely.
- 4. Clean:
 - Cooling system
 Thoroughly flush the cooling system with clean tap water.
- 5. Install:
 - Copper washer New
 - Coolant drain bolt

№ 10 Nm (1.0 m · kg, 7.2 ft · lb)

- Engine guard
- Bolt (engine guard)

34 Nm (3.4 m ⋅ kg, 24 ft ⋅ lb)

- 6. Fill:
 - Radiator
 - Engine

To specified level.



Recommended coolant:


High quality ethylene glycol anti-freeze containing anti-corrosion for aluminum engine

Coolant ① and water (soft water) ② mixing ratio:

50 %/50 %

Coolant capacity:

1.2 L (1.06 Imp qt, 1.27 US qt)

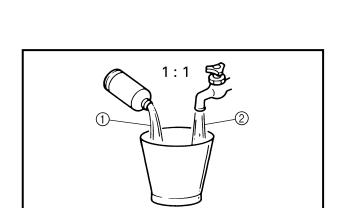

RADIATOR CAP INSPECTION



CAUTION:

- Do not mix more than one type of ethylene glycol antifreeze containing corrosion inhibitors for aluminum engine.
- Do not use water containing impurities or oil.

Handling notes of coolant:


The coolant is harmful so it should be handled with special care.

▲ WARNING

- When coolant splashes to your eye.
 Thoroughly wash your eye with water and see your doctor.
- When coolant splashes to your clothes.
 Quickly wash it away with water and then with soap.
- When coolant is swallowed.
 Quickly make him vomit and take him to a doctor.

7. Install:

- Radiator cap
 Start the engine and warm it up for a several minutes.
- 8. Check:
 - Coolant level Coolant level low → Add coolant.

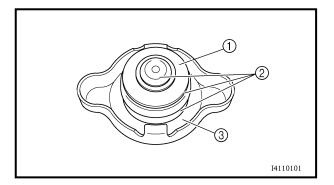


EC355000

RADIATOR CAP INSPECTION

- 1. Inspect:
 - Seal (radiator cap) (1)
 - Valve and valve seat ②
 Crack/damage → Replace.
 Exist fur deposits ③ → Clean or replace.

RADIATOR CAP OPENING PRESSURE INSPECTION/ COOLING SYSTEM INSPECTION



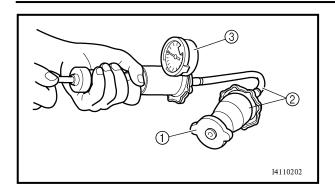

EC356001

RADIATOR CAP OPENING PRESSURE INSPECTION

- 1. Attach:
 - Radiator cap tester ① and adapter ②



Radiator cap tester: YU-24460-01/90890-01325 Adapter: YU-33984/90890-01352

NOTE:


Apply water on the radiator cap seal.

- ③ Radiator cap
 - 2. Apply the specified pressure.



Radiator cap opening pressure: 110 kPa (1.1 kg/cm², 15.6 psi)

- 3. Inspect:
 - Pressure Impossible to maintain the specified pressure for 10 seconds → Replace.

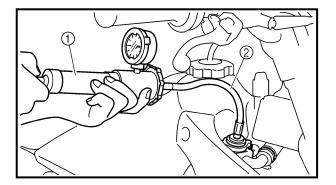

C357002

COOLING SYSTEM INSPECTION

- 1. Inspect:
 - Coolant level
- 2. Attach:
 - Radiator cap tester (1) and adapter (2)



Radiator cap tester: YU-24460-01/90890-01325 Adapter: YU-33984/90890-01352

3. Apply the specified pressure.



Standard pressure: 180 kPa (1.8 kg/cm², 25.6 psi)

CLUTCH ADJUSTMENT




NOTE:

- Do not apply pressure more than specified pressure.
- Radiator should be filled fully.



- Pressure Impossible to maintain the specified pressure for 10 seconds \rightarrow Repair.
- Radiator
- Radiator hose joint Coolant leakage → Repair or replace.
- Radiator hose Swelling \rightarrow Replace.

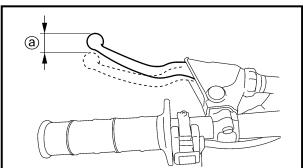

EC359020 CLUTCH ADJUSTMENT

- 1. Check:
 - Clutch lever free play (a) Out of specification \rightarrow Adjust.



Clutch lever free play @:

8 ~ 13 mm (0.31 ~ 0.51 in)




Clutch lever free play


Clutch lever free play adjustment steps:

- Loosen the locknut ①.
- Turn the adjuster ② until free play ③ is within the specified limits.
- Tighten the locknut.

NOTE:


- Make minute adjustment on the lever side using the adjuster 3.
- After adjustment, check proper operation of clutch lever.

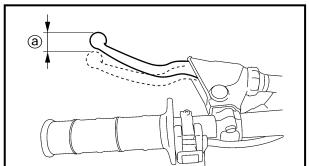

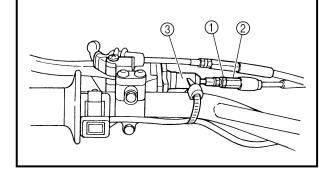

THROTTLE CABLE ADJUSTMENT/ THROTTLE LUBRICATION



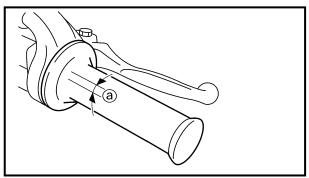

EC35A00

THROTTLE CABLE ADJUSTMENT

- 1. Check:
 - Throttle grip free play ⓐ
 Out of specification → Adjust.



Throttle grip free play @:

3 ~ 5 mm (0.12 ~ 0.20 in)



Throttle grip free play

Throttle grip free play adjustment steps:


- Slide the adjuster cover.
- Loosen the locknut 1.
- Turn the adjuster ② until the specified free play is obtained.
- Tighten the locknut.

NOTE:

Before adjusting the throttle cable free play, the engine idle speed should be adjusted.

A WARNING

After adjusting, turn the handlebar to right and left and make sure that the engine idling does not run faster.

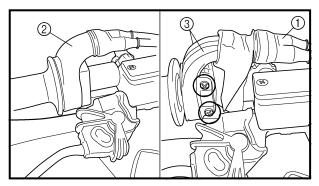

THROTTLE LUBRICATION


- 1. Remove:
 - Cover (throttle cable cap) ①
 - Cover (grip cap) ②
 - Throttle cable cap ③



- Lithium soap base grease
 On the throttle cable end (a).
- 3. Install:
 - Throttle cable cap
 - Screw (throttle cable cap)


🗽 4 Nm (0.4 m · kg, 2.9 ft · lb)

- Cover (grip cap)
- Cover (throttle cable cap)

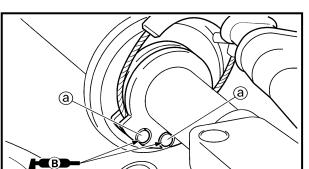

HOT STARTER LEVER ADJUSTMENT/ AIR FILTER CLEANING



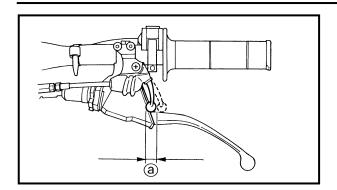

HOT STARTER LEVER ADJUSTMENT

- 1. Check:
 - Hot starter lever free play @ Out of specification \rightarrow Adjust.



Hot starter lever free play (a): 3 ~ 6 mm (0.12 ~ 0.24 in)

- 2. Adjust:
 - Hot starter lever free play

Hot starter lever free play adjustment steps:

- Loosen the locknut (1).
- Turn the adjuster 2 until free play 3 is within the specified limits.
- Tighten the locknut.

NOTE	: :				
After	adjustment,	check	proper	operation	of
hot st	arter				


AIR FILTER CLEANING

Proper air filter maintenance is the biggest key to preventing premature engine wear and damage.

					Ì										


Never run the engine without the air filter element in place; this would allow dirt and dust to enter the engine and cause rapid wear and possible engine damage.

- 1. Remove:
 - Seat
 - Fitting bolt ①
 - Washer ②
 - Air filter element ③
 - Filter guide 4

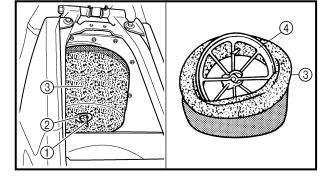

AIR FILTER CLEANING



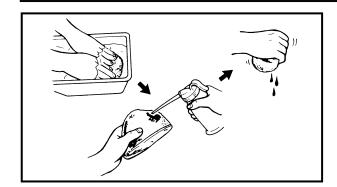

- 2. Clean:
 - Air filter element Clean them with solvent.

NOTE: _


After cleaning, remove the remaining solvent by squeezing the element.

CAUTION:

- Do not twist the element when squeezing the element.
- Leaving too much of solvent in the element may result in poor starting.
 - 3. Inspect:
 - Air filter element
 Damage → Replace.
 - Apply
 - Foam-air-filter oil or equivalent oil to the element.

NOTE: _


Squeeze out the excess oil. Element should be wet but not dripping.

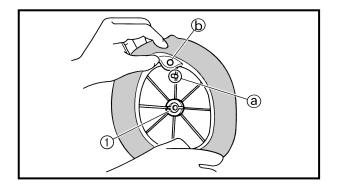

- 5. Install:
 - Filter guide ①

NOTE:


Align the projection ⓐ on filter guide with the hole ⓑ in air filter element.

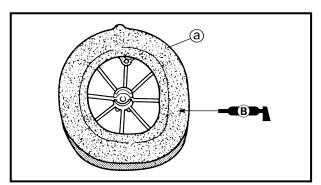

- 6. Apply:
 - Lithium soap base grease
 On the matching surface (a) on air filter element.

ENGINE OIL LEVEL INSPECTION



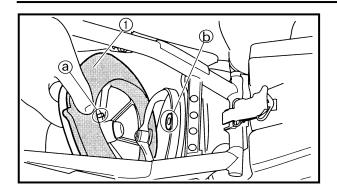

7. Install:

• Air filter element (1)

Washer

Fitting bolt

🗽 2 Nm (0.2 m · kg, 1.4 ft · l

NOTE:

Align the projection ⓐ on filter guide with the hole ⓑ in air filter case.

ENGINE OIL LEVEL INSPECTION

1. Stand the motorcycle on a level surface.

NOTE:


• When checking the oil level make sure that the motorcycle is upright.

• Place the motorcycle on a suitable stand.

A WARNING

Never remove the oil tank cap just after high speed operation. The heated oil could spurt out. causing danger. Wait until the oil cools down to approximately 70 °C (158 °F).

Idle the engine more than 3 minutes while keeping the motorcycle upright. Then stop the engine and inspect the oil level.

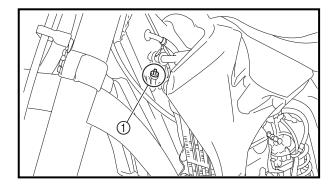



3. Remove:


• Oil tank cap ①


ENGINE OIL LEVEL INSPECTION



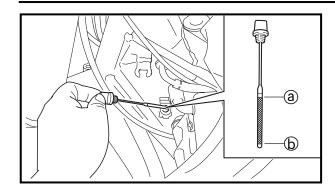

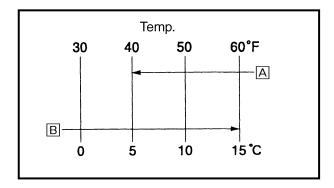

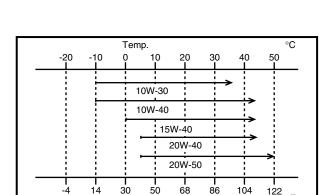

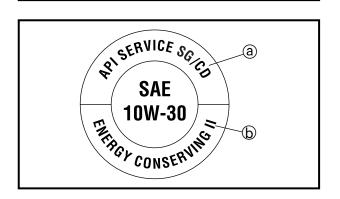

4. Inspect:

- Oil level
 - Oil level should be between maximum
 - (a) and minimum (b) marks.
 - Oil level low \rightarrow Add oil to proper level.

NOTE:

When inspecting the oil level, do not screw the oil level gauge into the oil tank. Insert the gauge lightly.

(For USA and CDN)



Recommended oil:

At 5 °C (40 °F) or higher A Yamalube 4 (20W-40) or SAE 20W-40 type SG motor oil (Non-Friction modified) At 15 °C (60 °F) or lower 🖪 Yamalube 4 (10W-30) or SAE 10W-30 type SG motor oil (Non-Friction modified) and/or Yamalube 4-R (15W-50)

CAUTION:

 Do not add any chemical additives. Engine oil also lubricates the clutch and additives could cause clutch slippage.

(Non-Friction modified)

• Do not allow foreign material to enter the crankcase.

(Except for USA and CDN)



Recommended oil:

Refer to the following chart for selection of oils which are suited to the atmospheric temperatures.

Recommended engine oil classification:

API STANDARD:

API "SG" or higher grade (Designed primarily for motorcycles)

CAUTION:

- Do not add any chemical additives or use oils with a grade of CD @ or higher.
- Do not use oils labeled "ENERGY CON-SERVING II" (b) or higher. Engine oil also lubricates the clutch and additives could cause clutch slippage.
- Do not allow foreign materials to enter the crankcase.

ENGINE OIL REPLACEMENT

INSP ADJ

5. Start the engine and let it warm up for several minutes.


	٠,				п												
			9														
	н																


When the oil tank is empty, never start the engine.


- 6. Idle the engine more than 10 seconds while keeping the motorcycle upright. Then stop the engine and add the oil to the maximum level.
- 7. Install:
 - Oil tank cap


ENGINE OIL REPLACEMENT

- 1. Start the engine and let it warm up for several minutes.
- 2. Stop the engine and place an oil pan under the drain bolt.
- 3. Remove:
 - Oil tank plug (1)
 - Oil filler cap ②
 - Drain bolt (with gasket) ③
 - Oil filter drain bolt (O-ring) (4)
 - Drain bolt (with gasket) ⑤
 - Drain bolt (with gasket) 6
 Drain the crankcase and oil tank (frame) of its oil.

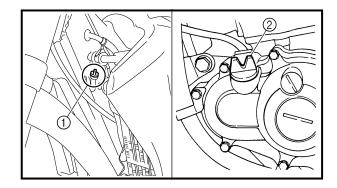

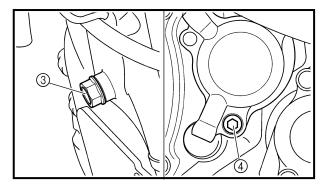

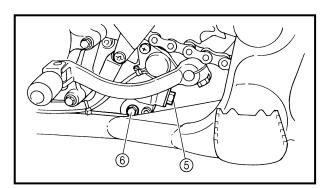


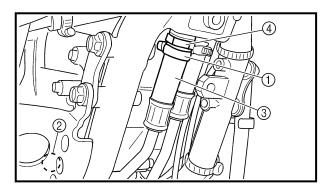


- 4. Remove:
 - Engine skid plate
 - Engine oil hose clamp (1)
 - Bolt (engine oil hose) ②
 - Engine oil hose ③
 - Oil strainer (frame) (4)
- 5. Clean:
 - Oil strainer (frame)

ENGINE OIL REPLACEMENT



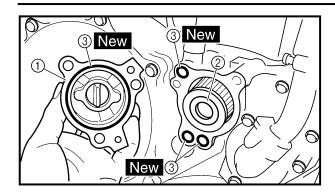

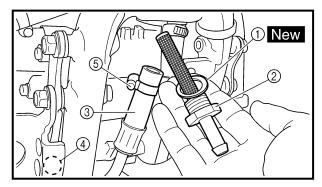

6. If the oil filter is to be replaced during this oil change, remove the following parts and reinstall them.

Replacement steps:

- Remove the exhaust pipe.
- Remove the oil filter cover ① and oil filter element ②.
- Check the O-rings ③, if cracked or damaged, replace them with a new one.
- Install the oil filter element and oil filter cover.



Oil filter cover:

10 Nm (1.0 m • kg, 7.2 ft • lb)

- 7. Install:
 - Plain washer (1)New
 - Oil strainer (frame) ②

90 Nm (9.0 m ⋅ kg, 65 ft ⋅ lb)

- Engine oil hose ③
- Bolt (engine oil hose) (4)

№ 10 Nm (1.0 m · kg, 7.2 ft · lb)

• Engine oil hose clamp ⑤

≥ 2 Nm (0.2 m ⋅ kg, 1.4 ft ⋅ lb)

- Engine skid plate
- 8. Install:
 - Gaskets New
 - Oil filter drain bolt

| **10 Nm (1.0 m ⋅ kg, 7.2 ft ⋅ lb)**|

Drain bolt (crankcase rear)

≥ 20 Nm (2.0 m · kg, 14 ft · lb)

Drain bolt (crankcase left)

№ 10 Nm (1.0 m · kg, 7.2 ft · lb)

Drain bolt (frame)

≥ 23 Nm (2.3 m · kg, 17 ft · lb)

- 9. Fill:
 - Crankcase



Oil quantity:

Total amount:

1.2 L (1.06 Imp qt, 1.27 US qt) Periodic oil change:

1.0 L (0.88 Imp qt, 1.06 US qt) With oil filter replacement:


1.1 L (0.97 Imp qt, 1.16 US qt)

- 10. Install:
 - Oil filler plug
- 11. Inspect:
 - Engine (for oil leaks)
 - Oil level

Refer to "ENGINE OIL LEVEL INSPECTION".

PILOT SCREW ADJUSTMENT



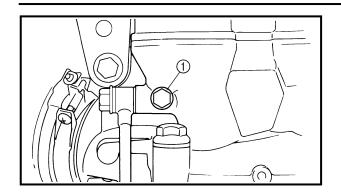

12. Check:

Oil pressure


Checking steps:

- Slightly loosen the oil gallery bolt ①.
- Start the engine and keep it idling until oil starts to seep from the oil gallery bolt. If no oil comes out after one minute, turn the engine off so it will not seize.
- Check oil passages, oil filter and oil pump for damage or leakage.
- Start the engine after solving the problem(s) and recheck the oil pressure.
- Tighten the oil gallery bolt to specification.



Oil gallery bolt:

10 Nm (1.0 m • kg, 7.2 ft • lb)

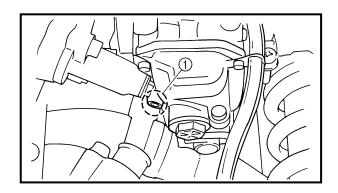

PILOT SCREW ADJUSTMENT

- 1. Adjust:
 - Pilot screw (1)

Adjusting steps:

NOTE:

To optimize the fuel flow at a smaller throttle opening, each machine's pilot screw has been individually set at the factory. Before adjusting the pilot screw, turn it in fully and count the number of turns. Record this number as the factory-set number of turns out.

- Turn in the pilot screw until it is lightly seated.
- Turn out the pilot screw by the factory-set number of turns.




Pilot screw:

2 turns out (example)

IDLE SPEED ADJUSTMENT/ VALVE CLEARANCE ADJUSTMENT



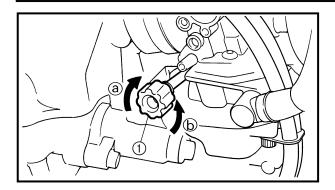

EC35M021

IDLE SPEED ADJUSTMENT

- 1. Start the engine and thoroughly warm it up.
- 2. Adjust:
 - Idle speed

Adjustment steps:

- Adjust the pilot screw.
 Refer to "PILOT SCREW ADJUSTMENT" section.
- Turn the throttle stop screw ① until the engine runs at the lowest possible speed.

To increase idle speed \rightarrow Turn the throttle stop screw ① in ②. To decrease idle speed \rightarrow Turn the throttle stop screw ① out ⑤.




Engine idling speed: 1,900 ~ 2,100 r/min

VALVE CLEARANCE ADJUSTMENT

NOTE:

- The valve clearance should be adjusted when the engine is cool to the touch.
- The piston must be at Top Dead Center (T.D.C.) on compression stroke to check or adjust the valve clearance.
 - 1. Remove:
 - Seat
 - Fuel tank
 Refer to "SEAT, FUEL TANK AND SIDE COVERS" section in the CHAPTER 4.
 - 2. Remove:
 - Carburetor
 Refer to "CARBURETOR" section in
 the CHAPTER 4.
 - Spark plug cap
 - Engine stay (upper)
 - Cylinder head cover
 Refer to "CAMSHAFTS" section in the CHAPTER 4.
 - 3. Remove:
 - Timing plug ①
 - Straight plug ②
 - O-ring

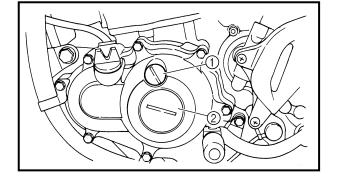




- 4. Check:
 - Valve clearance
 Out of specification → Adjust.





Valve clearance (cold): Intake valve:


0.10 ~ 0.15 mm (0.0039 ~ 0.0059 in) Exhaust valve:

0.20 ~ 0.25 mm (0.0079 ~ 0.0098 in)

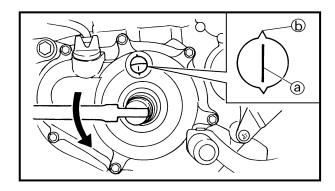

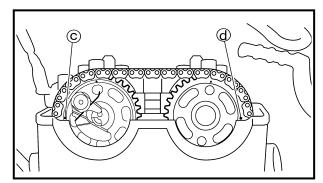

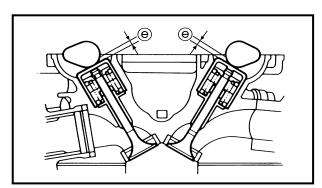

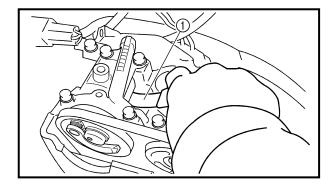

Checking steps:

- Turn the crankshaft counterclockwise with a wrench.
- Align the T.D.C. mark @ on the rotor with the align mark @ on the crankcase cover when piston is at T.D.C. on compression stroke.


NOTE:


In order to be sure that the piston is at Top Dead Center, the punch mark © on the exhaust camshaft and the punch mark © on the intake camshaft must align with the cylinder head surface, as shown in the illustration.


NOTE:


Record the measured reading if the clearance is incorrect.



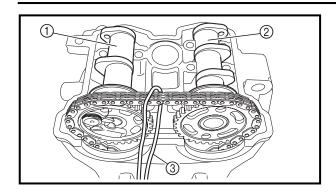

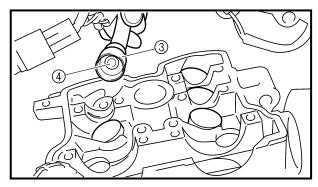

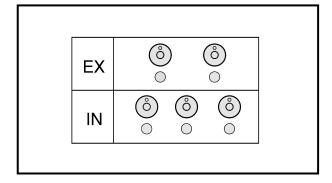

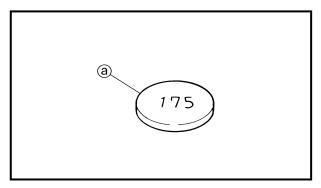

5. Adjust:

• Valve clearance

Adjustment steps:

- Loosen the timing chain tensioner cap bolt.
- Remove the timing chain tensioner and camshaft caps.

NOTE:

Remove the camshaft cap bolts in a crisscross pattern from the outside working inwards.

• Remove the camshaft (exhaust ① and intake ②).

NOTE: _

Attach a wire ③ to the timing chain to prevent it from falling into the crankcase.

• Remove the valve lifters (3) and the pads (4).

NOTE: .

- Place a rag in the timing chain space to prevent pads from falling into the crankcase.
- Identity each valve lifter and pad position very carefully so that they can be reinstalled in their original place.
- Select the proper pad using the pad selecting table.

Pad ı	ange	Pad Availability: 25 increments
No. 120	1.20 mm	Pads are available in
No. 240	2.40 mm	0.05 mm increments

NOTE:

The thickness ⓐ of each pad is indicated in hundreths of millimeters on the pad upper surface.



 Round off the last digit of the installed pad number to the nearest increment.

Last digit of pad number	Rounded value
0, 1 or 2	0
4, 5 or 6	5
8 or 9	10

EXAMPLE:

Installed pad number = 148 Rounded off value = 150

NOTE

Pads can only be selected in 0.05 mm increments.

 Locate the rounded-off value and the measured valve clearance in the chart "PAD SELECTION TABLE". The field where these two coordinates intersect shows the new pad number to use.

NOTE

Use the new pad number only as a guide when verifying the valve clearance adjustment.


• Install the new pads ⑤ and the valve lifters ⑥.

NOTE:

- Apply the engine oil on the valve lifters.
- Apply the molybdenum disulfide oil on the valve stem ends.
- Valve lifter must turn smoothly when rotated with a finger.
- Be careful to reinstall valve lifters and pads in their original place.
- Install the camshafts (exhaust and intake), the timing chain and the camshaft caps.
 Refer to "CAMSHAFTS" section in the CHAPTER 4.



Bolt (camshaft cap): 10 Nm (1.0 m • kg, 7.2 ft • lb)

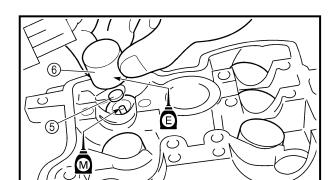



Install	the	timing chain tens	sioner.		
Refer	to	"CAMSHAFTS"	section	in	the
CHAP	TE	R 4.			

NOTE:		
	crankshaft counterclockwise sev	/-
eral turn	so that the installed parts settle	е

• Recheck the valve clearance.

into the right position.

- If the clearance is still incorrect, repeat all the clearance adjustment steps until the specified clearance is obtained.
- 6. Install:
 - All removed parts

o i iii o iii o ii o ii o ii o ii o ii
NOTE:
Install all removed parts in reversed order of
their removal. Note the following points.



INTAKE

MEASURED										IN	ISTA	LLEC) PAI	D NU	JMBE	R									
CLEARANCE	120	125	130	135	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240
0.00 ~ 0.04																							220		
0.05 ~ 0.09		120	125	130	135	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235
0.10 ~ 0.15										_					ANC										
0.16 ~ 0.20			135																					240	
0.21 ~ 0.25			140																						
0.26 ~ 0.30			145																			240			
0.31 ~ 0.35			150																						
0.36 ~ 0.40			155]				
0.41 ~ 0.45			160																						
0.46 ~ 0.50			165																						
0.51 ~ 0.55			170														240								
0.56 ~ 0.60			175																						
0.61 ~ 0.65			180																						
0.66 ~ 0.70			185											240											
0.71 ~ 0.75			190																						
0.76 ~ 0.80			195												VAI	VE	CLE	EAR	AN	CE (colo	:(k			
0.81 ~ 0.85			200).10					(00.0	-,-			
0.86 ~ 0.90			205																		75				
0.91 ~ 0.95			210						240							•				is 1					
0.96 ~ 1.00			215																				mm	1	
1.01 ~ 1.05			220				240													/ith					
1.06 ~ 1.10			225												F	Pad	num	nber	: (e)	kam	ple)				
1.11 ~ 1.15			230												F	Pad	No.	175	i = 1	.75	mm				
1.16 ~ 1.20		_	235	240											F	Pad	No.	185	i = 1	.85	mm				
1.21 ~ 1.25			240												•				•						
1.26 ~ 1.30		240																							
1.31 ~ 1.35	240																								

EXHAUST

MEASURED											_			_	MBE										
CLEARANCE	120	125	130	135	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240
0.00 ~ 0.04																							210		
0.05 ~ 0.09				120	125	130	135	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225
0.10 ~ 0.14																							220		
0.15 ~ 0.19		120	125	130	135	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235
0.20 ~ 0.25															ANC										
																							235	240	
0.31 ~ 0.35	130	135	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240		
0.36 ~ 0.40	135	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240			
0.41 ~ 0.45	140					165																			
0.46 ~ 0.50						170																			
0.51 ~ 0.55	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240						
0.56 ~ 0.60	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240							
0.61 ~ 0.65						185											240								
						190										240									
0.71 ~ 0.75						195									240										
0.76 ~ 0.80						200								240											
0.81 ~ 0.85	180	185	190	195	200	205	210	215	220	225	230	235	240												
0.86 ~ 0.90	185	190	195	200	205	210	215	220	225	230	235	240													
						215									VAL	.VE	CLE	EAR	ANG	CE (colo	1):			
						220									C).20	~ 0.	.25 ı	mm						
						225			240						Exa	mpl	e: Ir	nstal	led	is 1	75				
					_	230	_	240).32	mm	ı	
					_	235	240								Rep										
					235	240																pau			
			230															ber	•		. ,				
			235															175							
1.31 ~ 1.35	230	235	240												F	ad	No.	185	= 1	.85	mm				
1.36 ~ 1.40	235	240																							
1.41 ~ 1.45	240																								

CHASSIS/BRAKE SYSTEM AIR BLEEDING



EC360000

CHASSIS

FC361012

BRAKE SYSTEM AIR BLEEDING

A WARNING

Bleed the brake system if:

- The system has been disassembled.
- A brake hose has been loosened or removed.
- The brake fluid is very low.
- The brake operation is faulty.

A dangerous loss of braking performance may occur if the brake system is not properly bleed.

- 1. Remove:
 - Master cylinder cap
 - Diaphragm
 - Protector (rear brake)
- 2. Bleed:
 - Brake fluid
- A Front
- **B** Rear


Air bleeding steps:


- a. Add proper brake fluid to the reservoir.
- b. Install the diaphragm. Be careful not to spill any fluid or allow the reservoir to overflow.
- c. Connect the clear plastic tube ② tightly to the caliper bleed screw ①.
- d. Place the other end of the tube into a container.
- e. Slowly apply the brake lever or pedal several times.
- f. Pull the lever in or push down on the pedal. Hold the lever or pedal in position.
- g. Loosen the bleed screw and allow the lever or pedal to travel towards its limit.
- h. Tighten the bleed screw when the lever or pedal limit has been reached; then release the lever or pedal.



Bleed screw: 6 Nm (0.6 m • kg, 4.3 ft • lb)

i. Repeat steps (e) to (h) until of the air bubbles have been removed from the system.

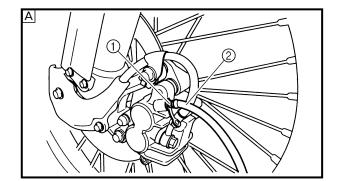

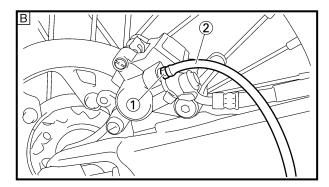

FRONT BRAKE ADJUSTMENT

N I	$\boldsymbol{\sim}$	_	┏.
IVI			┍ॱ


If bleeding is difficult, it may be necessary to let the brake fluid system stabilize for a few hours. Repeat the bleeding procedure when the tiny bubbles in the system have disappeared.


j. Add brake fluid to the level line on the reservoir.

▲ WARNING

Check the operation of the brake after bleeding the brake system.

- 3. Install:
 - Protector (rear brake)
 - Diaphragm
 - Master cylinder cap

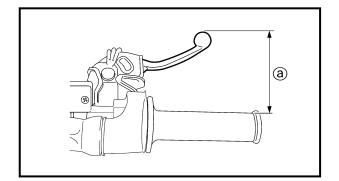

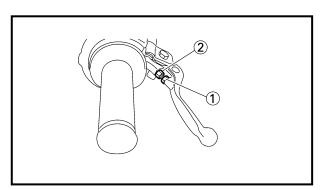

EC362040

FRONT BRAKE ADJUSTMENT

- 1. Check:
 - Brake lever position @

	Brake lever	position ⓐ:
Stand	ard position	Extent of adjustment
95 m	nm (3.74 in)	76 ~ 97 mm (2.99 ~ 3.82 in)

- 2. Remove:
 - Lever cover
- 3. Adjust:
 - Brake lever position

Brake lever position adjustment steps:

- Loosen the locknut (1).
- Turn the adjusting bolt ② until the lever position ③ is within specified position.
- Tighten the locknut.



Locknut:

5 Nm (0.5 m • kg, 3.6 ft • lb)


CAUTION:

Be sure to tighten the locknut, as it will cause poor brake performance.

- 4. Install:
 - Lever cover

REAR BRAKE ADJUSTMENT/ FRONT BRAKE PAD INSPECTION AND REPLACEMENT



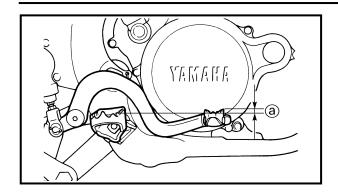


EC364002

REAR BRAKE ADJUSTMENT

- 1. Check:
 - Brake pedal height ⓐ
 Out of specification → Adjust.



Brake pedal height ⓐ: 5 mm (0.20 in)

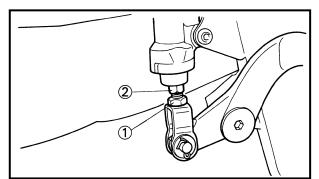


2. Adjust:

Brake pedal height


Pedal height adjustment steps:

- Loosen the locknut ①.
- Turn the adjusting nut ② until the pedal height ③ is within specified height.
- Tighten the locknut.

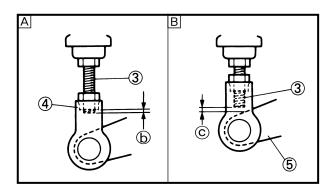

A WARNING


- Adjust the pedal height between the maximum A and the minimum B as shown. (In this adjustment the bolt 3 end b should protrude out of the threaded portion 4 but not be less than 2 mm (0.08 in) c away from the brake pedal 5).
- After the pedal height adjustment, make sure that the rear brake does not drag.

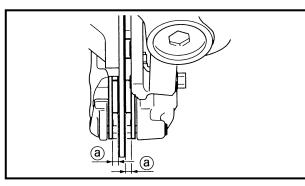

EC365080

FRONT BRAKE PAD INSPECTION AND REPLACEMENT

- 1. Inspect:
 - Brake pad thickness ⓐ
 Out of specification → Replace as a set.

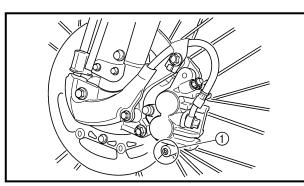

Brake pad thi	ickness @:
Standard	<limit></limit>
4.4 mm (0.17 in)	1.0 mm (0.04 in)


- 2. Replace:
 - Brake pad


Brake pad replacement steps:


• Remove the pad pin plug (1).


FRONT BRAKE PAD INSPECTION AND REPLACEMENT




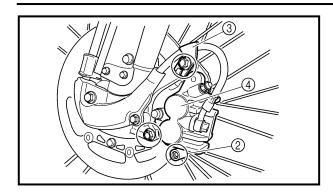

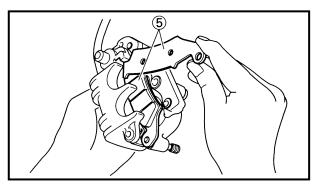

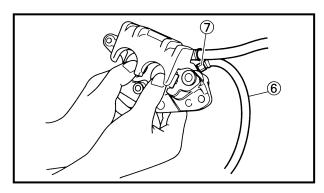

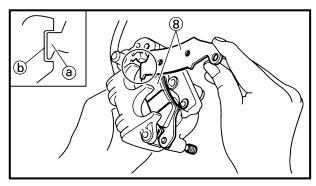

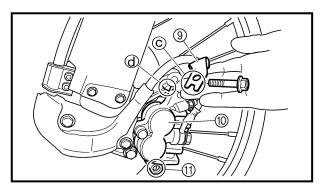

- Loosen the pad pin 2.
- Remove the brake hose holder ③ and caliper ④ from the front fork.
- Remove the pad pin and brake pads ⑤.
- Connect the transparent hose ⑥ to the bleed screw ⑦ and place the suitable container under its end.
- Loosen the bleed screw and push the caliper piston in.

CAUTION:

Do not reuse the drained brake fluid.

• Tighten the bleed screw.



Bleed screw: 6 Nm (0.6 m • kg, 4.3 ft • lb)

• Install the brake pads (8) and pad pin.

NOTE:

- Install the brake pads with their projections (a) into the caliper recesses (b).
- Temporarily tighten the pad pin at this point.
- Install the brake hose holder (9) and caliper (10) and tighten the pad pin (11).

NOTE:

Fit the brake hose holder cut © over the projection @ on the front fork and clamp the brake hose.




Bolt (caliper):
23 Nm (2.3 m • kg, 17 ft • lb)
Pad pin:

18 Nm (1.8 m • kg, 13 ft • lb)

REAR BRAKE PAD INSPECTION AND REPLACEMENT



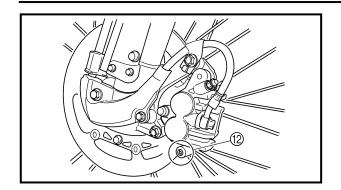

• Install the pad pin plug 12.




Pad pin plug: 3 Nm (0.3 m • kg, 2.2 ft • lb)

- 3. Inspect:
 - Brake fluid level
 Refer to "BRAKE FLUID LEVEL
 INSPECTION" section.
- 4. Check:
 - Brake lever operation

A softy or spongy feeling \rightarrow Bleed brake system.


Refer to "BRAKE SYSTEM AIR BLEEDING" section.

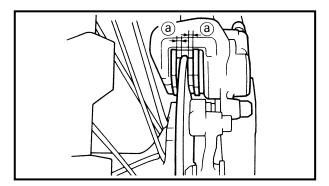


EC366060

REAR BRAKE PAD INSPECTION AND REPLACEMENT

- 1. Inspect:
 - Brake pad thickness ⓐ
 Out of specification → Replace as a set.

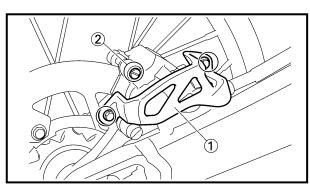


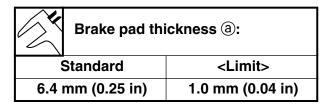

- 2. Replace:
 - Brake pad


Brake pad replacement steps:


- Remove the protector ① and pad pin plug
 ②.
- Loosen the pad pin ③.
- Remove the rear wheel 4 and caliper 5.
 Refer to "FRONT WHEEL AND REAR WHEEL" section in the CHAPTER 5.

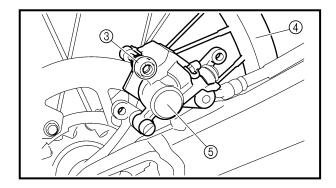



REAR BRAKE PAD INSPECTION AND REPLACEMENT




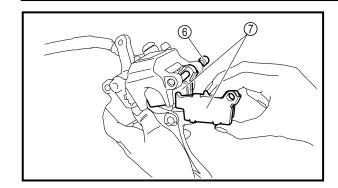

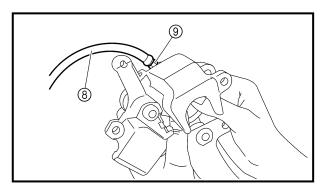

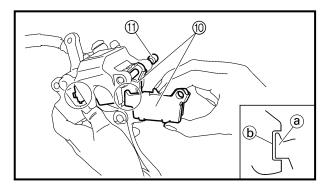

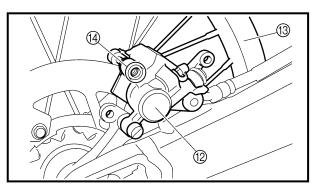

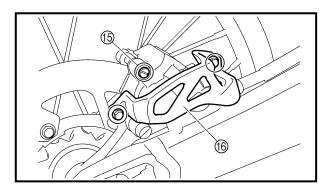

- Remove the pad pin (6) and brake pads (7).
- Connect the transparent hose (8) to the bleed screw (9) and place the suitable container under its end.
- Loosen the bleed screw and push the caliper piston in.

CAUTION:

Do not reuse the drained brake fluid.

• Tighten the bleed screw.



Bleed screw: 6 Nm (0.6 m • kg, 4.3 ft • lb)

• Install the brake pad (10) and pad pin (11).

NOTE:

- Install the brake pads with their projections (a) into the caliper recesses (b).
- Temporarily tighten the pad pin at this point.
- Install the caliper ② and rear wheel ③.

 Refer to "FRONT WHEEL AND REAR WHEEL" section in the CHAPTER 5.
- Tighten the pad pin (4).



Pad pin: 18 Nm (1.8 m • kg, 13 ft • lb)

• Install the pad pin plug (5) and protector (6).



Pad pin plug: 3 Nm (0.3 m • kg, 2.2 ft • lb) Bolt (protector): 7 Nm (0.7 m • kg, 5.1 ft • lb)

3 - 29

REAR BRAKE PAD INSULATOR INSPECTION/ BRAKE FLUID LEVEL INSPECTION



- 3. Inspect:
 - Brake fluid level
 Refer to "BRAKE FLUID LEVEL INSPECTION" section.
- 4. Check:
 - Brake pedal operation

A softy or spongy feeling \rightarrow Bleed brake system.

Refer to "BRAKE SYSTEM AIR BLEEDING" section.



REAR BRAKE PAD INSULATOR INSPECTION

- 1. Remove:
 - Brake pad
 Refer to "REAR BRAKE PAD INSPECTION AND REPLACEMENT" section.
- 2. Inspect:
 - Rear brake pad insulator ①
 Damage → Replace.



BRAKE FLUID LEVEL INSPECTION


- 1. Place the master cylinder so that its top is in a horizontal position.
- 2. Inspect:
 - Brake fluid level \rightarrow Fill up.
- a Lower level
- A Front
- **B** Rear




Recommended brake fluid: DOT #4

A WARNING


- Use only designated quality brake fluid to avoid poor brake performance.
- Refill with same type and brand of brake fluid; mixing fluids could result in poor brake performance.
- Be sure that water or other contaminants do not enter master cylinder when refilling.
- Clean up spilled fluid immediately to avoid erosion of painted surfaces or plastic parts.

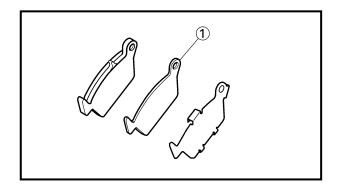

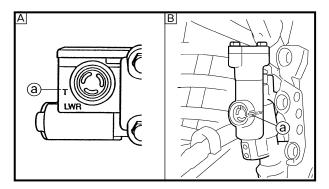

SPROCKETS INSPECTION/DRIVE CHAIN INSPECTION



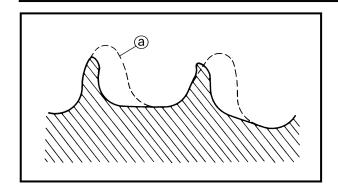


EC368000

SPROCKETS INSPECTION

- 1. Inspect:
 - Sprocket teeth ⓐ
 Excessive wear → Replace.

NOTE: .


Replace the drive, driven sprockets and drive chain as a set.

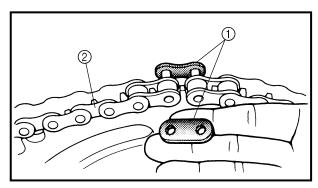

FC369002

DRIVE CHAIN INSPECTION


- 1. Remove:
 - Master link clip
 - Joint 1
 - Drive chain ②

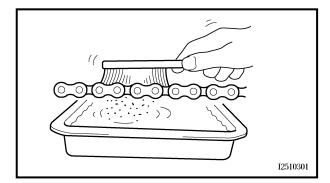

2. Clean:

• Drive chain

Place it in kerosene, and brush off as much dirt as possible. Then remove the chain from the kerosene and dry the chain.

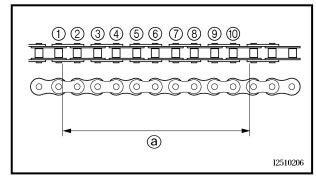


3. Measure:

Drive chain length (10 links) ⓐ
 Out of specification → Replace.



Drive chain length (10 links): Limit: 152.5 mm (6.00 in)

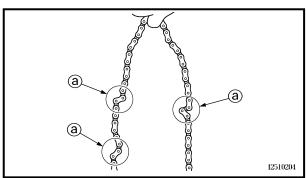

4. Check:


• Drive chain stiffness @


Clean and oil the chain and hold as illustrated.


Stiff \rightarrow Replace drive chain.

DRIVE CHAIN SLACK ADJUSTMENT



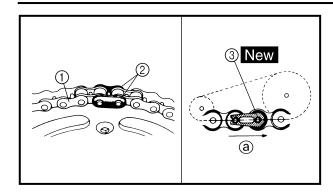

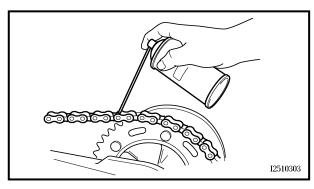

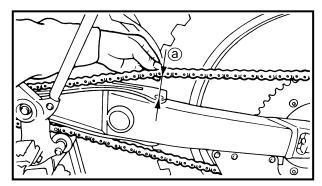

- 5. Install:
 - Drive chain ①
 - Joint ②
 - Master link clip ③



CAUTION:

Be sure to install the master link clip to the direction as shown.

- a Turning direction
 - 6. Lubricate:
 - Drive chain



Drive chain lubricant: SAE 10W-30 motor oil or suitable chain lubricants

DRIVE CHAIN SLACK ADJUSTMENT

- 1. Elevate the rear wheel by placing the suitable stand under the engine.
- 2. Check:
 - Drive chain slack ⓐ
 Above the seal guard installation bolt.

 Out of specification → Adjust.




Drive chain slack: 40 ~ 50 mm (1.6 ~ 2.0 in)

NOTE:

Before checking and/or adjusting, rotate the rear wheel through several revolutions and check the slack several times to find the tightest point. Check and/or adjust chain slack with rear wheel in this "tight chain" position.

FRONT FORK INSPECTION



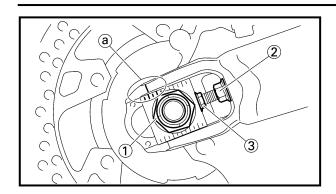

- 3. Adjust:
 - Drive chain slack

Drive chain slack adjustment steps:

- Loosen the axle nut ① and locknuts ②.
- Adjust chain slack by turning the adjusters
 3.

To tighten \rightarrow Turn adjuster $\ \ \, \ \ \,$ counterclockwise.

To loosen \rightarrow Turn adjuster 3 clockwise and push wheel forward.

 Turn each adjuster exactly the same amount to maintain correct axle alignment.
 (There are marks @ on each side of chain puller alignment.)

NOTE:

Turn the adjuster so that the chain is in line with the sprocket, as viewed from the rear.

CAUTION:

Too small chain slack will overload the engine and other vital parts; keep the slack within the specified limits.

• Tighten the axle nut while pushing down the drive chain.



Axle nut:


125 Nm (12.5 m • kg, 90 ft • lb)

•Tighten the locknuts.



Locknut:

16 Nm (1.6 m • kg, 11 ft • lb)

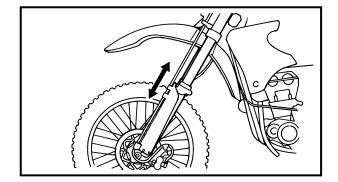

EC36C000

FRONT FORK INSPECTION


- 1. Inspect:
 - Front fork smooth action


Operate the front brake and stroke the front fork.


Unsmooth action/oil leakage \rightarrow Repair or replace.


FRONT FORK OIL SEAL AND DUST SEAL CLEANING/ FRONT FORK INTERNAL PRESSURE RELIEVING/ FRONT FORK REBOUND DAMPING FORCE ADJUSTMENT



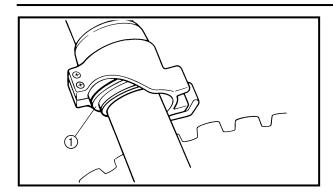

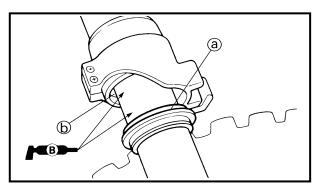

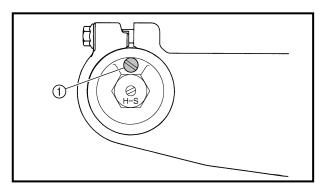

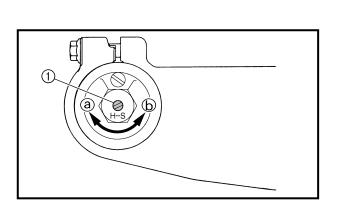

EC36D001

FRONT FORK OIL SEAL AND DUST SEAL CLEANING

- 1. Remove:
 - Protector
 - Dust seal (1)

NOTE:

Use a thin screw driver, and be careful not to damage the inner fork tube and dust seal.

- 2. Clean:
 - Dust seal (a)
 - Oil seal (b)

NOTF:

- Clean the dust seal and oil seal after every run.
- Apply the lithium soap base grease on the inner tube.

FRONT FORK INTERNAL PRESSURE RELIEVING

NOTE: .

If the front fork initial movement feels stiff during a run, relieve the front fork internal pressure.

- 1. Elevate the front wheel by placing a suitable stand under the engine.
- 2. Remove the air bleed screw ① and release the internal pressure from the front fork.
- 3. Install:
 - Air bleed screw

1 Nm (0.1 m ⋅ kg, 0.7 ft ⋅ lb)

EC36H002

FRONT FORK REBOUND DAMPING FORCE ADJUSTMENT

- 1. Adjust:
 - Rebound damping force
 By turning the adjuster (1).
- Stiffer $\textcircled{a} \rightarrow \mbox{Increase the rebound damping force. (Turn the adjuster <math>\textcircled{1}$ in.)
- Softer ⓑ → Decrease the rebound damping force. (Turn the adjuster ① out.)

FRONT FORK COMPRESSION DAMPING FORCE ADJUSTMENT



Extent of adjustment:			
Maximum	Minimum		
Fully turned in position	20 clicks out (from maximum position)		

• STANDARD POSITION:

This is the position which is back by the specific number of clicks from the fully turned-in position.




Standard position: 10 clicks out

CAUTION:

Do not force the adjuster past the minimum or maximum extent of adjustment. The adjuster may be damaged.

A WARNING

Always adjust each front fork to the same setting. Uneven adjustment can cause poor handling and loss of stability.

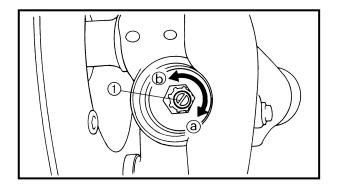

EC36J001

FRONT FORK COMPRESSION DAMPING FORCE ADJUSTMENT

- 1. Remove:
 - Rubber cap
- 2. Adjust:
 - Compression damping force By turning the adjuster ①.

Stiffer $\textcircled{a} \to \text{Increase}$ the compression damping force. (Turn the adjuster 1 in.)

Softer $\textcircled{b} \to \textbf{Decrease} \;\; \textbf{the compression} \;\; \textbf{damping force.} \;\; \textbf{(Turn the adjuster }\textcircled{1} \;\; \textbf{out.)}$

REAR SHOCK ABSORBER INSPECTION

Extent of adjustment:		
Maximum Minimum		
Fully turned in position	20 clicks out (from maximum position)	

• STANDARD POSITION:

This is the position which is back by the specific number of clicks from the fully turned-in position.



Standard position:

- 12 clicks out
- * 9 clicks out


CAUTION:

Do not force the adjuster past the minimum or maximum extent of adjustment. The adjuster may be damaged.

A WARNING

Always adjust each front fork to the same setting. Uneven adjustment can cause poor handling and loss of stability.

- 3. Install:
 - Rubber cap

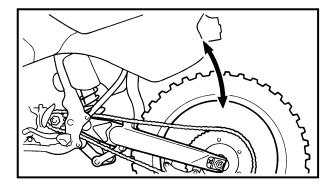

EC36K000

REAR SHOCK ABSORBER INSPECTION


- 1. Inspect:
 - Swingarm smooth action
 Abnormal noise/unsmooth action →
 Grease the pivoting points or repair the pivoting points.

Damage/oil leakage → Replace.

^{*} For EUROPE


REAR SHOCK ABSORBER SPRING PRELOAD ADJUSTMENT




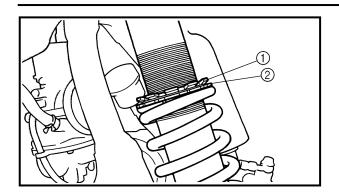

REAR SHOCK ABSORBER SPRING PRELOAD ADJUSTMENT

- 1. Elevate the rear wheel by placing the suitable stand under the engine.
- 2. Remove:
 - Rear frame
- 3. Loosen:
 - Locknut (1)
- 4. Adjust:
 - Spring preload
 By turning the adjuster ②.

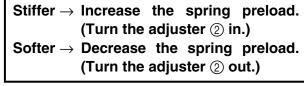

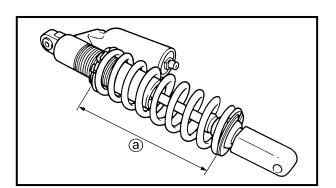

	Spring length (installed) @:			
Star	Standard length Extent of adjustmen			
249 mm (9.80 in)		240.5 ~ 258.5 mm		
*264 mm (10.39 in)		(9.47 ~ 10.18 in) *255.5 ~ 273.5 mm (10.06 ~ 10.77 in)		

^{*} For EUROPE

NOTE:

- Be sure to remove all dirt and mud from around the locknut and adjuster before adjustment.
- The length of the spring (installed) changes 1.5 mm (0.06 in) per turn of the adjuster.

CAUTION:

Never attempt to turn the adjuster beyond the maximum or minimum setting.

- 5. Tighten:
 - Locknut
- 6. Install:
 - Rear frame (upper)

32 Nm (3.2 m ⋅ kg, 23 ft ⋅ lb)

• Rear frame (lower)

≥ 29 Nm (2.9 m · kg, 21 ft · lb)


REAR SHOCK ABSORBER REBOUND DAMPING FORCE ADJUSTMENT





EC36N014


REAR SHOCK ABSORBER REBOUND DAMPING FORCE ADJUSTMENT

- 1. Adjust:
 - Rebound damping force
 By turning the adjuster ①.

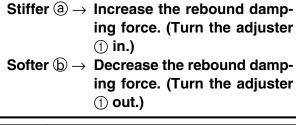

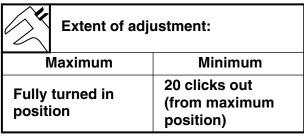

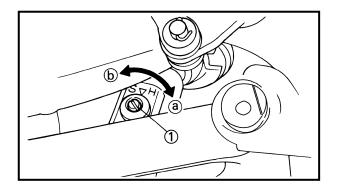

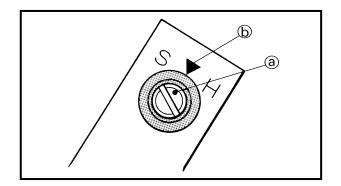

• STANDARD POSITION:

This is the position which is back by the specific number of clicks from the fully turned-in position. (Which align the punch mark ⓐ on the adjuster with the punch mark ⓑ on the bracket.)



Standard position:
About 12 clicks out
*About 13 clicks out


CAUTION:

Do not force the adjuster past the minimum or maximum extent of adjustment. The adjuster may be damaged.

^{*} For EUROPE

REAR SHOCK ABSORBER LOW COMPRESSION DAMPING FORCE ADJUSTMENT



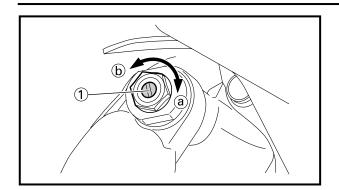

EC36c000


REAR SHOCK ABSORBER LOW COMPRESSION DAMPING FORCE ADJUSTMENT

- 1. Adjust:
 - Low compression damping force By turning the adjuster ①.

Stiffer $\textcircled{a} \rightarrow$	Increase the low compres-	
	sion damping force. (Turn	
	the adjuster ① in.)	
Softer $\textcircled{b} \rightarrow$	Softer $\textcircled{b} o Decrease$ the low compres	
	sion damping force. (Turn	

the adjuster ① out.)

Extent of adju	Extent of adjustment:		
Maximum	Minimum		
Fully turned in position	20 clicks out (from maximum position)		

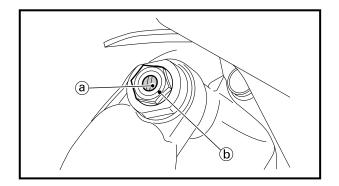

• STANDARD POSITION:

This is the position which is back by the specific number of clicks from the fully turned-in position. (Which align the punch mark ⓐ on the adjuster with the punch mark ⓑ on the high compression damping adjuster.)




CAUTION:

Do not force the adjuster past the minimum or maximum extent of adjustment. The adjuster may be damaged.

REAR SHOCK ABSORBER HIGH COMPRESSION DAMPING FORCE ADJUSTMENT



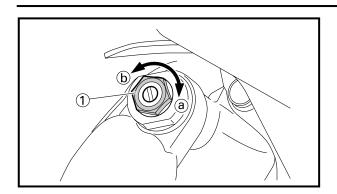

EC36d000


REAR SHOCK ABSORBER HIGH COMPRESSION DAMPING FORCE ADJUSTMENT

- 1. Adjust:
 - High compression damping force By turning the adjuster ①.

Stiffer $\textcircled{a} \rightarrow$	Increase the high compres-
	sion damping force. (Turn
	the adjuster ① in.)
Softer $\textcircled{b} \rightarrow$	Decrease the high compres-

Softer $\textcircled{0} \to \textbf{Decrease}$ the high compression damping force. (Turn the adjuster 1 out.)

O Company	Extent of adjustment:			
Maximum		Minimum		
Fully turned in position		2 turns out (from maximum position)		

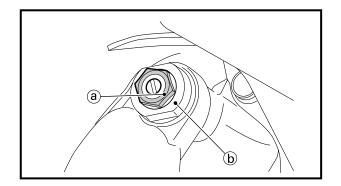

• STANDARD POSITION:

This is the position which is back by the specific number of turns from the fully turned-in position. (Which align the punch mark ⓐ on the adjuster with the punch mark ⓑ on the adjuster body.)



Standard position:
About 1-1/2 turns out
*About 1 turn out


CAUTION:

Do not force the adjuster past the minimum or maximum extent of adjustment. The adjuster may be damaged.

^{*} For EUROPE

TIRE PRESSURE CHECK/SPOKES INSPECTION AND TIGHTENING/WHEEL INSPECTION



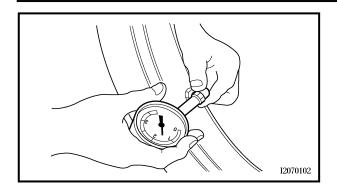

EC36Q000

TIRE PRESSURE CHECK


- 1. Measure:
 - Tire pressure
 Out of specification → Adjust.



Standard tire pressure: 100 kPa (1.0 kgf/cm², 15 psi)

NOTE:

- Check the tire while it is cold.
- Loose bead stoppers allow the tire to slip off its position on the rim when the tire pressure is low.
- A tilted tire valve stem indicates that the tire slips off its position on the rim.
- If the tire valve stem is found tilted, the tire is considered to be slipping off its position. Correct the tire position.

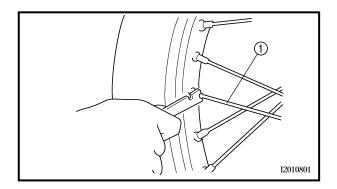


EC365003

SPOKES INSPECTION AND TIGHTENING

- 1. Inspect:
 - Spokes ①
 Bend/damage → Replace.
 Loose spoke → Retighten.
- 2. Tighten:

NOTE:

Be sure to retighten these spokes before and after break-in. After a practice or a race check spokes for looseness.

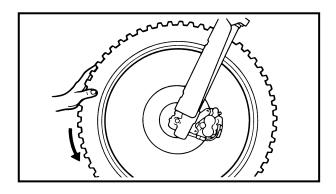


EC36T000

WHEEL INSPECTION

- 1. Inspect:
 - Wheel runout
 Elevate the wheel and turn it.
 Abnormal runout → Replace.


STEERING HEAD INSPECTION AND ADJUSTMENT



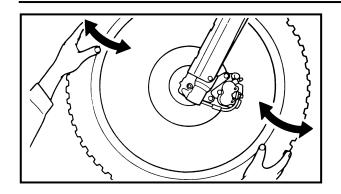

2. Inspect:

Bearing free play
 Exist play → Replace.

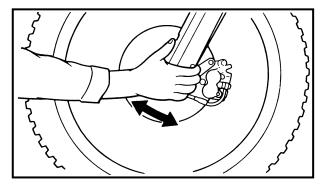

STEERING HEAD INSPECTION AND ADJUSTMENT

1. Elevate the front wheel by placing a suitable stand under the engine.


2. Check:

Steering shaft
 Grasp the bottom of the forks and gently rock the fork assembly back and forth.

Free play → Adjust steering head.




Steering smooth action
 Turn the handlebar lock to lock.
 Unsmooth action → Adjust steering ring nut.

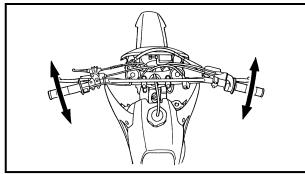




• Steering ring nut

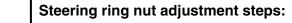

- Remove the number plate.
- Remove the handlebar and handle crown.
- Loosen the ring nut ① using the ring nut wrench ②.




Ring nut wrench: YU-33975/90890-01403

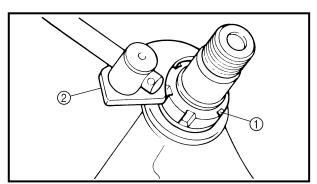

STEERING HEAD INSPECTION AND ADJUSTMENT



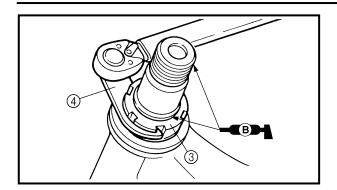

• Tighten the ring nut ③ using ring nut wrench ④.

NOTE:

- Apply the lithium soap base grease on the thread of the steering shaft.
- Set the torque wrench to the ring nut wrench so that they form a right angle.



Ring nut wrench: YU-33975/90890-01403



Ring nut (initial tightening): 38 Nm (3.8 m • kg, 27 ft • lb)

- Loosen the ring nut one turn.
- Retighten the ring nut using the ring nut wrench.

A WARNING

Avoid over-tightening.



Ring nut (final tightening): 7 Nm (0.7 m • kg, 5.1 ft • lb)

- Check the steering shaft by turning it lock to lock. If there is any binding, remove the steering shaft assembly and inspect the steering bearings.
- Install the handle crown ⑤, plain washer, steering shaft nut ⑥, handlebar ⑦, handlebar holder ⑧ and number plate ⑨.

NOTE:

- The upper handlebar holder should be installed with the punched mark @ forward.
- Insert the end of fuel breather hose ⑩ into the hole of the number plate.

CAUTION:

First tighten the bolts on the front side of the handlebar holder, and then tighten the bolts on the rear side.



Steering shaft nut:

145 Nm (14.5 m • kg, 105 ft • lb)
Handlebar upper holder:
28 Nm (2.8 m • kg, 20 ft • lb)
Pinch bolt (handle crown):
23 Nm (2.3 m • kg, 17 ft • lb)
Number plate:
7 Nm (0.7 m • kg, 5.1 ft • lb)



LUBRICATION



LUBRICATION


To ensure smooth operation of all components, lubricate your machine during setup, after break-in, and after every race.

- 1 All control cable
- 2 Clutch lever pivot
- 3 Shift pedal pivot
- 4 Footrest pivot
- (5) Throttle-to-handlebar contact
- 6 Drive chain
- 7 Tube guide cable winding portion
- (8) Throttle cable end
- 10 Hot starter cable end

- A Use Yamaha cable lube or equivalent on these areas.
- B Use SAE 10W-30 motor oil or suitable chain lubricants.
- C Lubricate the following areas with high quality, lightweight lithium-soap base grease.


CAUTION:

Wipe off any excess grease, and avoid getting grease on the brake discs.

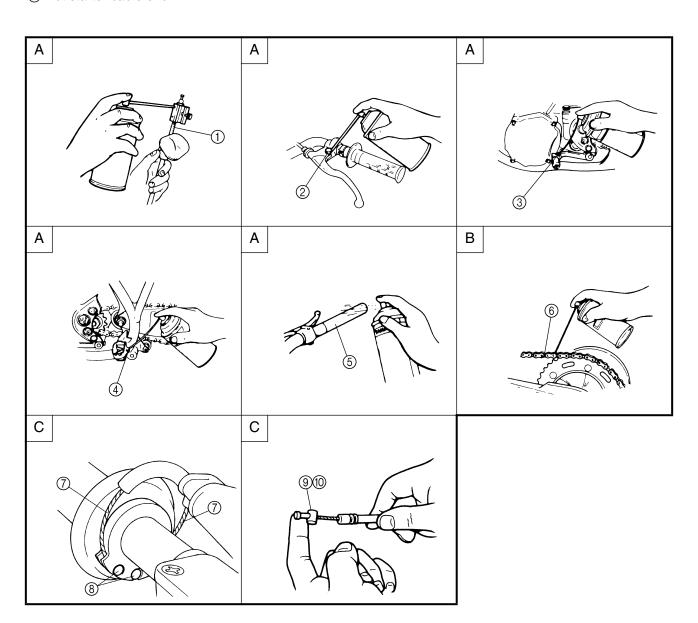

ELECTRICAL/SPARK PLUG INSPECTION



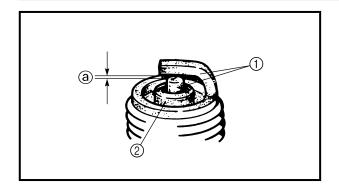

EC370000

ELECTRICAL

EC371001

SPARK PLUG INSPECTION

- 1. Remove:
 - Spark plug
- 2. Inspect:
 - Electrode ①
 Wear/damage → Replace.
 - Insulator color ②

Normal condition is a medium to light tan color.

Distinctly different color \rightarrow Check the engine condition.

NOTE:

When the engine runs for many hours at low speeds, the spark plug insulator will become sooty, even if the engine and carburetor are in good operating condition.

- 3. Measure:
 - Plug gap ⓐ
 Use a wire gauge or thickness gauge.


 Out of specification → Regap.



Spark plug gap:

0.7 ~ 0.8 mm (0.028 ~ 0.031 in)

4. Clean the plug with a spark plug cleaner if necessary.

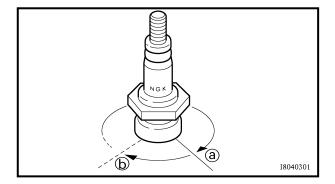

- 5. Tighten:
 - Spark plug


🗽 13 Nm (1.3 m · kg, 9.4 ft · lb)

NOTE: .

- Before installing a spark plug, clean the gasket surface and plug surface.
- Finger-tighten ⓐ the spark plug before torquing to specification ⓑ.


IGNITION TIMING CHECK



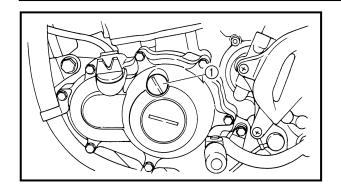

IGNITION TIMING CHECK

- 1. Remove:
 - Timing plug ①

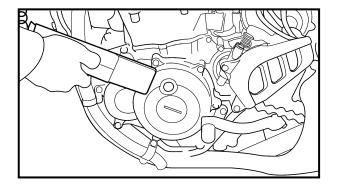


2. Attach:

- Timing light
- Inductive tachometer To the spark plug lead.



Timing light:
YM-33277-A/90890-03141
Inductive tachometer:
YU-8036-B
Engine tachometer:
90890-03113

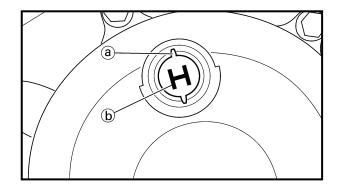

3. Check:

• Ignition timing

Checking steps:

• Start the engine and let it warm up. Let the engine run at the specified speed.



Engine speed: 1,900 ~ 2,100 r/min

 Visually check the stationary pointer ⓐ is within the firing range ⓑ on the rotor.
 Incorrect firing range → Check rotor and pickup assembly.

4. Install:


• Timing plug

SEAT, FUEL TANK AND SIDE COVERS

ENGINE

SEAT, FUEL TANK AND SIDE COVERS



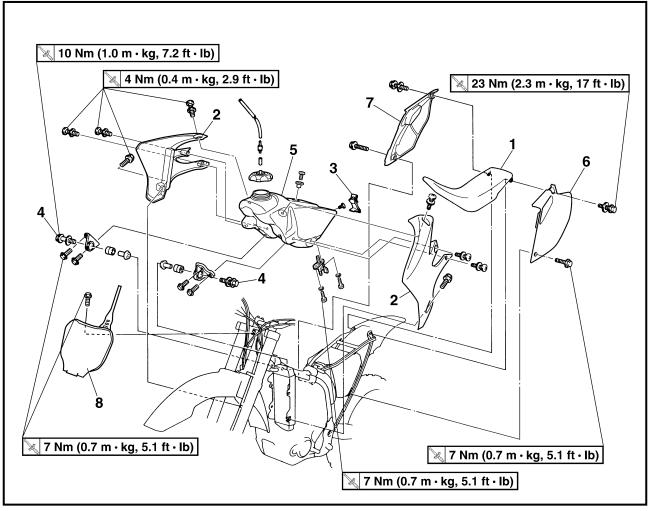

Extent of removal:


- ① Seat removal
- 3 Side covers removal
- ② Fuel tank removal
- 4 Number plate removal

Extent of removal	Order	Part name	Q'ty	Remarks
Preparation for removal		SEAT, FUEL TANK AND SIDE COVERS REMOVAL Turn the fuel cock to "OFF". Disconnect the fuel hose.		
① 1 3 1	1	Seat	1	
	2	Air scoop (left and right)	2	
2	3	Fitting band	1	Remove on fuel tank side.
	4	Bolt (fuel tank)	2	
	5	Fuel tank	1	
· •	6	Side cover (left)	1	
3	7	Side cover (right)	1	
4	8	Number plate	1	

4

SEAT, FUEL TANK AND SIDE COVERS



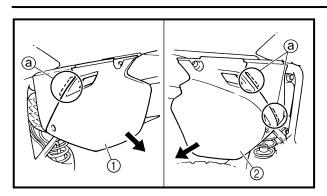

REMOVAL POINTS

Side cover

- 1. Remove:
 - Bolt (side cover)
 - Side cover (left) ①
 - Side cover (right) ②

NOTE: _


Draw the side cover downward to remove it because its claws ⓐ are inserted in the air filter case.

EXHAUST PIPE AND SILENCER

ENG

EXHAUST PIPE AND SILENCER



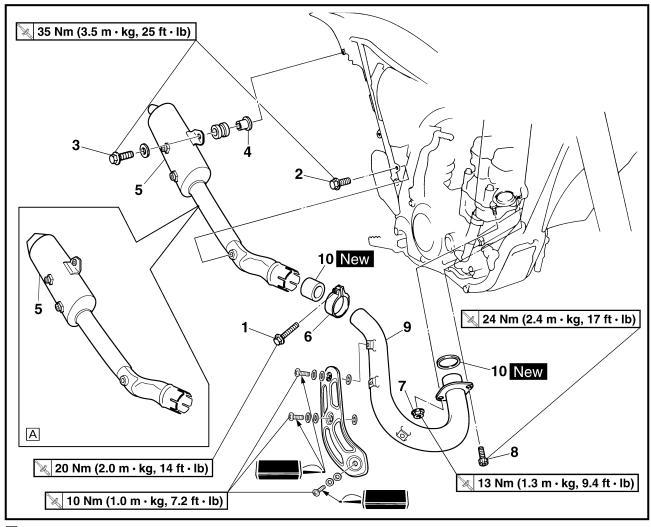


A Except for USA Extent of removal:

① Silencer removal

② Exhaust pipe removal

Extent of removal	Order	Part name	Q'ty	Remarks
		EXHAUST PIPE AND SILENCER REMOVAL		
Preparation for removal		Side cover (right)		Refer to "SEAT, FUEL TANK AND SIDE COVERS" section.
2	1	Bolt (clamp)	1	Only loosening.
 	2	Bolt [silencer (front)]	1	
	3	Bolt [silencer (rear)]	1	
I Ψ	4	Collar	1	
	5	Silencer	1	
1	6	Clamp	1	
1 • • • • • • • • • • • • • • • • • • •	7	Nut (exhaust pipe)	1	
	8	Bolt (exhaust pipe)	1	
2	9	Exhaust pipe	1	
1	10	Gasket	2	


EXHAUST PIPE AND SILENCER

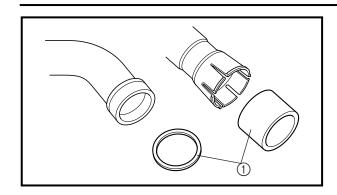

INSPECTION

Exhaust pipe and silencer

- 1. Inspect:
 - Gasket (1) Damage \rightarrow Replace.

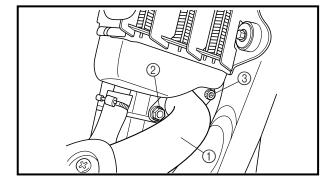

ASSEMBLY AND INSTALLATION

Exhaust pipe and silencer

- 1. Install:
 - Gasket New
 - Exhaust pipe 1
 - Nut (exhaust pipe) ②


🗽 13 Nm (1.3 m · kg, 9.4 ft · lb)

• Bolt (exhaust pipe) ③

№ 24 Nm (2.4 m · kg, 17 ft · lb)

NOTE: .

First, temporarily tighten the nut (exhaust pipe), then tighten the bolt (exhaust pipe) 20 Nm (2.0 m • kg, 14 ft • lb). After that, retighten the nut (exhaust pipe) 13 Nm (1.3 m • kg, 9.4 ft • lb) and then the bolt (exhaust pipe) 24 Nm (2.4 m • kg, 17 ft • lb).

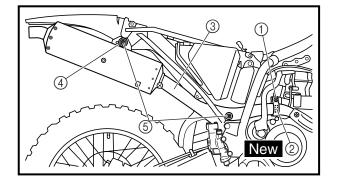

- 2. Install:
 - Clamp (1)

🗽 20 Nm (2.0 m · kg, 14 ft · lb)


Gasket ② New

- Silencer (3)
- Plain washer ④
- Bolt (silencer) (5)

35 Nm (3.5 m ⋅ kg, 25 ft ⋅ lb)





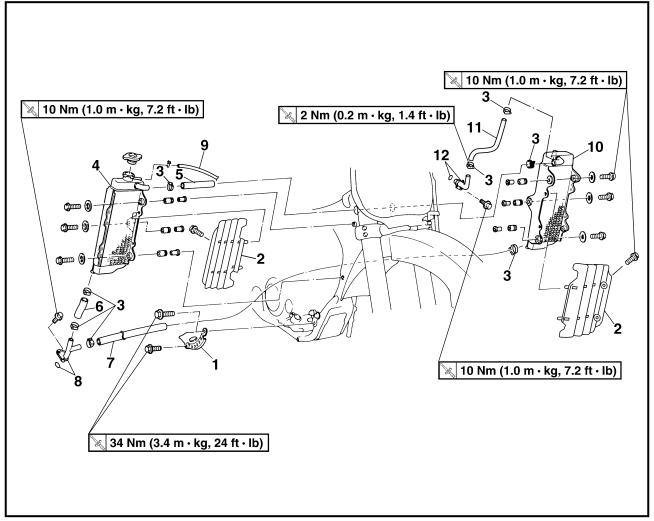

Extent of removal:

1 Radiator removal

Extent of removal	Order	Part name	Q'ty	Remarks
		RADIATOR REMOVAL		
Preparation for removal		Drain the coolant.		Refer to "COOLANT REPLACEMENT" section in the CHAPTER 3.
		Seat and fuel tank		Refer to "SEAT, FUEL TANK AND SIDE COVERS" section.
		Exhaust pipe		Refer to "EXHAUST PIPE AND SILENCER" section.
1	1	Engine guard	1	
	2	Panel	2	
	3	Clamp	8	
	4	Radiator (right)	1	
	5	Hose 2	1	
	6	Hose 3	1	
$oldsymbol{\Psi}$	7	Hose 4	1	
	8	Pipe 2/O-ring	1/1	
	9	Radiator breather hose	1	
	10	Radiator (left)	1	
	11	Hose 1	1	
↓	12	Pipe 1/O-ring	1/1	



EC456000


HANDLING NOTE

A WARNING

Do not remove the radiator cap when the engine and radiator are hot. Scalding hot fluid and steam may be blown out under pressure, which could cause serious injury.

When the engine has cooled, open the radiator cap by the following procedure:

Place a thick rag, like a towel, over the radiator cap, slowly rotate the cap counterclockwise to the detent. This procedure allows any residual pressure to escape. When the hissing sound has stopped, press down on the cap while turning counterclockwise and remove it.

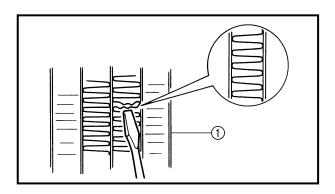


EC454000

INSPECTION

EC444100

Radiator

- 1. Inspect:
 - Radiator core ①
 Obstruction → Blow out with compressed air through rear of the radiator.
 Bent fin → Repair/replace.

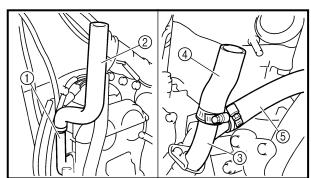

EC455000

ASSEMBLY AND INSTALLATION Radiator

- 1. Install:
 - Pipe 1 ①

№ 10 Nm (1.0 m · kg, 7.2 ft · lb)

• Hose 1 (2)

№ 2 Nm (0.2 m · kg, 1.4 ft · lb)

Pipe 2 ③

10 Nm (1.0 m · kg, 7.2 ft · lb)

• Hose 3 (4)

2 Nm (0.2 m ⋅ kg, 1.4 ft ⋅ lb)

• Hose 4 ⑤

2 Nm (0.2 m ⋅ kg, 1.4 ft ⋅ lb)


2. Install:

• Hose 2 (1)

🗽 2 Nm (0.2 m · kg, 1.4 ft · lb)


• Radiator (left) ②


10 Nm (1.0 m ⋅ kg, 7.2 ft ⋅ lb)

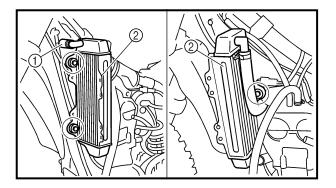

RADIATOR



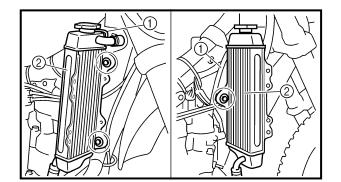

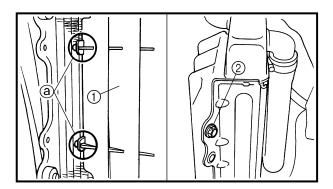

3. Install:

- Radiator breather hose ①
- Radiator (right) ②

🗽 10 Nm (1.0 m · kg, 7.2 ft · lb)

Refer to "CABLE ROUTING DIA-GRAM" section in the CHAPTER 2.

4. Install:


- Panel ①
- Bolt (radiator panel upper) ②

№ 10 Nm (1.0 m · kg, 7.2 ft · lb)

NOTE: .

Fit the hook ⓐ on the inner side first into the radiator.



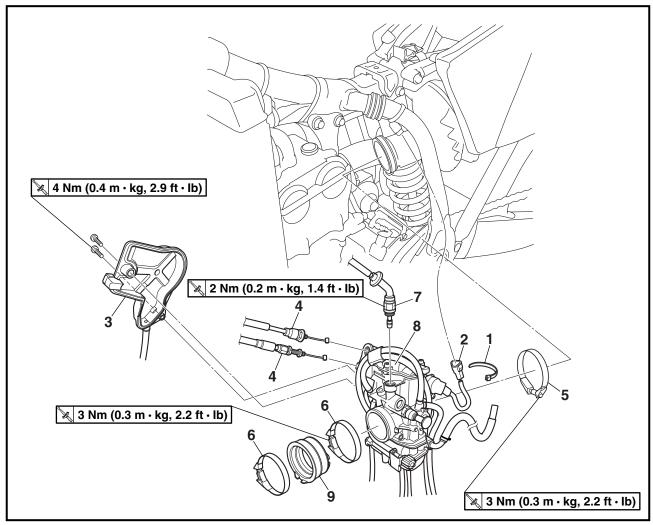


Extent of removal:

① Carburetor removal

Extent of removal	Order	Part name	Q'ty	Remarks
		CARBURETOR REMOVAL		
Preparation for removal		Fuel tank		Refer to "SEAT, FUEL TANK AND SIDE COVERS" section.
†	1	Band	1	
	2	TPS coupler	1	
	3	Throttle cable cover	1	
	4	Throttle cable	2	
1	5	Clamp (air cleaner joint)	1	Loosen the screw (air cleaner joint).
	6	Clamp (carburetor joint)	2	Loosen the screws (carburetor joint).
	7	Hot starter plunger	1	
	8	Carburetor	1	
	9	Carburetor joint	1	




CARBURETOR DISASSEMBLY

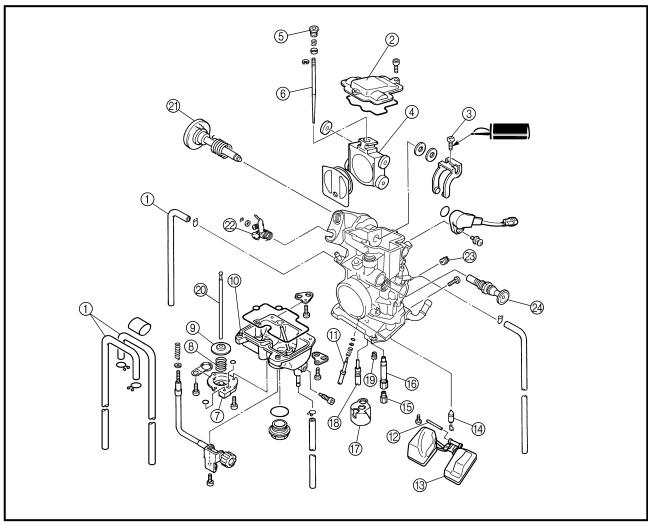

Extent of removal:


① Carburetor disassembly


Extent of removal	Order	Part name	Q'ty	Remarks
		CARBURETOR DISASSEMBLY		
↑	1	Breather hose	4	
	2	Valve lever housing cover	1	
	3	Screw (throttle shaft)	1	
	4	Throttle valve	1	
	(5)	Needle holder	1	
	6	Jet needle	1	
	7	Cover	1	
Ψ	8	Spring	1	
	9	Diaphragm (accelerator pump)	1	
	10	Float chamber	1	
	11)	Pilot screw	1	Refer to "REMOVAL POINTS".
	12	Float pin	1	
	13	Float	1	
\downarrow	(14)	Needle valve	1	

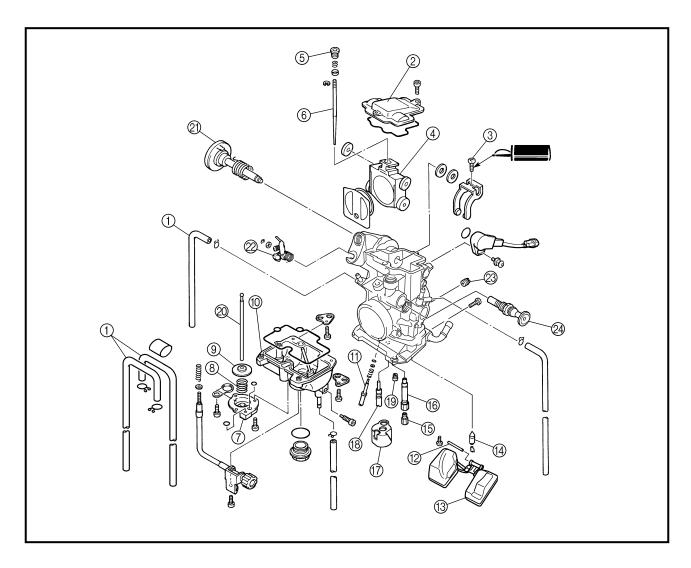

Extent of removal	Order	Part name	Q'ty	Remarks
†	15	Main jet	1	
	16	Needle jet	1	
	17	Spacer	1	
	18	Pilot jet	1	
	19	Starter jet	1	
Ψ	20	Push rod	1	Pull the push rod.
	21	Throttle shaft assembly	1	
	22	Push rod link lever assembly	1	
	23	Pilot air jet	1	
 	24	Cold starter plunger	1	



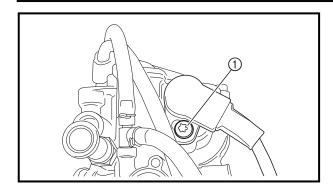

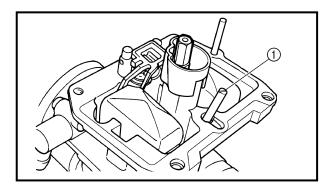

HANDLING NOTE

CAUTION:

Do not loosen the screws {TPS (throttle position sensor)} ① except when changing the TPS (throttle position sensor) due to failure because it will cause a drop in engine performance.


REMOVAL POINTS

Pilot screw

- 1. Remove:
 - Pilot screw 1

NOTE: _

To optimize the fuel flow at a small throttle opening, each machine's pilot screw has been individually set at the factory. Before removing the pilot screw, turn it in fully and count the number of turns. Record this number as the factory-set number of turns out.

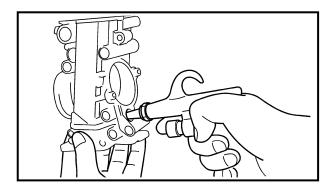

INSPECTION

Carburetor


- 1. Inspect:
 - Carburetor body
 Contamination → Clean.

NOTE:

- Use a petroleum based solvent for cleaning.
 Blow out all passages and jets with compressed air.
- Never use a wire.





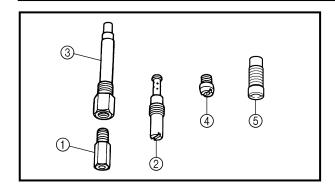


- 2. Inspect:
 - Main jet ①
 - Pilot jet ②
 - Needle jet (3)
 - Starter jet 4
 - Pilot air jet (5) $\mathsf{Damage} \to \mathsf{Replace}.$

Contamination \rightarrow Clean.


NOTE: _

- Use a petroleum based solvent for cleaning. Blow out all passages and jets with compressed air.
- Never use a wire.

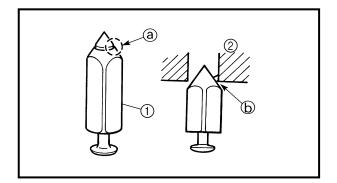

Needle valve

- 1. Inspect:
 - Needle valve 1
 - Valve seat (2) Grooved wear $\textcircled{a} \rightarrow \mathsf{Replace}$. Dust $\textcircled{b} \rightarrow \mathsf{Clean}$.

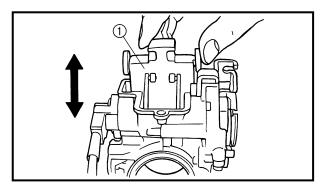

Throttle valve

- 1. Check:
 - Free movement Stick \rightarrow Repair or replace. Insert the throttle valve (1) into the carburetor body, and check for free movement.




Jet needle


- 1. Inspect:
 - Jet needle 1 Bends/wear \rightarrow Replace.
 - Clip groove Free play exists/wear \rightarrow Replace.
 - Clip position



Standard clip position: No.4 Groove

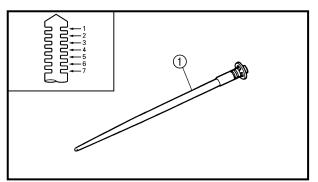



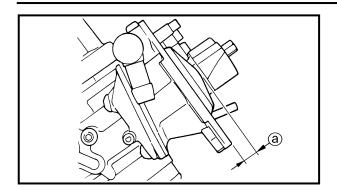

EC464511

Float height

- 1. Measure:
 - Float height ⓐ
 Out of specification → Adjust.



Float height: 8.0 mm (0.31 in)

Measurement and adjustment steps:

 Hold the carburetor in an upside down position.


NOTE:


- Slowly tilt the carburetor in the opposite direction, then take the measurement when the needle valve aligns with the float arm.
- If the carburetor is level, the weight of the float will push in the needle valve, resulting in an incorrect measurement.
- Measure the distance between the mating surface of the float chamber and top of the float using a vernier calipers.

R I	•		
IVI		┍.	

The float arm should be resting on the needle valve, but not compressing the needle valve.

- If the float height is not within specification, inspect the valve seat and needle valve.
- If either is worn, replace them both.
- If both are fine, adjust the float height by bending the float tab (b) on the float.
- Recheck the float height.

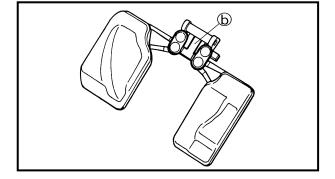

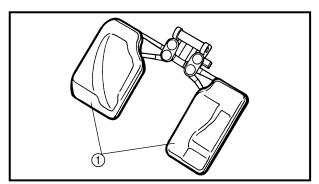


EC464600 Float

1. Inspect:

• Float (1)


Damage \rightarrow Replace.



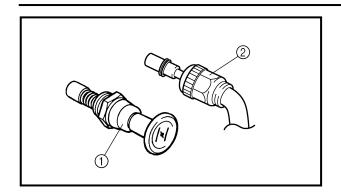

Starter plunger


- 1. Inspect:
 - Cold starter plunger (1)
 - Hot starter plunger 2Wear/damage \rightarrow Replace.

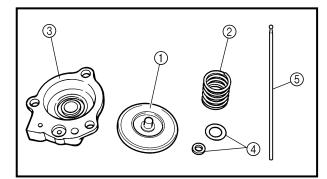


Accelerator pump

- 1. Inspect:
 - Diaphragm (accelerator pump) ①
 - Spring ②
 - Cover ③
 - O-ring (4)
 - Push rod ⑤

Tears (diaphragm)/damage \rightarrow Replace. Dirt \rightarrow Clean.

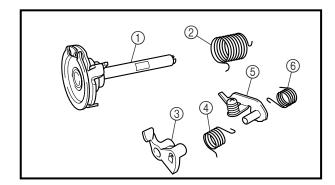


- 2. Inspect:
 - Throttle shaft ①
 - Spring ②
 - Lever 1 ③
 - Spring 1 ④
 - Lever 2 (5)
 - Spring 2 ⑥
 Dirt → Clean.

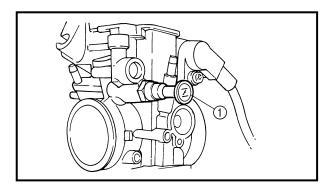

ASSEMBLY AND INSTALLATION


Carburetor

- 1. Install:
 - Cold starter plunger ①

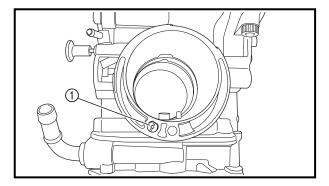

- 2. Install:
 - Pilot air jet ①



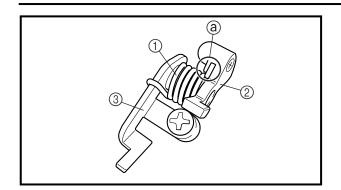


3. Install:

• Spring 1 ①

• Lever 1 ②
To lever 2 ③.


NOTE:

Make sure the spring 1 fits on the stopper ⓐ of the lever 2.

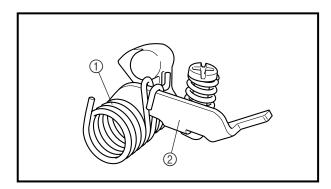

4. Install:

• Spring 2 ①
To lever 2 ②.

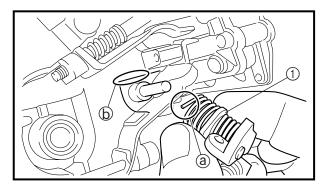


5. Install:

• Push rod link lever assembly ①

NOTE: _


Make sure the stopper ⓐ of the spring 2 fits into the recess ⓑ in the carburetor.

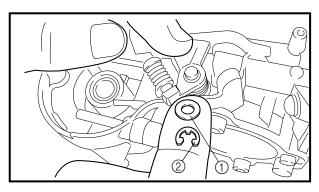

6. Install:

• Plain washer ①

• Circlip ②

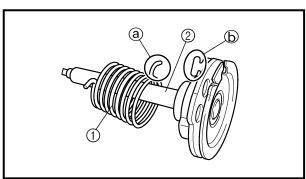


7. Install:


• Spring ①
To throttle shaft ②.


NOTE: _


Install the bigger hook ⓐ of the spring fits on the stopper ⓑ of the throttle shaft pulley.




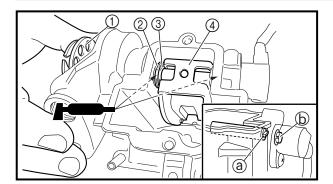

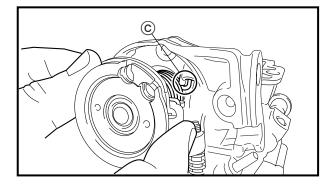

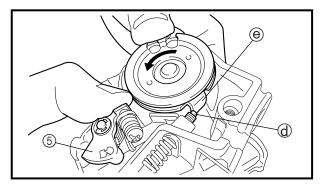

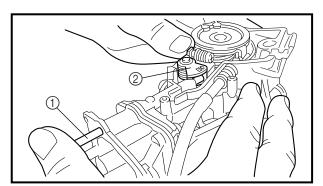

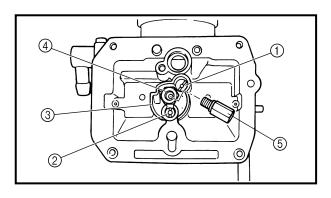

- 8. Install:
 - Throttle shaft assembly ①
 - Plain washer (metal) ②
 - Plain washer (resin) ③
 - Valve lever 4

NOTE: .

- Apply the fluorochemical grease on the bearings.
- Fit the projection ⓐ on the throttle shaft assembly into the slot ⓑ in the TPS (throttle position sensor).
- Make sure the stopper © of the spring fits into the recess in the carburetor.
- Turn the throttle shaft assembly left while holding down the lever 1 ⑤ and fit the throttle stop screw tip ⓓ to the stopper ⑥ of the throttle shaft assembly pulley.

9. Install:

• Push rod ①

NOTE:


While holding down the lever 1 ②, insert the push rod farthest into the carburetor.


10. Install:

- Starter jet (1)
- Pilot jet ②
- Spacer (3)
- Needle jet 4
- Main jet (5)





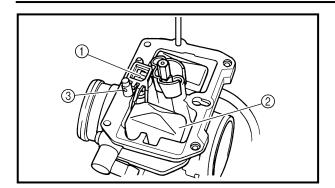

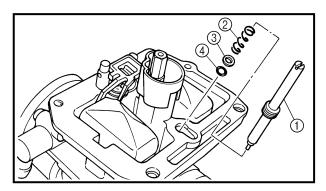

11. Install:

- Needle valve 1)
- Float ②
- Float pin ③

NOTE:

- After installing the needle valve to the float, install them to the carburetor.
- Check the float for smooth movement.

12. Install:

- Pilot screw 1
- Spring ②
- Washer ③
- O-ring (4)


Note the following installation points:


- Turn in the pilot screw until it is lightly seated.
- Turn out the pilot screw by the number of turns recorded before removing.



Pilot screw:

2 turns out (example)

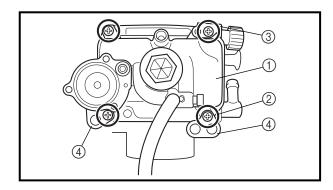

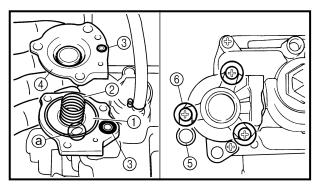

13. Install:

- O-ring
- Float chamber ①
- Screw (float chamber) ②
- Cable holder (throttle stop screw cable)
 ③
- Hose holder (carburetor breather hose)
 4)

14. Install:


- Diaphragm (accelerator pump) ①
- Spring ②
- O-ring ③
- Cover (4)
- Hose holder (drain hose) ⑤
- Screw (cover) 6

NOTE:

Install the diaphragm (accelerator pump) with its mark ⓐ facing the spring.






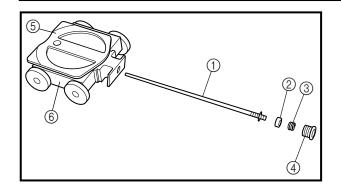

15. Install:

- Jet needle ①
- Collar 2
- Spring ③
- Needle holder 4
- Throttle valve plate ⑤ To throttle valve ⑥.

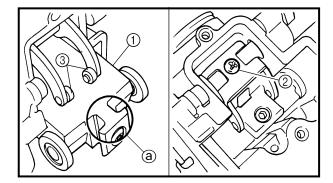


16. Install:

- Throttle valve assembly ①
- Screw (throttle shaft) ②


NOTE:

Install the valve lever rollers ③ into the slits ⓐ of the throttle valve.

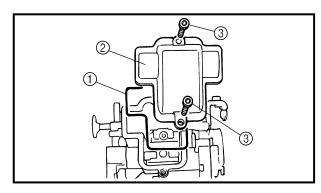


17. Install:


- O-ring (1)
- Valve lever housing cover ②
- Bolt (valve lever housing cover) ③

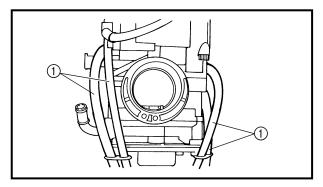



18. Install:


Carburetor breather hose ①
 Refer to "CABLE ROUTING DIA-GRAM" section in the CHAPTER 2.

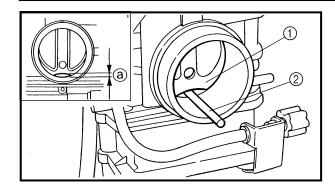

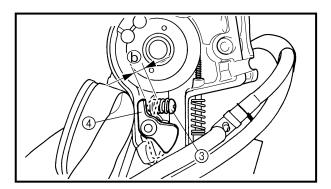

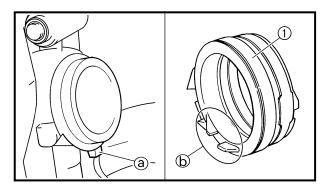

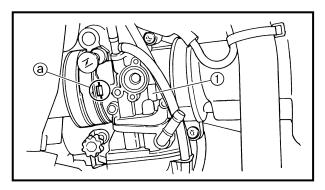

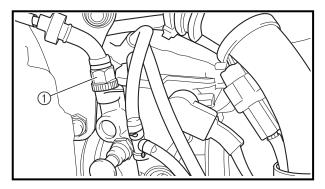

Accelerator pump timing adjustment

Adjustment steps:

NOTE: _

In order for the throttle valve height (a) to achieve the specified value, tuck under the throttle valve plate (1) the rod (2) etc. with the same outer diameter as the specified value.



Throttle valve height: 3.40 mm (0.134 in)

- Fully turn in the accelerator pump adjusting screw ③.
- Check that the link lever 4 has free play
 by pushing lightly on it.
- Gradually turn out the adjusting screw while moving the link lever until it has no more free play.

Carburetor installation

- 1. Install:
 - Carburetor joint (1)

3 Nm (0.3 m ⋅ kg, 2.2 ft ⋅ lb)

NOTE: _

Install the projection ⓐ on the cylinder head between the carburetor joint slots ⓑ.

- 2. Install:
 - Carburetor ①


NOTE:

Install the projection ⓐ between the carburetor joint slots.

- 3. Install:
 - Hot starter plunger (1)

🗽 2 Nm (0.2 m · kg, 1.4 ft · lb)



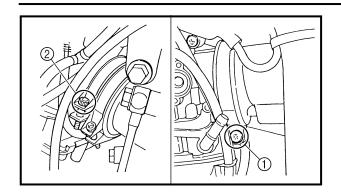




• Screw (air cleaner joint) 1

3 Nm (0.3 m ⋅ kg, 2.2 ft ⋅ lb)

• Screw (carburetor joint) ②

3 Nm (0.3 m ⋅ kg, 2.2 ft ⋅ lb)

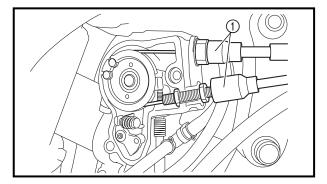


5. Install:

• Throttle cable 1

6. Adjust:

 Throttle grip free play Refer to "THROTTLE CABLE ADJUST-MENT" section in the CHAPTER 3.

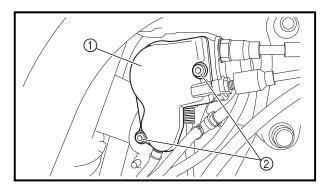


7. Install:

• Throttle cable cover ①

• Screw (throttle cable cover) ②

¼ 4 Nm (0.4 m ⋅ kg, 2.9 ft ⋅ lb)

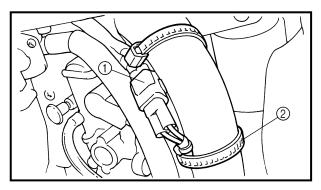

8. Install:

• TPS (throttle position sensor) coupler


• Clamp ②

Refer to "CABLE ROUTING DIA-GRAM" section in the CHAPTER 2.



CAMSHAFTS CYLINDER HEAD COVER



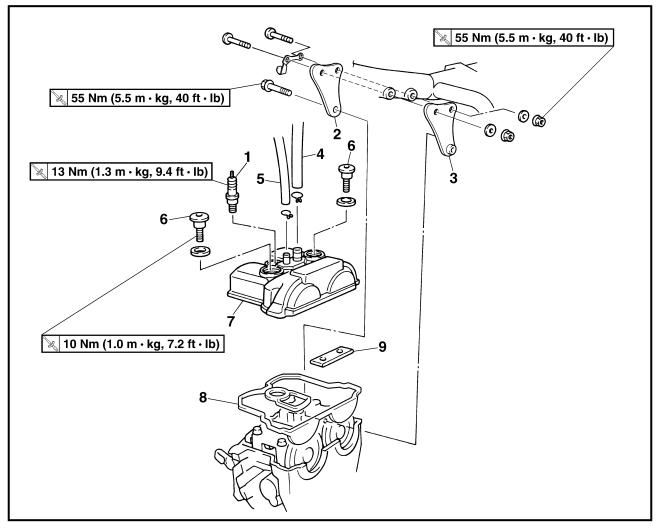


Extent of removal:

① Cylinder head cover removal

Extent of removal	Order	Part name	Q'ty	Remarks
		CYLINDER HEAD COVER REMOVAL		
Preparation for removal		Seat and fuel tank		Refer to "SEAT, FUEL TANK AND SIDE COVERS" section.
		Carburetor		Refer to "CARBURETOR" section.
1	1	Spark plug	1	
	2	Engine upper bracket (right)	1	
	3	Engine upper bracket (left)	1	
	4	Cylinder head breather hose	1	
1 1	5	Oil tank breather hose	1	
	6	Bolt (cylinder head cover)	2	
	7	Cylinder head cover	1	
	8	Gasket	1	
<u> </u>	9	Timing chain guide (upper)	1	

CAMSHAFTS

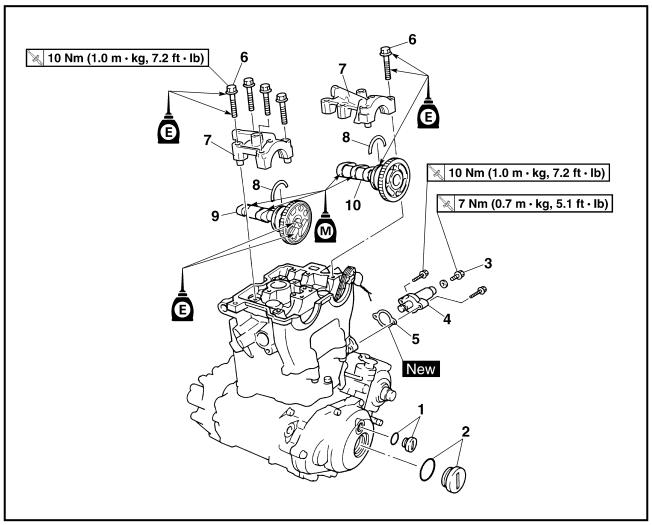



Extent of removal:


① Camshaft removal


Extent of removal	Order	Part name	Q'ty	Remarks
		CAMSHAFTS REMOVAL		
 	1	Timing plug	1	1
	2	Straight plug	1	
	3	Tensioner cap bolt	1	
	4	Timing chain tensioner	1	
	5	Gasket	1	Defer to "DEMOVAL DOINTS"
Ψ	6	Bolt (camshaft cap)	10	Refer to "REMOVAL POINTS".
	7	Camshaft cap	2	
	8	Clip	2	
	9	Exhaust camshaft	1	
 	10	Intake camshaft	1	<u> Р</u>




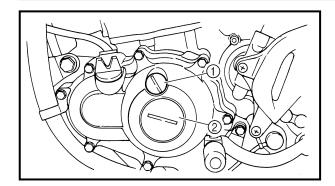

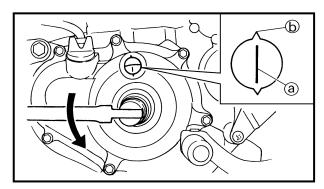

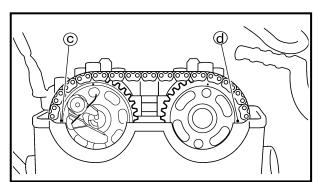

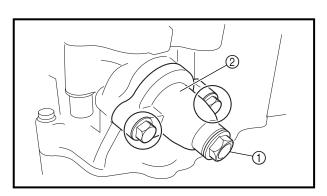

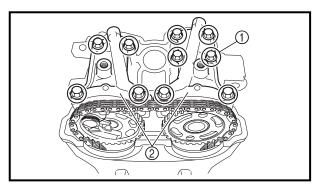

REMOVAL POINTS

Camshaft

- 1. Remove:
 - Timing plug ①
 - Straight plug ②
- 2. Align:
 - "I" mark

With stationary pointer.

Checking steps:

- Turn the crankshaft counterclockwise with a wrench.
- Align the "I" mark (a) on the rotor with the stationary pointer (b) on the crankcase cover. When the "I" mark is aligned with the stationary pointer, the piston is at the Top Dead Center (T.D.C.).

NOTE:

- In order to be sure that the piston is at Top Dead Center, the punch mark © on the exhaust camshaft and the punch mark @ on the intake camshaft must align with the cylinder head surface, as shown in the illustration.
- If there is no clearance, rotate the crankshaft counterclockwise one turn.
- 3. Loosen:
 - Tensioner cap bolt (1)
- 4. Remove:
 - Timing chain tensioner (2)
- 5. Remove:
 - Bolt (camshaft cap) (1)
 - Camshaft caps (2)


NOTE: _


Remove the bolts (camshaft cap) in a criss-cross pattern, working from the outside in.


CAUTIONS


The bolts (camshaft cap) must be removed evenly to prevent damage to the cylinder head, camshafts or camshaft caps.



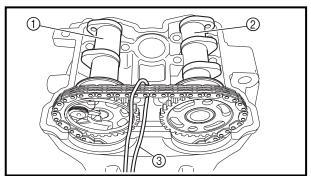

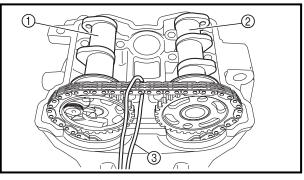

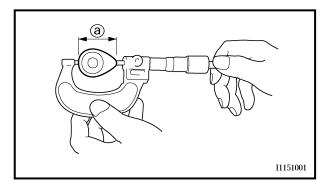

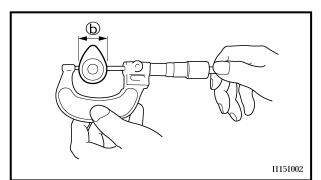



- Clips
- Exhaust camshaft (1)
- Intake camshaft ②

Attach a wire 3 to the timing chain to prevent it from falling into the crankcase.

INSPECTION

Camshaft

- 1. Inspect:
 - Cam lobes Pitting/scratches/blue discoloration → Replace.
- 2. Measure:
 - Cam lobes length (a) and (b) Out of specification \rightarrow Replace.




Cam lobes length:

Intake:

- (a) 31.200 ~ 31.300 mm (1.2283 ~ 1.2323 in) <Limit>: 31.100 mm (1.2244 in)
- **(b)** 22.550 ~ 22.650 mm (0.8878 ~ 0.8917 in) <Limit>: 22.450 mm (0.8839 in)

Exhaust:

- (a) 30.950 ~ 31.050 mm (1.2185 ~ 1.2224 in) <Limit>: 30.850 mm (1.2146 in)
- **b** 22.494 ~ 22.594 mm (0.8856 ~ 0.8895 in) <Limit>: 22.394 mm (0.8817 in)

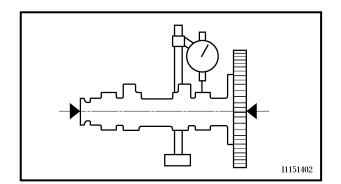

- 3. Measure:
 - Runout (camshaft) Out of specification \rightarrow Replace.



Runout (camshaft):

Less than 0.03 mm (0.0012 in)





4. Measure:


Camshaft-to-cap clearance
 Out of specification → Measure camshaft journal diameter.




Camshaft-to-cap clearance: 0.020 ~ 0.054 mm (0.0008 ~ 0.0021 in) <Limit>: 0.08 mm (0.003 in)

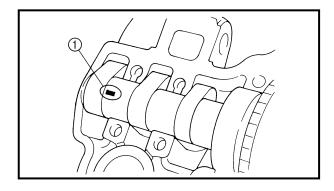

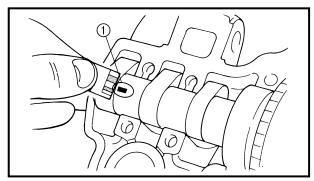

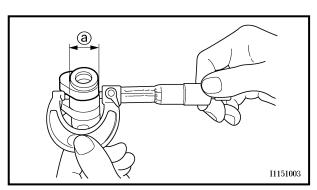

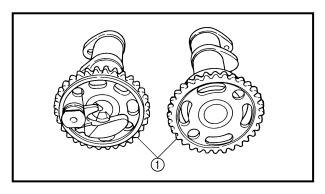

Measurement steps:

- Install the camshaft onto the cylinder head.
- Position a strip of Plastigauge® ① onto the camshaft.
- Install the circlip, dowel pins and camshaft caps.



Bolt (camshaft cap): 10 Nm (1.0 m • kg, 7.2 ft • lb)

NOTE:

- Tighten the bolts (camshaft cap) in a crisscross pattern from innermost to outer caps.
- Do not turn the camshaft when measuring clearance with the Plastigauge[®].
- Remove the camshaft caps and measure the width of the Plastigauge® (1).

5. Measure:

Camshaft journal diameter ⓐ
 Out of specification → Replace the camshaft.

Within specification \rightarrow Replace camshaft case and camshaft caps as a set.





Camshaft journal diameter: 21.967 ~ 21.980 mm (0.8648 ~ 0.8654 in)


Camshaft sprocket


- 1. Inspect:
 - Camshaft sprocket ①
 Wear/damage → Replace the camshaft assembly and timing chain as a set.




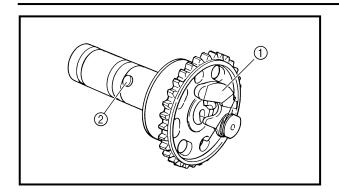

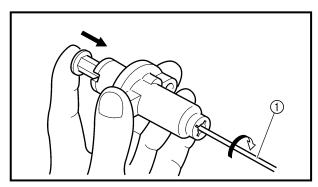

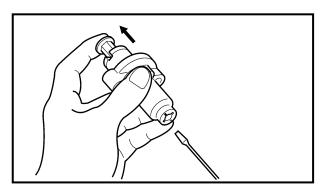

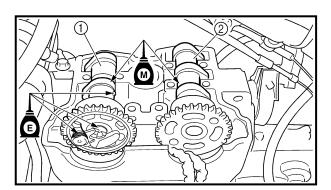

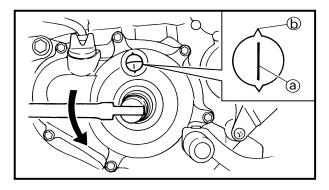

Decompression system

- 1. Check:
 - Decompression system

Checking steps:

- Check that the decompressor cam ① moves smoothly.
- Check that the decompressor lever pin ② projects from the camshaft.

Timing chain tensioner

- 1. Check:
 - While pressing the tensioner rod lightly with fingers, use a thin screwdriver ① and wind the tensioner rod up fully clockwise.
 - When releasing the screwdriver by pressing lightly with fingers, make sure that the tensioner rod will come out smoothly.
 - If not, replace the tensioner assembly.

ASSEMBLY AND INSTALLATION

- 1. Install:
 - Exhaust camshaft (1)
 - Intake camshaft ②

Installation steps:

 Turn the crankshaft counterclockwise until the "I" mark (a) on the rotor is aligned with the stationary pointer (b) on the crankcase cover.


NOTE: .

- Apply the molybdenum disulfide oil on the camshafts.
- Apply the engine oil on the decompression system.

CAMSHAFTS





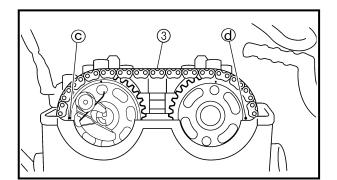

• Fit the timing chain ③ onto both camshaft sprockets and install the camshafts on the cylinder head.

NOTE: .

The camshafts should be installed onto the cylinder head so that the exhaust cam sprocket punch mark © and the intake cam sprocket punch mark © align with the surface of the cylinder head.

CAUTION:

Do not turn the crankshaft during the camshaft installation. Damage or improper valve timing will result.

• Install the clips and camshaft caps 4.




Bolt (camshaft cap): 10 Nm (1.0 m • kg, 7.2 ft • lb)


NOTE: .

- Apply the engine oil on the thread and contact surface of the bolts (camshaft cap) ⑤.
- Tighten the bolts (camshaft cap) in a crisscross pattern.

CAUTION:

The bolts (camshaft cap) must be tightened evenly, or damage to the cylinder head, camshaft caps, and camshaft will result.

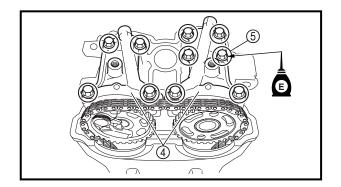

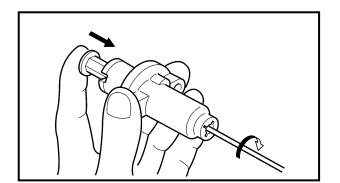

- 2. Install:
 - Timing chain tensioner


Installation steps:


 While pressing the tensioner rod lightly with fingers, use a thin screwdriver and wind the tensioner rod up fully clockwise.

CAMSHAFTS





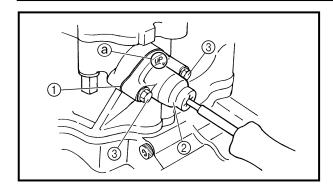

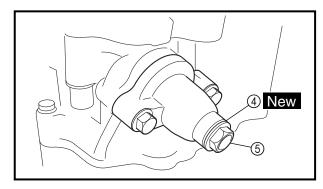

 With the rod fully wound and the chain tensioner UP mark @ facing upward, install the gasket ① and the chain tensioner ②, and tighten the bolt ③ to the specified torque.



Bolt (timing chain tensioner): 10 Nm (1.0 m • kg, 7.2 ft • lb)

Release the screwdriver, check the tensioner rod to come out and tighten the gasket 4 and the cap bolt 5 to the specified torque.




Tensioner cap bolt: 7 Nm (0.7 m • kg, 5.1 ft • lb)

- 3. Turn:
 - Crankshaft
 Counterclockwise several turns
- 4. Check:
 - Rotor "I" mark
 Align with the crankcase stationary pointer.
 - Camshaft match marks
 Align with the cylinder head surface.
 Out of alignment → Adjust.

CYLINDER HEAD CYLINDER HEAD



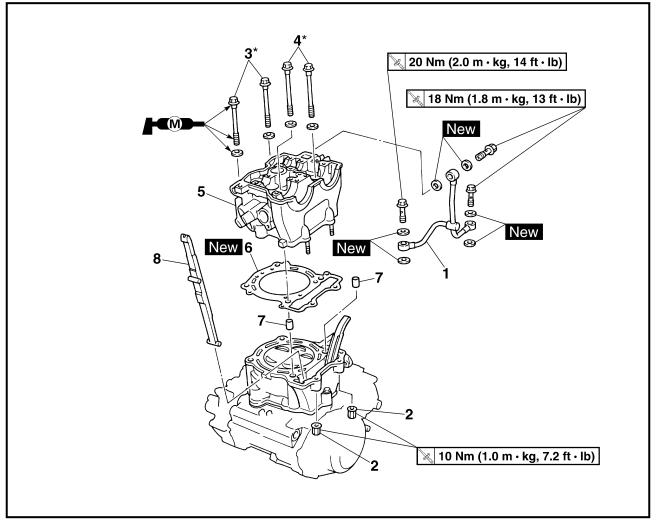

Extent of removal:		① Cylinder head removal		
Extent of removal	Order	Part name	Q'ty	Remarks
		CYLINDER HEAD REMOVAL		
Preparation for removal		Seat and fuel tank		Refer to "SEAT, FUEL TANK AND SIDE COVERS" section.
		Exhaust pipe and silencer		Refer to "EXHAUST PIPE AND
				SILENCER" section.
		Radiator		Refer to "RADIATOR" section.
		Carburetor		Refer to "CARBURETOR" section.
		Camshaft		Refer to "CAMSHAFTS" section.
1	1	Oil delivery pipe	1	
	2	Nut	2	
1	3*	Bolt (L = 150 mm)	2	Refer to NOTE.
	4*	Bolt (L = 160 mm)	2	F Neier to NOTE.
↓ ↓	5	Cylinder head	1	
	6	Gasket	1	
	7	Dowel pin	2	
	8	Timing chain guide (front)	1	


NOTE

Tighten the cylinder head bolts to 30 Nm (3.0 m \cdot kg, 22 ft \cdot lb) in the proper tightening sequence, remove and retighten the cylinder head bolts to 20 Nm (2.0 m \cdot kg, 14 ft \cdot lb) in the proper tightening sequence, and then tighten the cylinder head bolts further to reach the specified angle 180° in the proper tightening sequence.

CYLINDER HEAD





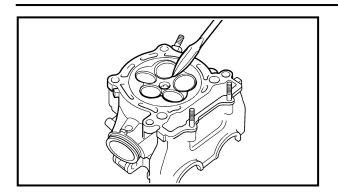


INSPECTION Cylinder head

- 1. Eliminate:
 - Carbon deposits (from the combustion chambers)
 Use a rounded scraper.

NOTE: _

Do not use a sharp instrument to avoid damaging or scratching:

- Spark plug threads
- Valve seats
 - 2. Inspect:
 - Cylinder head
 Scratches/damage → Replace.

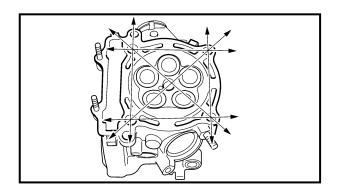

3. Measure:

 $\bullet \mbox{ Cylinder head warpage} \\ \mbox{Out of specification} \rightarrow \mbox{Resurface}.$



Cylinder head warpage: Less than 0.05 mm (0.002 in)

Warpage measurement and resurfacement steps:

- Place a straightedge and a feeler gauge across the cylinder head.
- Use a feeler gauge to measure the warpage.
- If the warpage is out of specification, resurface the cylinder head.
- Place a 400 ~ 600 grit wet sandpaper on the surface plate, and resurface the head using a figure-eight sanding pattern.


NOTE:


To ensure an even surface rotate the cylinder head several times.


CYLINDER HEAD





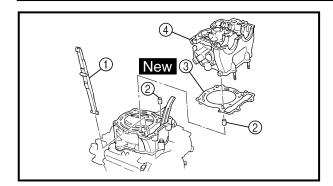

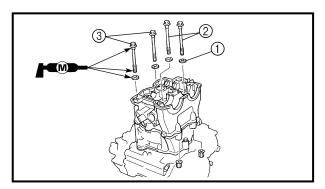

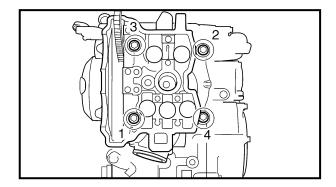

ASSEMBLY AND INSTALLATION

- 1. Install:
 - Timing chain guide (front) ①
 - Dowel pin ②
 - Cylinder head gasket ③ New
 - Cylinder head ④

NOTE: .

While pulling up the timing chain, install the timing chain guide (front) and cylinder head.

- 2. Install:
 - Plain washer ①
 - Bolt [L=160 mm (6.30 in)] ②
 - Bolt [L=150 mm (5.91 in)] ③

Installation steps:

CAUTION:

Tighten the cylinder head using the rotation angle procedure to obtain uniform tightening torque.

- Wash the threads and contact surfaces of the bolts, the contact surfaces of the plain washers, the contact surface of the cylinder head, and the threads of the crankcase.
- Apply the molybdenum disulfide grease on the threads and contact surfaces of the bolts and on both contact surfaces of the plain washers.
- Install the plain washers and bolts.
- Tighten the bolts to the specified torque in two or three steps in the proper tightening sequence as shown.



Bolts (cylinder head):


1st:


30 Nm (3.0 m • kg, 22 ft • lb)


CYLINDER HEAD







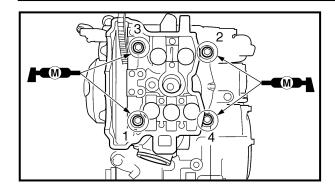

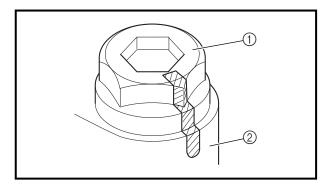

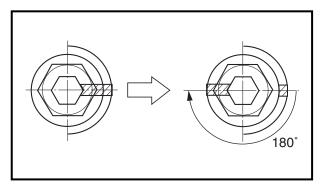

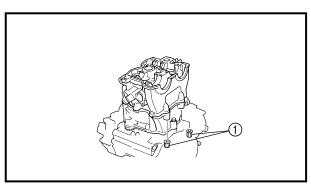

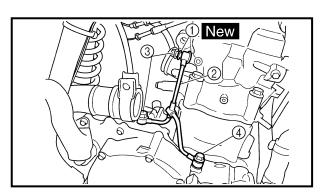

- Remove the bolts.
- Again apply the molybdenum disulfide grease on the threads and contact surfaces of the bolts and on both contact surfaces of the plain washers.
- Retighten the bolts.

NOTE:

Tighten the bolts to the specified torque in two or three steps in the proper tightening sequence as shown.



Bolts (cylinder head): 2nd:

20 Nm (2.0 m • kg, 14 ft • lb)

 Put a mark on the corner ① of the bolt (cylinder head) and the cylinder head ② as shown.

NOTE: _

Tighten the bolts 90° in each of the two steps to reach the specified angle of 180° in the proper tightening sequence as shown.



Bolts (cylinder head):

FinaÌ:

Specified angle 180°

- 3. Install:
 - Nut (cylinder head) (1)

10 Nm (1.0 m ⋅ kg, 7.2 ft ⋅ lb)

- 4. Install:
 - Copper washer (1) New

INCVV

- Oil delivery pipe ②
- Union bolt (M8) (3)

18 Nm (1.8 m ⋅ kg, 13 ft ⋅ lb)


• Union bolt (M10) (4)

20 Nm (2.0 m · kg, 14 ft · lb)



VALVES AND VALVE SPRINGS VALVES AND VALVE SPRINGS



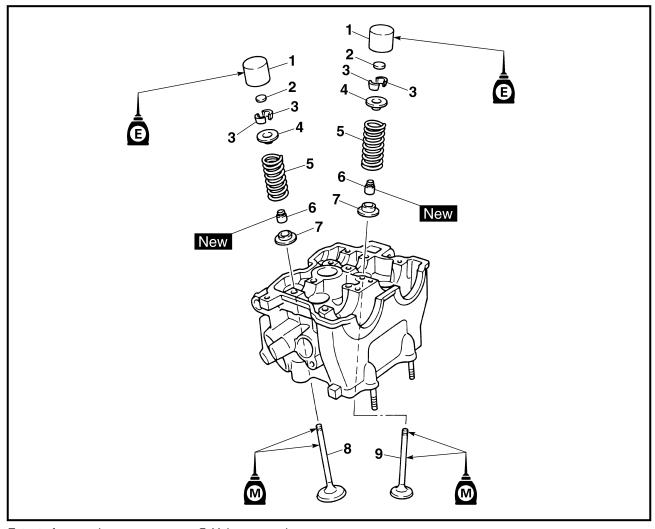


Extent of removal:


① Valve removal

Extent of removal	Order	Part name	Q'ty	Remarks
		VALVES AND VALVE SPRINGS REMOVAL		
Preparation for removal		Cylinder head		Refer to "CYLINDER HEAD" section.
1	1	Valve lifter	5	lles escieltes!
	2	Adjusting pad	5	Use special tool. Refer to "REMOVAL POINTS".
	3	Valve cotter	10	Tieler to Tielwovae Folivio :
	4	Valve retainer	5	
1	5	Valve spring	5	
	6	Stem seal	5	
	7	Valve spring seat	5	
	8	Exhaust valve	2	
 	9	Intake valve	3	



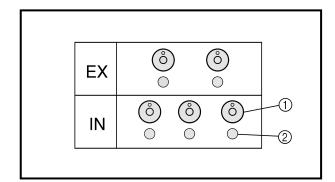

2

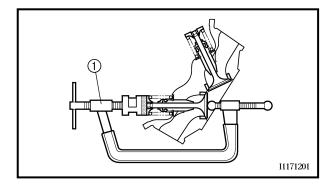

REMOVAL POINTS

- 1. Remove:
 - Valve lifters (1)
 - Pads (2)

NOTE:

Identify each lifter ① and pad ② position very carefully so that they can be reinstalled in their original place.

2. Check:

Valve sealing
 Leakage at the valve seat → Inspect
 the valve face, valve seat and valve
 seat width.

Checking steps:

- Pour a clean solvent ① into the intake and exhaust ports.
- Check that the valve seals properly.
 There should be no leakage at the valve seat ②.

3. Remove:

Valve cotters


NOTE:


Attach a valve spring compressor ① between the valve spring retainer and the cylinder head to remove the valve cotters.





Valve spring compressor: YM-4019/90890-04019




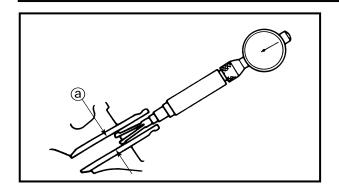

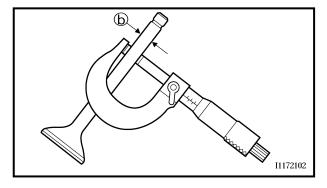

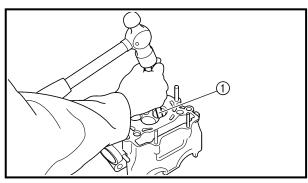

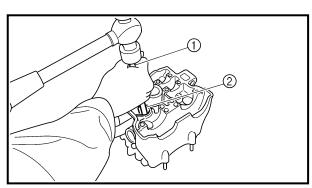

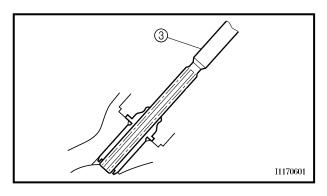

INSPECTION

Valve

- 1. Measure:
 - Stem-to-guide clearance

Stem-to-guide clearance = valve guide inside diameter (a) – valve stem diameter (b)

Out of specification \rightarrow Replace the valve guide.



Clearance (stem to guide):

Intake:

0.010 ~ 0.037 mm (0.0004 ~ 0.0015 in)

<Limit>: 0.08 mm (0.003 in)

Exhaust:

0.020 ~ 0.047 mm (0.0008 ~ 0.0019 in)

<Limit>: 0.10 mm (0.004 in)

2. Replace:

• Valve guide

Replacement steps:

NOTE:

To ease guide removal, installation and to maintain correct fit heat the cylinder head in an over to 100 °C (212 °F).

- Remove the valve guide using a valve guide remover ①.
- Install the new valve guide using a valve guide remover ① and valve guide installer ②.
- After installing the valve guide, bore the valve guide using a valve guide reamer 3 to obtain proper stem-to-guide clearance.





Valve guide remover: Intake: 4.5 mm (0.18 in) YM-4116/90890-04116 Exhaust: 5.0 mm (0.20 in) YM-4097/90890-04097

Valve guide installer:

Intake:

YM-4117/90890-04117

Exhaust:

YM-4098/90890-04098

Valve guide reamer:


Intake: 4.5 mm (0.18 in) YM-4118/90890-04118 Exhaust: 5.0 mm (0.20 in) YM-4099/90890-04099

NOTE: _

After replacing the valve guide reface the valve seat.

3. Inspect:

- Valve face
 Pitting/wear → Grind the face.
- Valve stem end
 Mushroom shape or diameter larger than the body of the stem → Replace.

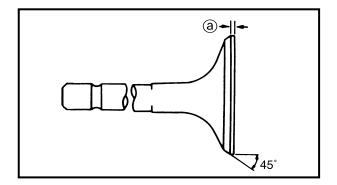

4. Measure:

Margin thickness ⓐ
 Out of specification → Replace.



Margin thickness:

Intake:

1.0 mm (0.039 in)

<Limit>: 0.85 mm (0.033 in)


Exhaust:

1.0 mm (0.039 in)

<Limit>: 0.85 mm (0.033 in)





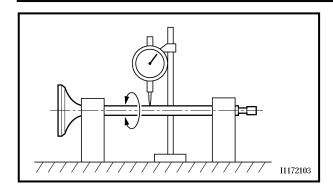

5. Measure:

Runout (valve stem)
 Out of specification → Replace.



Runout limit: 0.01 mm (0.0004 in)

NOTE: .

- When installing a new valve always replace the guide.
- If the valve is removed or replaced always replace the oil seal.

6. Eliminate:

Carbon deposits
 (from the valve face and valve seat)

7. Inspect:

ullet Valve seats Pitting/wear \to Reface the valve seat.



Valve seat width ⓐ
 Out of specification → Reface the valve seat.



Valve seat width:


Intake:


0.9 ~ 1.1 mm (0.0354 ~ 0.0433 in) <Limit>: 1.6 mm (0.0630 in) Exhaust:

0.9 ~ 1.1 mm (0.0354 ~ 0.0433 in) <Limit>: 1.6 mm (0.0630 in)



- Apply Mechanic's blueing dye (Dykem) (b) to the valve face.
- Install the valve into the cylinder head.
- Press the valve through the valve guide and onto the valve seat to make a clear pattern.
- Measure the valve seat width. Where the valve seat and valve face made contact, blueing will have been removed.
- If the valve seat is too wide, too narrow, or the seat is not centered, the valve seat must be refaced.

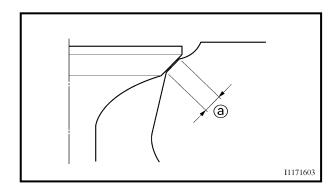

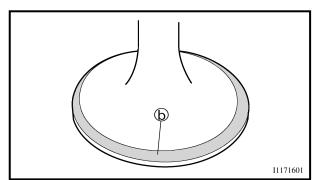





- 9. Lap:
 - Valve face
 - Valve seat

NOTE: .

After refacing the valve seat or replacing the valve and valve guide, the valve seat and valve face should be lapped.

Lapping steps:

 Apply a coarse lapping compound to the valve face.

CAUTION:

Do not let the compound enter the gap between the valve stem and the guide.

- Apply molybdenum disulfide oil to the valve stem.
- Install the valve into the cylinder head.
- Turn the valve until the valve face and valve seat are evenly polished, then clean off all of the compound.

NOTE:


For best lapping results, lightly tap the valve seat while rotating the valve back and forth between your hands.


 Apply a fine lapping compound to the valve face and repeat the above steps.


NOTE:

After every lapping operation be sure to clean off all of the compound from the valve face and valve seat.


- Apply Mechanic's blueing dye (Dykem) to the valve face.
- Install the valve into the cylinder head.
- Press the valve through the valve guide and onto the valve seat to make a clear pattern.
- Measure the valve seat width again. If the valve seat width is out of specification, reface and relap the valve seat.

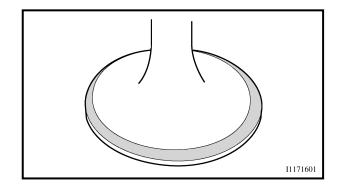


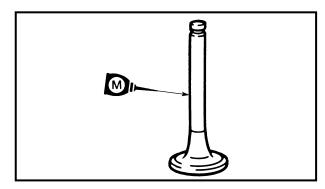

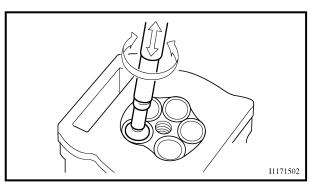



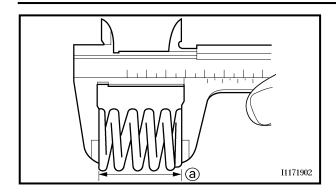

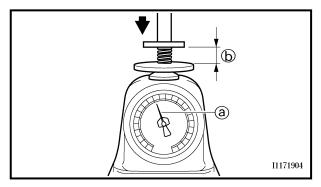

Valve spring

- 1. Measure:
 - Valve spring free length ⓐ
 Out of specification → Replace.



Free length (valve spring):

Intake:

37.03 mm (1.46 in)

<Limit>: 35.17 mm (1.38 in)

Exhaust:

37.68 mm (1.48 in)

<Limit>: 35.79 mm (1.41 in)

2. Measure:

Compressed spring force ⓐ
 Out of specification → Replace.

b Installed length



Compressed spring force:

Intake:

111.3 ~ 127.9 N at 27.87 mm

(11.3 ~ 13.0 kg at 27.87 mm,


24.91 ~ 28.66 lb at 1.10 in)

Exhaust:

127.4 ~ 146.4 N at 27.38 mm

 $(13.0 \sim 14.9 \text{ kg at } 27.38 \text{ mm},$

28.66 ~ 32.85 lb at 1.08 in)

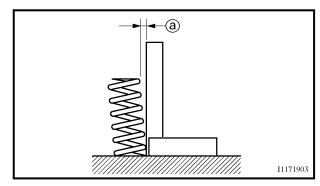

I1170701

3. Measure:

• Spring tilt @

Out of specification \rightarrow Replace.



Spring tilt limit:

Intake:

2.5°/1.61 mm (0.063 in)

Exhaust:


2.5°/1.65 mm (0.065 in)

Valve lifter

- 1. Inspect:
 - Valve lifter

Scratches/damage → Replace both lifters and cylinder head.



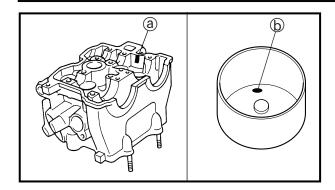

Combination of cylinder head and valve lifter

1. Combination:

For this combination, match the paint color on the cylinder head with that on the valve lifter according to the chart below.


Combination					
Cylinder head mark (a) (color)	Valve lifter mark (b) (color)				
Blue	Blue				
Yellow	Yellow				
Purple	Black				


NOTE: _

When you purchase a cylinder head, you cannot designate its size. Choose the valve lifter that matches the above chart.

ASSEMBLY AND INSTALLATION

- 1. Apply:
 - Molybdenum disulfide oil
 Onto the valve stem and valve stem seal.

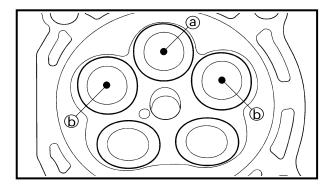

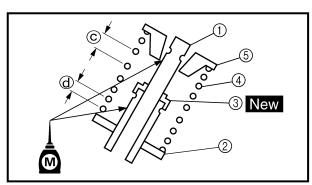

- 2. Install:
 - Valves (1)
 - Valve spring seats ②
 - Valve stem seals ③ New
 - Valve springs 4
 - Valve spring retainers (5)

NOTE: _


 Make sure that each valve is installed in its original place, also referring to the painted color as follows.


Intake (middle) (a): blue
Intake (right/left) (b): gray
Exhaust: not paint


- Install the valve springs with the larger pitch
 © facing upward.
- **@** Smaller pitch





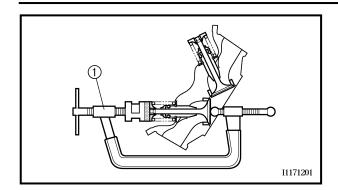

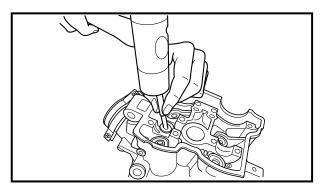

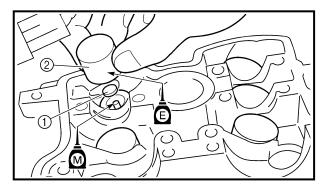

2	Instal	ŀ
J.	ııısıaı	ı.

Valve cotters

NOTE: .

While compressing the valve spring with a valve spring compressor ① install the valve cotters.



Valve spring compressor: YM-4019/90890-04019

4. To secure the valve cotters onto the valve stem, lightly tap the valve tip with a piece of wood.

CAUTION:

Hitting the valve tip with excessive force could damage the valve.

- 5. Install:
 - Adjusting pad ①
 - Valve lifter ②


NOTE:

- Apply the engine oil on the valve lifters.
- Apply the molybdenum disulfide oil on the valve stem end.
- Valve lifter must turn smoothly when rotated with a finger.
- Be careful to reinstall valve lifters and pads in their original place.



CYLINDER AND PISTON CYLINDER AND PISTON



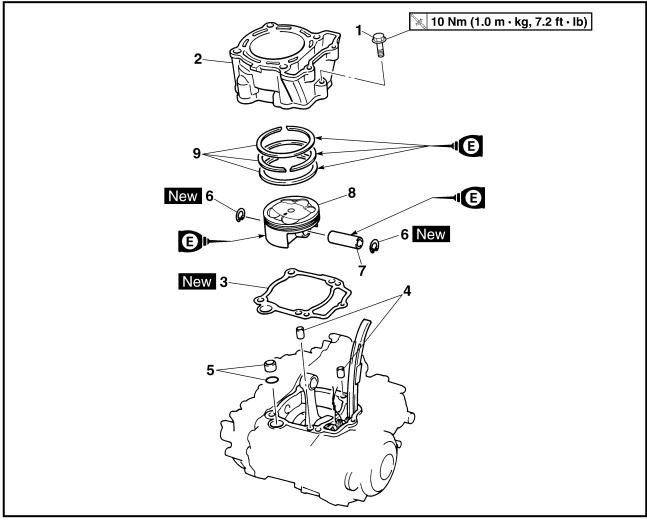

Extent of removal:


① Cylinder removal


② Piston removal

Extent of removal	Order	Part name	Q'ty	Remarks
		CYLINDER AND PISTON REMOVAL		
Preparation for removal		Cylinder head		Refer to "CYLINDER HEAD" section.
<u> </u>	1	Bolt (cylinder)	1	
I	2	Cylinder	1	
	3	Gasket	1	
	4	Dowel pin	2	
2	5	Dowel pin/O-ring	1/1	
	6	Piston pin clip	2	П
	7	Piston pin	1	Use special tool.
	8	Piston	1	Refer to "REMOVAL POINTS".
 	9	Piston ring set	1	Д





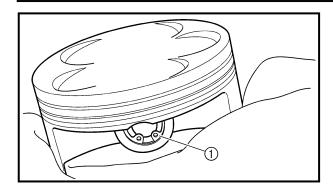

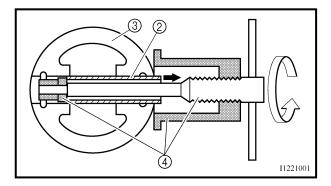

REMOVAL POINTS

Piston

- 1. Remove:
 - Piston pin clips ①
 - Piston pin ②
 - Piston ③

NOTE: .

- Put identification marks on each piston head for reference during reinstallation.
- Before removing each piston pin, deburr the clip groove and pin hole area. If the piston pin groove is deburred and the piston pin is still difficult to remove, use the piston pin puller 4.



Piston pin puller: YU-1304/90890-01304

CAUTION:

Do not use a hammer to drive the piston pin out.

Piston ring

- 1. Remove:
 - Piston rings

NOTE: .

Spread the end gaps apart while at the same time lifting the piston ring over the top of the piston crown, as shown in the illustration.

INSPECTION

Cylinder and piston

- 1. Inspect:
 - Cylinder and piston walls
 Vertical scratches → Replace cylinder and piston.
- 2. Measure:
 - Piston-to-cylinder clearance


Measurement steps:

1st step:

Measure the cylinder bore "C" with a cylinder bore gauge.

NOTE:

Measure the cylinder bore "C" in parallel to and at right angles to the crankshaft. Then, find the average of the measurements.

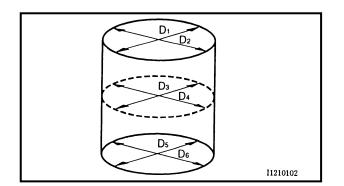





Cylinder bore "C"	95.00 ~ 95.01 mm (3.7402 ~ 3.7406 in)
Taper limit "T"	0.05 mm (0.002 in)
Out of round "R"	0.05 mm (0.002 in)


"C" = Maximum D

"T" = (Maximum D₁ or D₂) - (Maximum D₅ or D₆)

"R" = (Maximum D_1 , D_3 or D_5)

– (Minimum D_2 , D_4 or D_6)

 If out of specification, replace the cylinder, and replace the piston and piston rings as set.

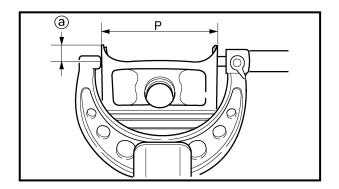

2nd step:

 Measure the piston skirt diameter "P" with a micrometer.

ⓐ 8 mm (0.315 in) from the piston bottom edge

	Piston size "P"
Standard	94.945 ~ 94.960 mm (3.738 ~ 3.739 in)

• If out of specification, replace the piston and piston rings as a set.

3rd step:

• Calculate the piston-to-cylinder clearance with following formula:

Piston-to-cylinder clearance = Cylinder bore "C" – Piston skirt diameter "P"




Piston-to-cylinder clearance: 0.040 ~ 0.065 mm (0.0016 ~ 0.0026 in)

<Limit>: 0.1 mm (0.004 in)

 If out of specification, replace the cylinder, and replace the piston and piston rings as set.





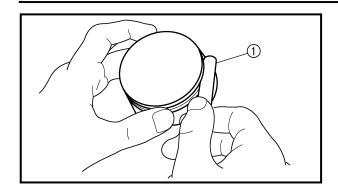

Piston ring

- 1. Measure:
 - Ring side clearance
 Use a feeler gauge ①.
 Out of specification → Replace the piston and rings as a set.

NOTE: .

Clean carbon from the piston ring grooves and rings before measuring the side clearance.

/ 4		Side clearance:		
		Standard	<limit></limit>	
Top ri	ng	0.030 ~ 0.065 mm (0.0012 ~ 0.0026 in)	0.12 mm (0.005 in)	
2nd ri	ng	0.020 ~ 0.055 mm (0.0008 ~ 0.0022 in)	0.12 mm (0.005 in)	

2. Position:

Piston ring (in cylinder)

NOTE: _

Insert a ring into the cylinder and push it approximately 10 mm (0.39 in) into the cylinder. Push the ring with the piston crown so that the ring will be at a right angle to the cylinder bore.

ⓐ 10 mm (0.39 in)


3. Measure:

Ring end gap
 Out of specification → Replace.

NOTE: .

You cannot measure the end gap on the expander spacer of the oil control ring. If the oil control ring rails show excessive gap, replace all three rings.

<u>/ </u>	End gap:	
	Standard	<limit></limit>
Top ring	0.20 ~ 0.30 mm	0.55 mm
Topinig	(0.008 ~ 0.012 in)	(0.022 in)
2nd ring	0.35 ~ 0.50 mm	0.85 mm
	(0.014 ~ 0.020 in)	(0.033 in)
Oil ring	0.20 ~ 0.50 mm	
	(0.01 ~ 0.02 in)	

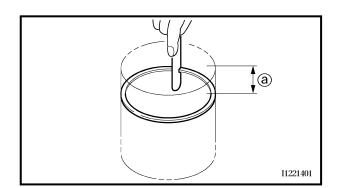





Piston pin

- 1. Inspect:
 - Piston pin
 Blue discoloration/grooves → Replace, then inspect the lubrication system.
- 2. Measure:
 - Piston pin-to-piston clearance



Measure the outside diameter (piston pin)
a.

If out of specification, replace the piston pin.



Outside diameter (piston pin): 17.991 ~ 18.000 mm (0.7083 ~ 0.7087 in)

Measure the inside diameter (piston) (b).



Inside diameter (piston): 18.004 ~ 18.015 mm (0.7088 ~ 0.7093 in)


 Calculate the piston pin-to-piston clearance with the following formula.


Piston pin-to-piston clearance = Inside diameter (piston) (b) – Outside diameter (piston pin) (a)

• If out of specification, replace the piston.



Piston pin-to-piston clearance: 0.004 ~ 0.024 mm (0.00016 ~ 0.00094 in) <Limit>: 0.07 mm (0.003 in)

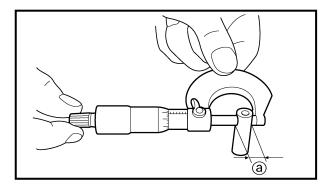

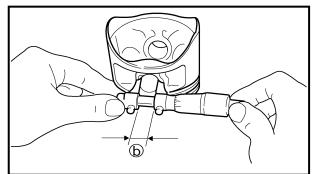


ASSEMBLY AND INSTALLATION Piston

- 1. Install:
 - Piston rings
 Onto the piston.





- Be sure to install the piston rings so that the manufacturer's marks or numbers are located on the upper side of the rings.
- Lubricate the piston and piston rings liberally with engine oil.

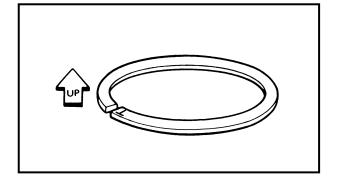







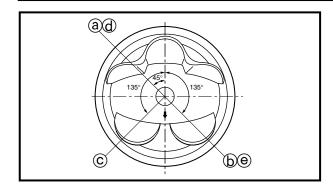

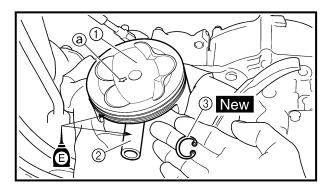

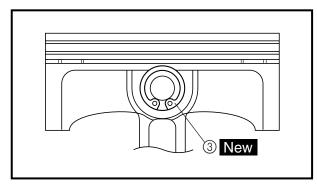

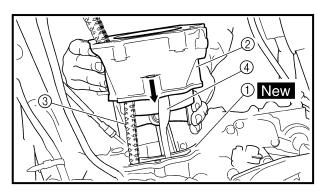

- 2. Position:
 - Top ring
 - 2nd ring
 - Oil ring
 - Offset the piston ring end gaps as shown.
- a Top ring end
- **b** 2nd ring end
- © Oil ring end (upper)
- d Oil ring
- Oil ring end (lower)
 - 3. Install:
 - Piston (1)
 - Piston pin ②
 - Piston pin clips ③ New

NOTE: .

- Apply engine oil onto the piston pin and piston.
- Be sure that the arrow mark (a) on the piston points to the exhaust side of the engine.
- Before installing the piston pin clip, cover the crankcase with a clean rag to prevent the piston pin clip from falling into the crankcase.
- Install the piston pin clips with their ends facing downward.
 - 4. Lubricate:
 - Piston
 - Piston rings
 - Cylinder

NOTE:

Apply a liberal coating of engine oil.

Cylinder

- 1. Install:
 - Dowel pins
 - O-ring
 - Gasket ① New
 - Cylinder 2

NOTE: .

Install the cylinder with one hand while compressing the piston rings with the other hand.


CAUTION:

- Pass the timing chain ③ through the timing chain cavity.
- - 2. Install:
 - Bolt (cylinder)

🗽 10 Nm (1.0 m · kg, 7.2 ft · lb)

CLUTCH CLUTCH




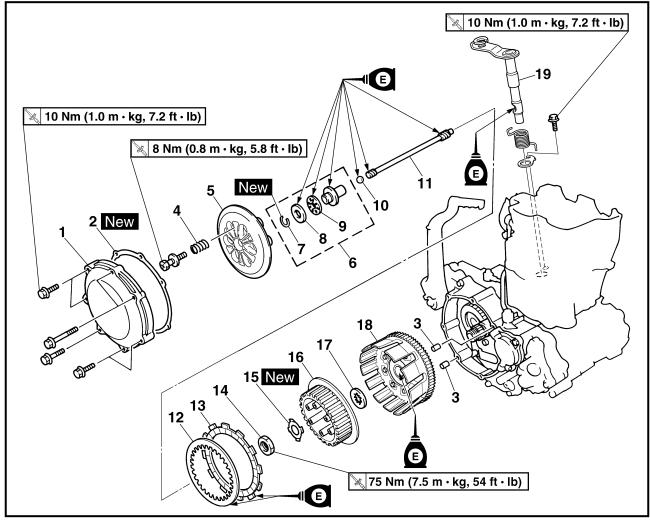


Extent of removal:


- ① Push rod and push lever removal
- ② Push pod 1 disassembly
- ③ Friction plate and clutch plate removal ④ Clutch housing removal


Extent of removal	Order	Part name	Q'ty	Remarks
		CLUTCH REMOVAL		
Preparation for removal		Drain the engine oil.		Refer to "ENGINE OIL REPLACEMENT" section in the CHAPTER 3.
		Brake pedal		Refer to "ENGINE REMOVAL" section.
		Clutch cable		Disconnect at engine side.
\uparrow \uparrow \uparrow	1	Clutch cover	1	
	2	Gasket	1	
	3	Dowel pin	2	
	4	Clutch spring	6	
	5	Pressure plate	1	
	6	Push rod 1	1	
	7	Circlip	1	
	8	Plain washer	1	
	9	Bearing	1	
, ·	10	Ball	1	
<u> </u>	11	Push rod 2	1	

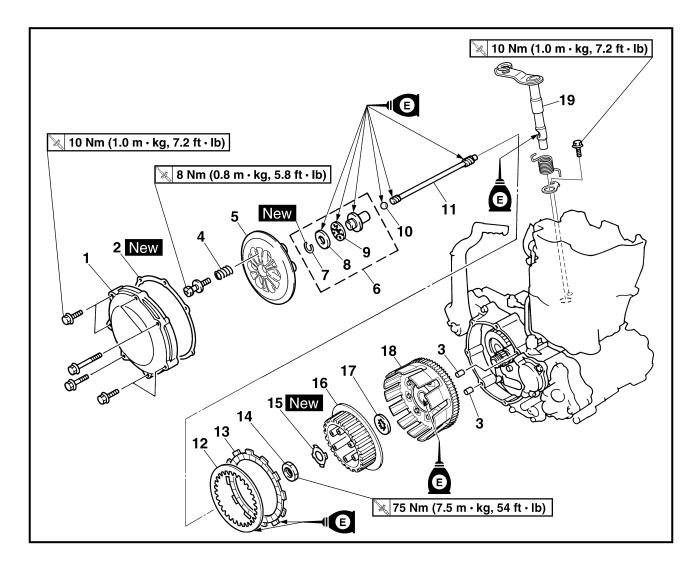



Extent of removal	Order	Part name	Q'ty	Remarks
†	12	Clutch plate	8	
	13	Friction plate	9	
(3)	14	Nut	1	h
4	15	Look washer	1	Use special tool. Refer to "REMOVAL POINTS".
 	16	Clutch boss	1	THEIR TO THEMOVAL FORTIS.
	17	Thrust washer	1	
1	18	Clutch housing	1	
①‡	19	Push lever	1	

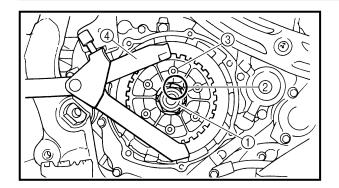

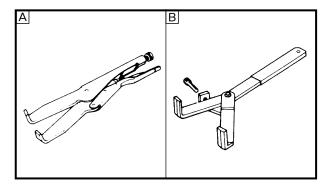

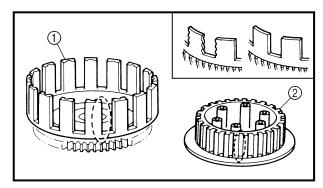

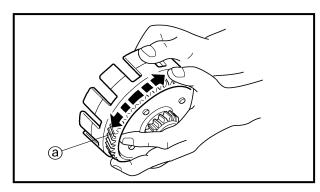

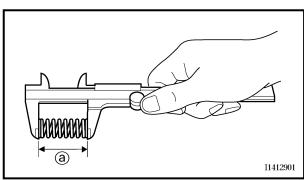

REMOVAL POINTS

EC483211

Clutch boss

- 1. Remove:
 - Nut (1)
 - Lock washer ②
 - Clutch boss ③

Straighten the lock washer tab and use the clutch holding tool (4) to hold the clutch boss.



Clutch holding tool: YM-91042/90890-04086

- A For USA and CDN
- **B** Except for USA and CDN

EC494000 INSPECTION

Clutch housing and boss

- 1. Inspect:
 - Clutch housing (1) Cracks/wear/damage → Replace.
 - Clutch boss (2) Scoring/wear/damage \rightarrow Replace.


Primary driven gear

- 1. Check:
 - Circumferential play Free play exists \rightarrow Replace.
 - Gear teeth (a) Wear/damage \rightarrow Replace.


EC484400


Clutch spring

- 1. Measure:
 - Clutch spring free length (a) Out of specification → Replace springs as a set.

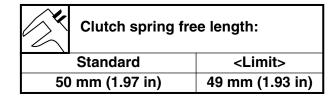



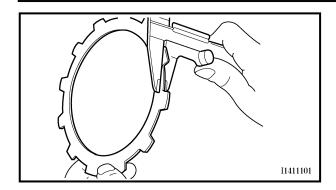

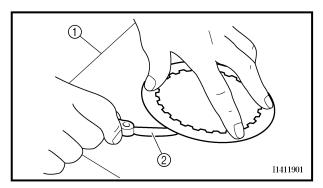

EC484500

Friction plate

- 1. Measure:
 - Friction plate thickness Out of specification \rightarrow Replace friction plate as a set. Measure at all four points.



Friction plate thickness:

2.92 ~ 3.08 mm (0.115 ~ 0.121 in)

<Limit>: 2.8 mm (0.110 in)


Clutch plate

- 1. Measure:
 - Clutch plate warpage Out of specification → Replace clutch plate as a set. Use a surface plate ① and thickness gauge 2.




Warp limit:

0.1 mm (0.004 in)

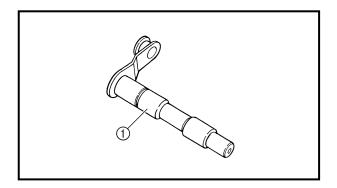

Push lever

- 1. Inspect:
 - Push lever (1) Wear/damage \rightarrow Replace.

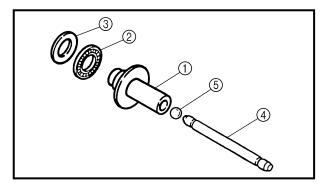


EC484810

Push rod

- 1. Inspect:
 - Push rod 1 ①
 - Bearing ②
 - Plain washer ③
 - Push rod 2 (4)
 - Ball (5)

Wear/damage/bend \rightarrow Replace.

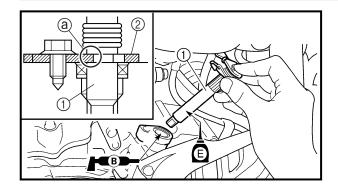

EC4A5000


ASSEMBLY AND INSTALLATION Push lever


- 1. Install:
 - Push lever ①
 - Bolt (push lever)


№ 10 Nm (1.0 m · kg, 7.2 ft · lb)

NOTE: .

- Apply the lithium soap base grease on the oil seal lip.
- Apply the engine oil on the push lever.
- Fit the seat plate ② in the groove ③ of the push lever and tighten the bolt (seat plate).

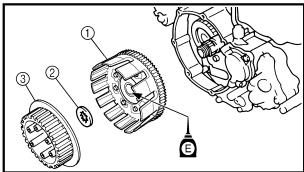

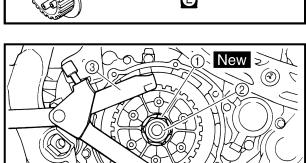

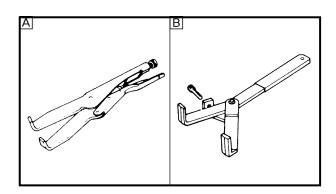

Clutch

- 1. Install:
 - Primary driven gear (1)
 - Thrust washer ②
 - Clutch boss (3)

NOTE: _

Apply the engine oil on the primary driven gear inner circumference.

- 2. Install:
 - Lock washer (1) New
 - Nut (clutch boss) ②

№ 75 Nm (7.5 m · kg, 54 ft · lb)


NOTE:

Use the clutch holding tool ③ to hold the clutch boss.




Clutch holding tool: YM-91042/90890-04086

- A For USA and CDN
- B Except for USA and CDN

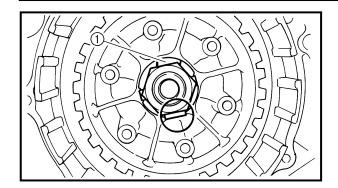


3. Bend the lock washer ① tab.

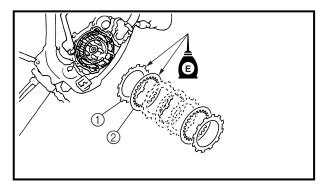

- 4. Install:
 - Friction plate 1
 - Clutch plate ②

NOTE:

- Install the clutch plates and friction plates alternately on the clutch boss, starting with a friction plate and ending with a friction plate.
- Apply the engine oil on the friction plates and clutch plates.

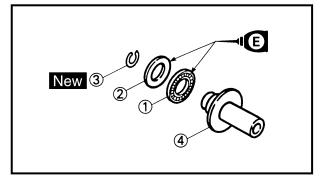

- 5. Install:
 - Bearing 1
 - Plain washer ②
 - Circlip ③ New To push rod 1 ④.

NOTF:


Apply the engine oil on the bearing and plain washer.




- Push rod 2 (1)
- Ball ②
- Push rod 1 ③

NOTE:


Apply the engine oil on the push rod 1, 2 and ball.

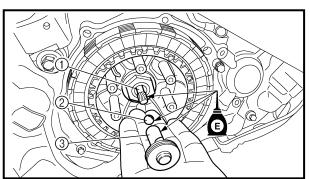

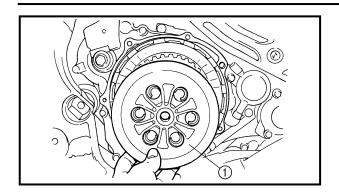

7. Install:

• Pressure plate ①

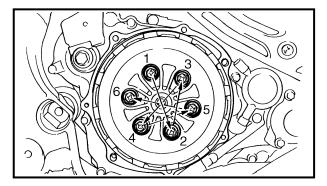


8. Install:

- Clutch spring
- Bolt (clutch spring)

№ 8 Nm (0.8 m · kg, 5.8 ft · lb)




Tighten the bolts in stage, using a crisscross pattern.

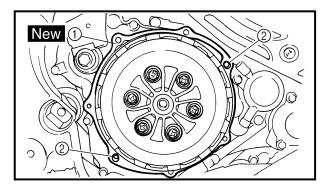

9. Install:

- Gasket (clutch cover) ① New
- Dowel pin ②

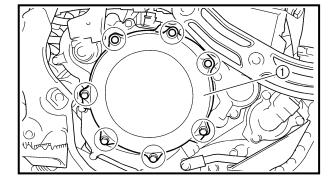

10. Install:

- Clutch cover ①
- Bolt (clutch cover)

№ 10 Nm (1.0 m · kg, 7.2 ft · lb)

NOTE: _


Tighten the bolts in stage, using a crisscross pattern.

OIL FILTER, WATER PUMP AND CRANKCASE COVER (RIGHT)



OIL FILTER, WATER PUMP AND CRANKCASE COVER (RIGHT) OIL FILTER, WATER PUMP AND CRANKCASE COVER (RIGHT)



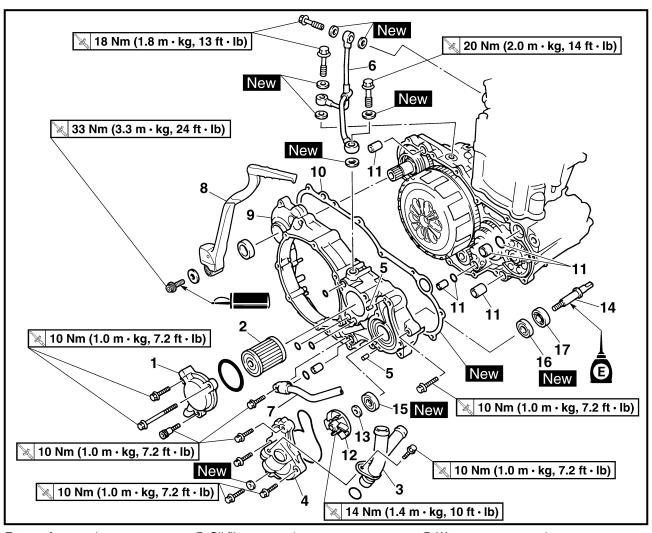


Extent of removal:

- ① Oil filter removal
- (3) Crankcase cover (right) removal
- ② Water pump removal

Extent of removal	Order	Part name	Q'ty	Remarks
		OIL FILTER, WATER PUMP AND CRANKCASE COVER (RIGHT) REMOVAL		
Preparation for removal		Drain the engine oil.		Refer to "ENGINE OIL REPLACEMENT" section in the CHAPTER 3.
		Drain the coolant.		Refer to "COOLANT REPLACEMENT" section in the CHAPTER 3.
		Exhaust pipe		Refer to "EXHAUST PIPE AND SILENCER" section.
		Brake pedal		Refer to "ENGINE REMOVAL" section.
		Clutch cover		Refer to "CLUTCH" section.
<u> </u>	1	Oil filter cover	1	
I	2	Oil filter	1	
	3	Coolant pipe 2	1	
	4	Water pump housing	1	
	5	Pin	2	
	6	Oil delivery pipe	1	



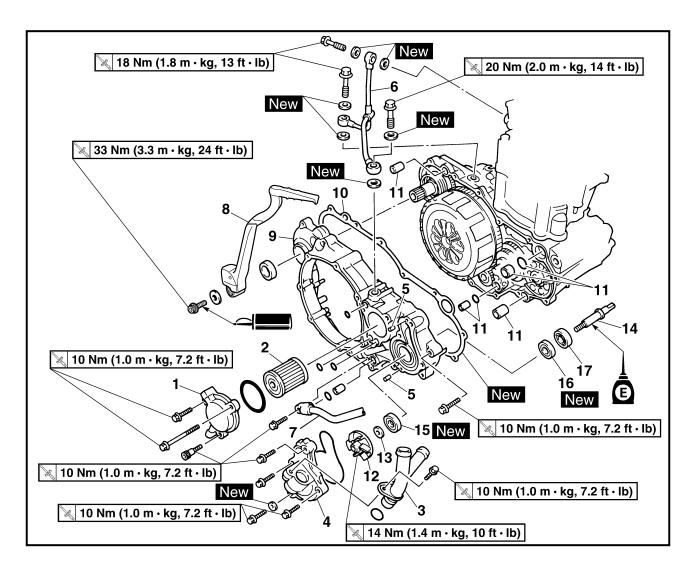



Extent of removal	Order	Part name	Q'ty	Remarks
1 1	7	Oil hose	1	
2	8	Kick starter	1	
	9	Crankcase cover (right)	1	
'	10	Gasket	1	
	11	Dowel pin/O-ring	4/2	
1	12	Impeller	1	n
	13	Plain washer	1	
	14	Impeller shaft	1	Defeate "DEMOVAL DOINTS"
2	15	Oil seal 1	1	Refer to "REMOVAL POINTS".
	16	Oil seal 2	1	
_	17	Bearing	1	Д

OIL FILTER, WATER PUMP AND CRANKCASE COVER (RIGHT)





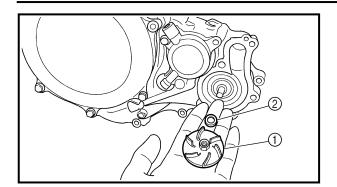

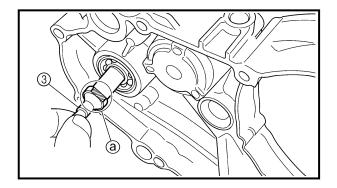

REMOVAL POINTS


EC4G3110


Impeller shaft

- 1. Remove:
 - Impeller (1)
 - Plain washer ②
 - Impeller shaft ③

NOTE: _

Hold the impeller shaft on its width across the flats @ with spanners, etc. and remove the impeller.

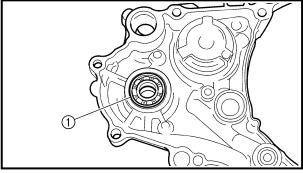

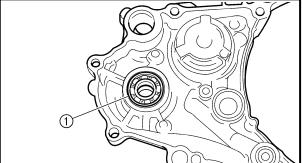

EC4G3210 Oil seal


NOTE: .

It is not necessary to disassemble the water pump, unless there is an abnormality such as excessive change in coolant level, discoloration of coolant, or milky transmission oil.

- 1. Remove:
 - Bearing (1)
 - Oil seal ②




- 1. Inspect:
 - Impeller shaft (1) Bend/wear/damage \rightarrow Replace. Fur deposits \rightarrow Clean.

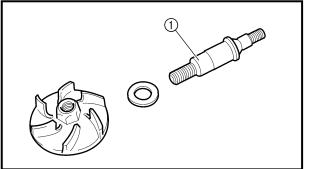

OIL FILTER, WATER PUMP AND CRANKCASE COVER (RIGHT)



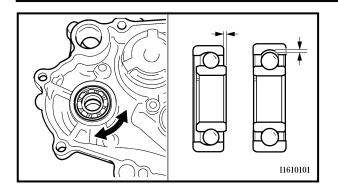

EC4H4600


Bearing


- 1. Inspect:
 - Bearing Rotate inner race with a finger. Rough spot/seizure \rightarrow Replace.

EC444400

Oil seal

- 1. Inspect:
 - Oil seal Wear/damage \rightarrow Replace.

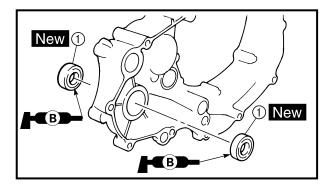

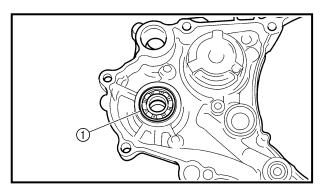

ASSEMBLY AND INSTALLATION

EC4G5110 Oil seal

- 1. Install:
 - Oil seal ① New

- Apply the lithium soap base grease on the oil seal lip.
- Install the oil seal with its manufacture's marks or numbers facing inward.

Bearing

- 1. Install:
 - Bearing (1)


NOTE: .


Install the bearing by pressing its outer race parallel.


OIL FILTER, WATER PUMP AND CRANKCASE COVER (RIGHT)







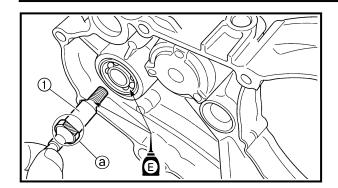

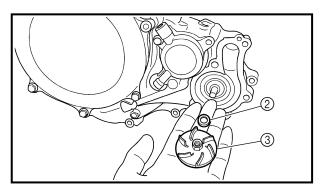

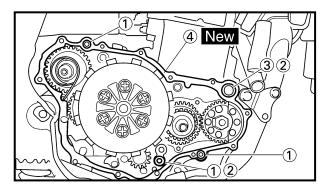

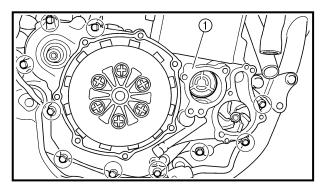

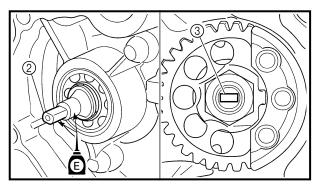

EC4G5220

Impeller shaft

- 1. Install:
 - Impeller shaft ①
 - Plain washer ②
 - Impeller ③

🗽 14 Nm (1.4 m · kg, 10 ft · lb)

NOTE: _

- Take care so that the oil seal lip is not damaged or the spring does not slip off its position.
- When installing the impeller shaft, apply the engine oil on the oil seal lip, bearing and impeller shaft. And install the shaft while turning it.
- Hold the impeller shaft on its width across the flats (a) with spanners, etc. and install the impeller.

Crankcase cover (right)

- 1. Install:
 - Dowel pin (1)
 - O-ring ②
 - Collar (3)
 - Gasket (4) New

2. Install:

- Crankcase cover (right) ①
- Bolt 🗽 10 Nm (

10 Nm (1.0 m ⋅ kg, 7.2 ft ⋅ lb)


NOTE: .

- Apply the engine oil on the impeller shaft end.
- When installing the crankcase cover onto the crankcase, be sure that the impeller shaft end ② aligns with the balancer end slot ③.
- Tighten the bolts in stage, using a crisscross pattern.

OIL FILTER, WATER PUMP AND CRANKCASE COVER (RIGHT)





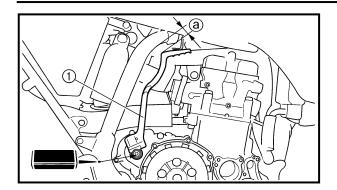

Kick crank


- 1. Install:
 - Kick starter (1)
 - Plain washer
 - Bolt (kick starter)



33 Nm (3.3 m ⋅ kg, 24 ft ⋅ lb)


NOTE: .

Install the kick starter so that the kick starter is as vertical as possible with the distance @ between the kick starter and the frame being 5 mm (0.20 in) or more.

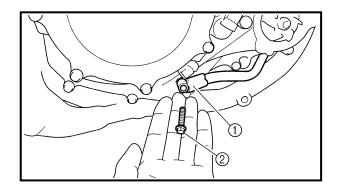

- 2. Install:
 - Oil hose 1
 - Bolt (oil hose) ②

№ 10 Nm (1.0 m · kg, 7.2 ft · lb)

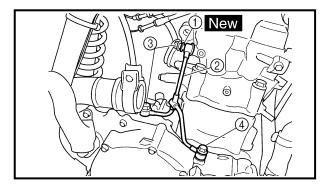


- 3. Install:
 - Copper washer ① New
 - Oil delivery pipe ②
 - Union bolt (M8) ③

🗽 18 Nm (1.8 m · kg, 13 ft · lb)

• Union bolt (M10) ④

20 Nm (2.0 m · kg, 14 ft · lb)

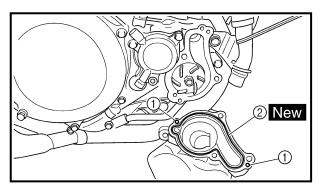


Water pump housing

- 1. Install:
 - Dowel pin 1
 - O-ring ② New

OIL FILTER, WATER PUMP AND CRANKCASE COVER (RIGHT)



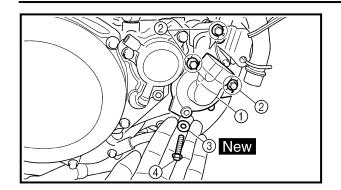




- Water pump housing ①
- Bolt (water pump housing) ②

🗽 10 Nm (1.0 m · kg, 7.2 ft · lb)


- Plain washer ③ New
- Coolant drain bolt (4)

№ 10 Nm (1.0 m · kg, 7.2 ft · lb)

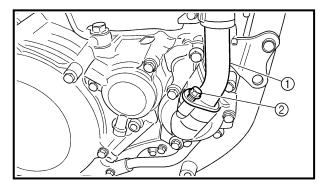

- 3. Install:
 - O-ring
 - Coolant pipe ①
 - Bolt (coolant pipe) ②

№ 10 Nm (1.0 m · kg, 7.2 ft · lb)

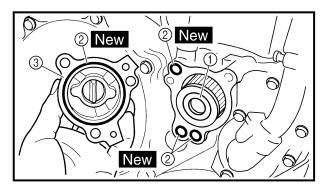


Oil filter

- 1. Install:
 - Oil filter ①
 - O-ring ② New
 - Oil filter cover ③
 - Bolt (oil filter cover)

🗽 10 Nm (1.0 m · kg, 7.2 ft · lb)







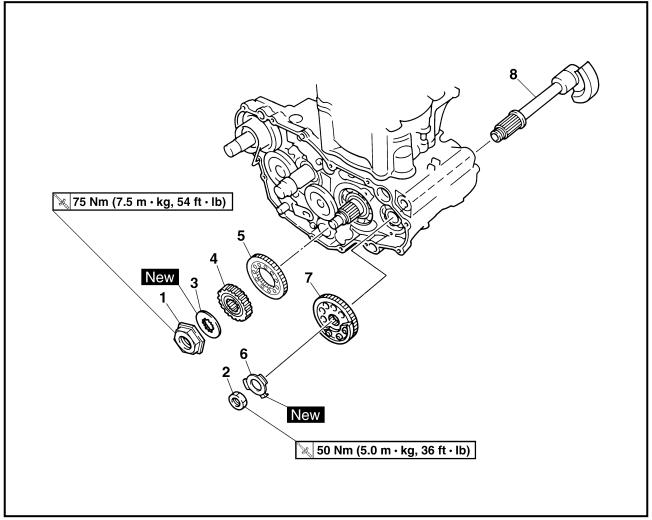



Extent of removal: ① Balancer drive gear ② Balancer

Extent of removal	Order	Part name	Q'ty	Remarks
		BALANCER REMOVAL		
Preparation for removal		Clutch housing		Refer to "CLUTCH" section.
		Crankcase cover (right)		Refer to "OIL FILTER, WATER PUMP AND CRANKCASE COVER (RIGHT)" section.
		Stator		Refer to "CDI MAGNETO" section.
1	1	Nut (primary drive gear)	1	Refer to "REMOVAL POINTS".
2 🕽	2	Nut (balancer)	1	F REIEI TO REMOVAL POINTS.
	3	Lock washer	1	
	4	Primary drive gear	1	
1	5	Balancer drive gear	1	
1 • • • • • • • • • • • • • • • • • • •	6	Lock washer	1	
2	7	Balancer driven gear	1	
	8	Balancer	1	Refer to "REMOVAL POINTS".

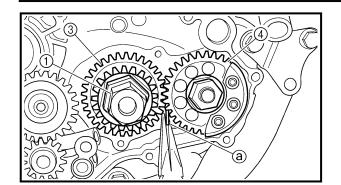

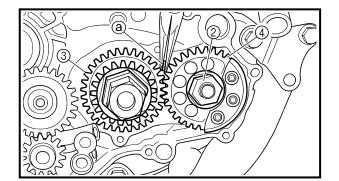

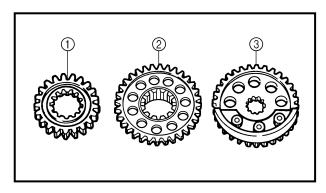

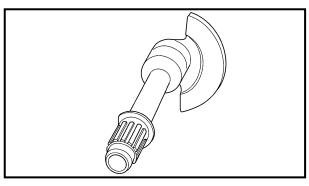

REMOVAL POINTS

Balancer drive gear and balancer driven gear

- 1. Straighten the lock washer tab.
- 2. Loosen:
 - Nut (primary drive gear) 1
 - Nut (balancer) 2

NOTE

Place an aluminum plate ⓐ between the teeth of the balancer drive gear ③ and driven gear ④.

Balancer

- 1. Remove:
 - Balancer (1)

NOTE:

When removing the balancer shaft, align the center of the balancer shaft weight (a) along the line connecting the centers of the crankshaft and balancer shaft.


INSPECTION


Primary drive gear, balancer drive gear and balancer driven gear


- 1. Inspect:
 - Primary drive gear ①
 - Balancer drive gear ②
 - Balancer driven gear ③
 Wear/damage → Replace.


Balancer


- 1. Inspect:
 - Balancer
 Cracks/damage → Replace.

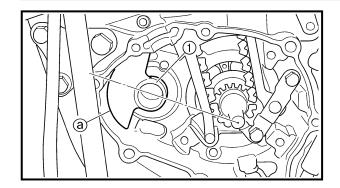

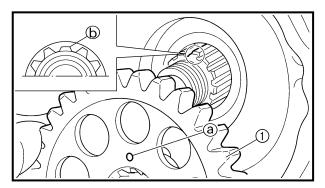

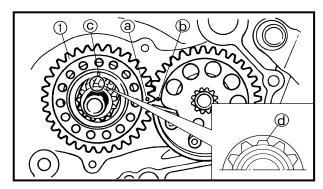

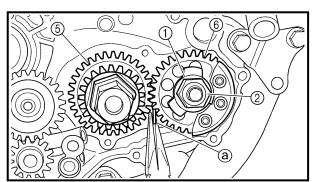

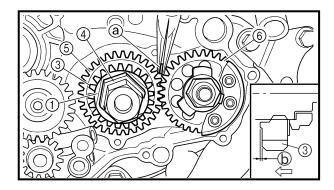

ASSEMBLY AND INSTALLATION Balancer, balancer drive gear and balancer driven gear

- 1. Install:
 - Balancer (1)

NOTE: .

When installing the balancer shaft, align the center of the balancer shaft weight (a) along the line connecting the centers of the crank-shaft and balancer shaft.

- 2. Install:
 - Balancer driven gear ①

NOTE

Install the balancer driven gear onto the balancer while aligning the punch mark ⓐ on the balancer driven gear with the lower spline ⓑ on the balancer end.

- 3. Install:
 - Balancer drive gear (1)

NOTE: .

- Align the punched mark (a) on the balancer drive gear with the punched mark (b) on the balancer driven gear.
- Align the punched mark © on the balancer drive gear with the lower spline d on the crankshaft.
 - 4. Install:
 - Lock washer (1)
 - Nut (balancer) ②

50 Nm (5.0 m ⋅ kg, 36 ft ⋅ lb)

- Primary drive gear ③
- Nut (primary drive gear) (4)


№ 75 Nm (7.5 m · kg, 54 ft · lb)

NOTE: .

- Install the primary drive gear with its stepped side (b) facing the engine.
- Place an aluminum plate (a) between the teeth of the balancer drive gear (5) and driven gear (6).
 - 5. Bend the lock washer tab.

OIL PUMP



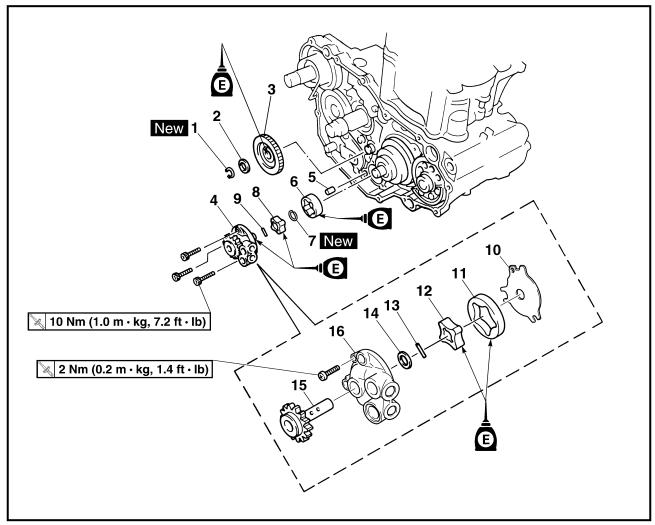


Extent of removal:

① Oil pump removal

② Oil pump disassembly

Extent of removal	Order	Part name	Q'ty	Remarks
		OIL PUMP REMOVAL AND DIS- ASSEMBLY		
Preparation for removal		Clutch housing		Refer to "CLUTCH" section.
		Crankcase cover (right)		Refer to "OIL FILTER, WATER PUMP AND CRANKCASE COVER (RIGHT)" section.
1 1	1	Circlip	1	
	2	Plate washer	1	
1 0	3	Oil pump drive gear	1	
	4	Oil pump assembly	1	
	5	Dowel pin	1	
	6	Outer rotor 2	1	
	7	Circlip	1	
	8	Inner rotor 2	1	
	9	Pin	1	
	10	Oil pump cover	1	
	11	Outer rotor 1	1	
	12	Inner rotor 1	1	

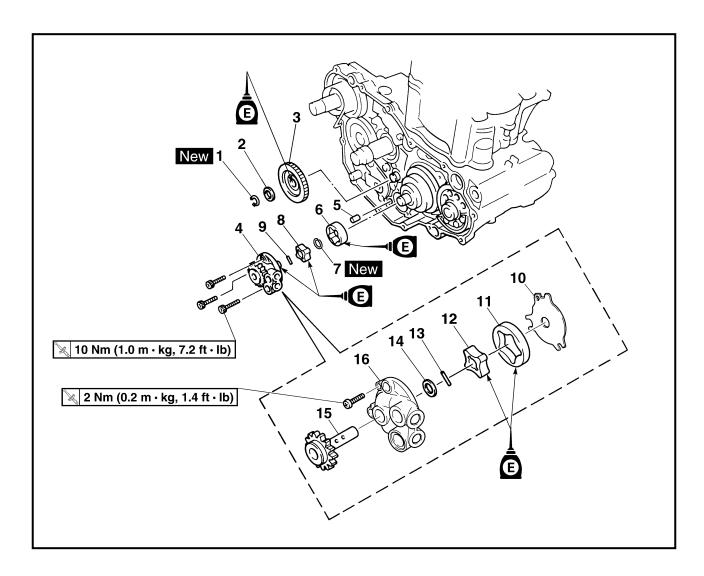


Extent of removal	Order	Part name	Q'ty	Remarks
†	13	Pin	1	
	14	Washer	1	
2	15	Oil pump drive shaft	1	
<u> </u>	16	Rotor housing	1	



INSPECTION

Oil pump

- 1. Inspect:
 - Oil pump drive gear
 - Oil pump driven gear
 - Rotor housing
 - Oil pump cover
 Cracks/wear/damage → Replace.

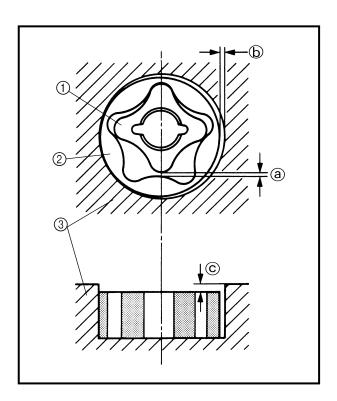




- Tip clearance @
 Between the inner rotor ① and the outer rotor ②.
- Tip clearance (b)
 Between the outer rotor (2) and the rotor housing (3).


 Out of specification → Replace the oil pump.



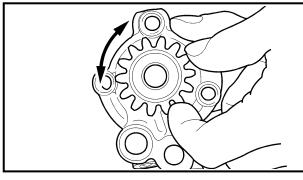

3. Check:

 Unsmooth → Repeat steps #1 and #2 or replace the defective parts.

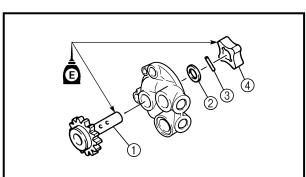


ASSEMBLY AND INSTALLATION Oil pump

- 1. Install:
 - Oil pump drive shaft ①
 - Washer ②
 - Pin ③
 - Inner rotor 1 (4)

NOTE: _

- Apply the engine oil on the oil pump drive shaft and inner rotor 1.
- Fit the pin into the groove in the inner rotor 1.



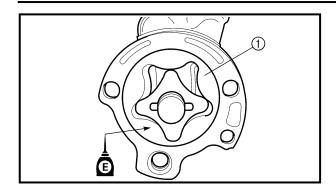


2. Install:

• Outer rotor 1 ①

NOTE: .

Apply the engine oil on the outer rotor 1.

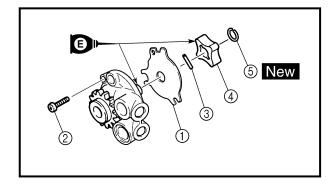

3. Install:


- Oil pump cover ①
- Screw (oil pump cover) ②

2 Nm (0.2 m · kg, 1.4 ft · lb)

- Pin (3)
- Inner rotor 2 ④
- Circlip (5) New

NOTE: _

- Apply the engine oil on the oil pump drive shaft end and inner rotor 2.
- Fit the pin into the groove in the inner rotor 2.

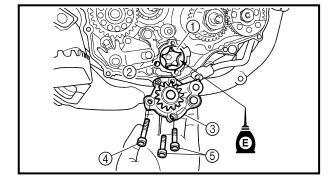

- 4. Install:
 - Outer rotor 2 (1)
 - Dowel pin ②
 - Oil pump assembly (3)
 - Bolt (oil pump assembly)
 [L = 30 mm (1.18 in)] ④


№ 10 Nm (1.0 m · kg, 7.2 ft · lb)

• Bolt (oil pump assembly)

№ 10 Nm (1.0 m · kg, 7.2 ft · lb)

NOTE: .

Apply the engine oil on the outer rotor 2.

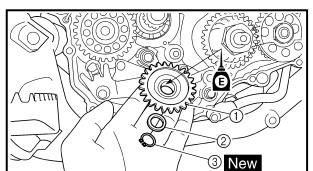

- 5. Install:
 - Oil pump drive gear ①
 - Plate washer ②
 - Circlip ③ New


NOTE:

Apply the engine oil on the oil pump drive gear inner circumference.



KICK AXLE AND SHIFT SHAFT KICK AXLE AND SHIFT SHAFT



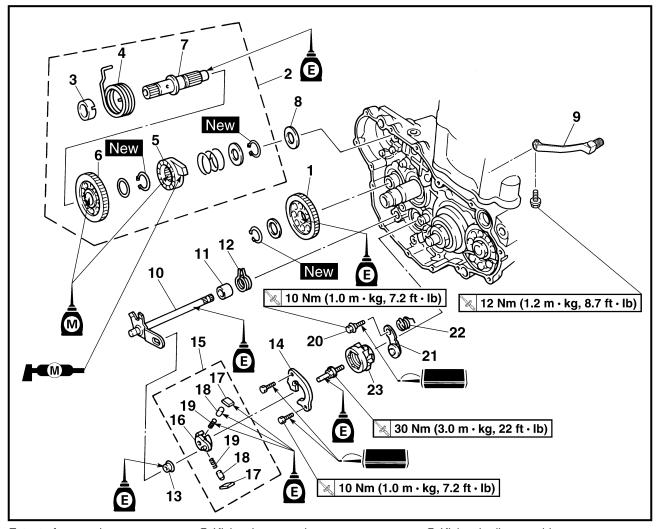


Extent of removal:


- ① Kick axle removal
- ③ Shift shaft removal


- ② Kick axle disassembly
- 4 Segment removal


Extent of removal	Order	Part name	Q'ty	Remarks
		KICK AXLE AND SHIFT SHAFT REMOVAL		
Preparation for removal		Oil pump		Refer to "OIL PUMP" section.
\uparrow	1	Kick idle gear	1	
I	2	Kick axle assembly	1	Refer to "REMOVAL POINTS".
	3	Spring guide	1	
2	4	Torsion spring	1	
	5	Ratchet wheel	1	
	6	Kick gear	1	
	7	Kick axle	1	
①1	8	Plain washer	1	
I	9	Shift pedal	1	
3 4	10	Shift shaft	1	
	11	Collar	1	
 	12	Torsion spring	1	

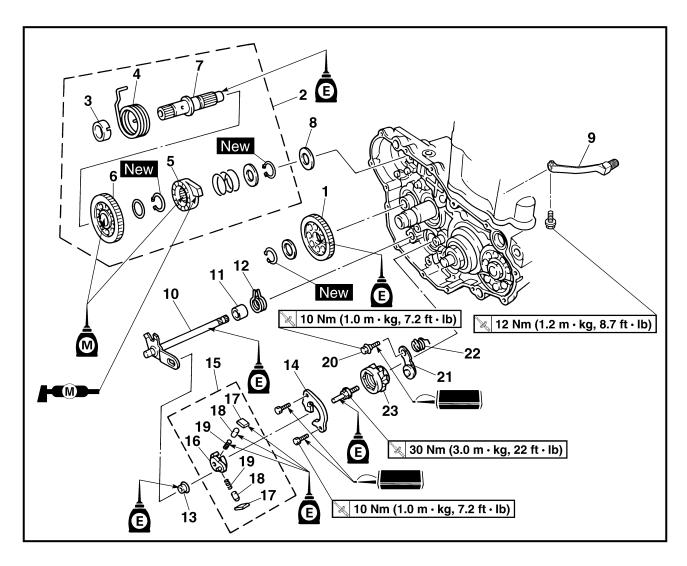


Extent of removal	Order	Part name	Q'ty	Remarks
1	13	Roller	1	
	14	Shift guide	1	D-ft- "DEMOVAL DOINTO"
	15	Shift lever assembly	1	Refer to "REMOVAL POINTS".
	16	Shift lever	1	
	17	Pawl	2	
4	18	Pawl pin	2	
	19	Spring	2	
	20	Bolt (stopper lever)	1	
	21	Stopper lever	1	
	22	Torsion spring	1	
	23	Segment	1	Refer to "REMOVAL POINTS".

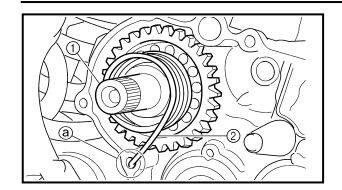

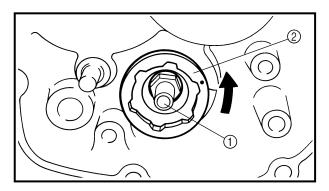

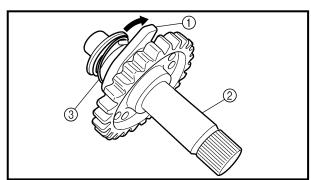

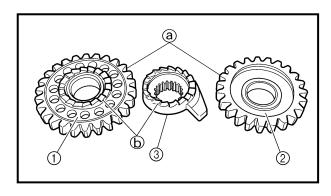

REMOVAL POINTS

EC4B3101

Kick axle assembly

- 1. Remove:
 - Kick axle assembly (1)

NOTE: _

Unhook the torsion spring ② from the hole ③ in the crankcase.

EC4C310

Shift guide and shift lever assembly

- 1. Remove:
 - Bolt (shift guide)
 - Shift guide (1)
 - Shift lever assembly ②

NOTE: _

The shift lever assembly is disassembled at the same time as the shift guide.

EC4N3100

Segment

- 1. Remove:
 - Bolt (segment) ①
 - Segment ②

NOTF:

Turn the segment counterclockwise until it stops and loosen the bolt.

INSPECTION

EC4C4200

Kick axle and ratchet wheel


- 1. Check:
 - Ratchet wheel ① smooth movement Unsmooth movement → Replace.
 - Kick axle ②
 Wear/damage → Replace.
 - Spring ③
 Broken → Replace.

EC4C4300

Kick gear, kick idle gear and ratchet wheel

- 1. Inspect:
 - Kick gear ①
 - Kick idle gear ②
 - Ratchet wheel ③
 - Gear teeth (a)




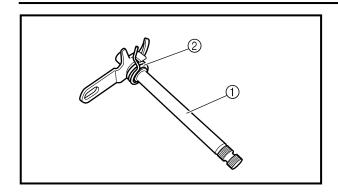

EC4B4400

Shift shaft


- 1. Inspect:
 - Shift shaft ①
 Bend/damage → Replace.
 - Spring ②
 Broken → Replace.

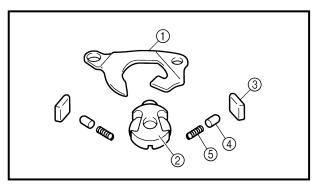

EC4C4100

Shift guide and shift lever assembly


- 1. Inspect:
 - Shift guide ①
 - Shift lever ②
 - Pawl ③
 - Pawl pin ④
 - Spring ⑤
 Wear/damage → Replace.

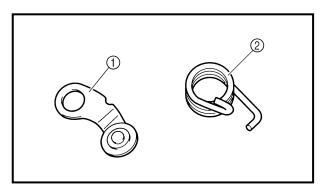

EC4B4500

Stopper lever

- 1. Inspect:
 - Stopper lever ① Wear/damage \rightarrow Replace.
 - Torsion spring ②
 Broken → Replace.

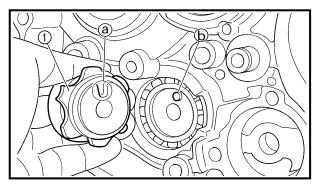

EC4C5000

ASSEMBLY AND INSTALLATION Segment


- 1. Install:
 - Segment (1)
 - Bolt (segment)


№ 30 Nm (3.0 m · kg, 22 ft · lb)


NOTE


Align the notch ⓐ on the segment with the pin ⓑ on the shift cam.




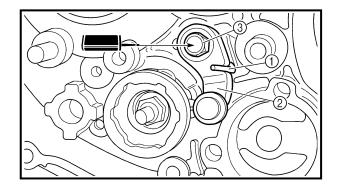

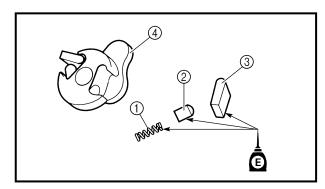

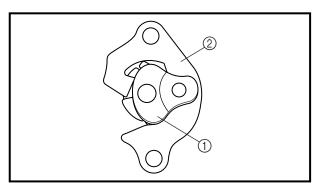

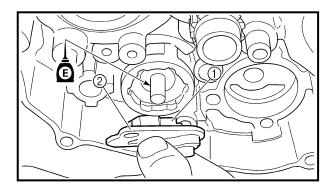

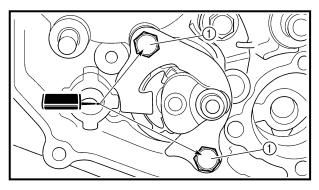

EC4B5111

Stopper lever

- 1. Install:
 - Torsion spring ①
 - Stopper lever ②
 - Bolt (stopper lever) ③



(■ 10 Nm (1.0 m · kg, 7.2 ft · lb)

NOTE: _

Align the stopper lever roller with the slot on segment.

Shift guide and shift lever assembly

- 1. Install:
 - Spring (1)
 - Pawl pin ②
 - Pawl ③

To shift lever (4).

NOTE: _

Apply the engine oil on the springs, pawl pins and pawls.

- 2. Install:
 - Shift lever assembly ① To shift guide 2.

- 3. Install:
 - Shift lever assembly 1)
 - Shift guide ②

NOTE: .

- The shift lever assembly is installed at the same time as the shift guide.
- Apply the engine oil on the bolt (segment) shaft.
 - 4. Install:
 - Bolt (shift guide) ①





10 Nm (1.0 m ⋅ kg, 7.2 ft ⋅ lb)


KICK AXLE AND SHIFT SHAFT





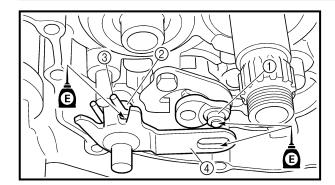

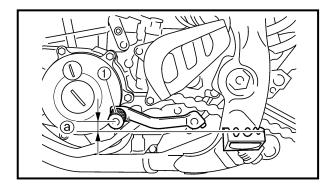

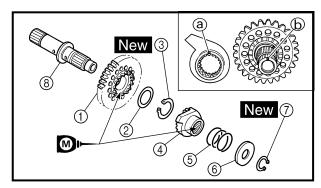



- 1. Install:
 - Roller (1)
 - Collar (2)
 - Torsion spring ③
 - Shift shaft (4)

NOTE: .

Apply the engine oil on the roller and shift shaft.

- 2. Install:
 - Shift pedal (1)
 - Bolt (shift pedal)

№ 12 Nm (1.2 m · kg, 8.7 ft · lb)

NOTE: .


When installing the shift pedal onto the shift shaft, be sure that the center of the shift pedal is about 2 mm (0.08 in) (a) above the top of the footrest.

Kick axle assembly

- 1. Install:
 - Kick gear (1)
 - Plain washer ②
 - Circlip (3) New
 - Ratchet wheel (4)
 - Spring (5)
 - Plain washer 6
 - Circlip ⑦ New To kick axle ⑧.

NOTE: _

- Apply the molybdenum disulfide oil on the inner circumferences of the kick gear and ratchet wheel.

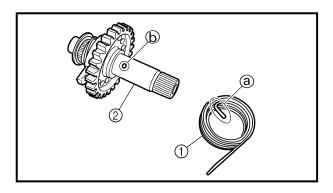


- 2. Install:
 - Torsion spring ①
 To kick axle ②.


NOTE: _


Make sure the stopper ⓐ of the torsion spring fits into the hole ⓑ on the kick axle.

KICK AXLE AND SHIFT SHAFT



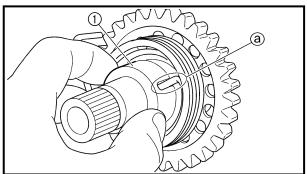

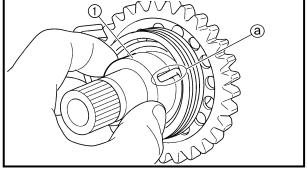

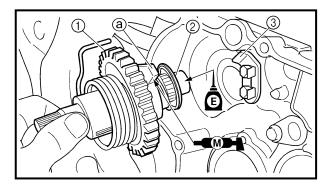

3. Install:


• Spring guide 1

Slide the spring guide into the kick axle, make sure the groove a in the spring guide fits on the stopper of the torsion spring.

4. Install:

- Kick axle assembly 1
- Plain washer ②

- Apply the molybdenum disulfide grease on the contacting surfaces of the kick axle stopper (a) and stopper plate (3).
- Apply the engine oil on the kick axle.
- Slide the kick axle assembly into the crankcase and make sure the kick axle stopper fits into the stopper plate.

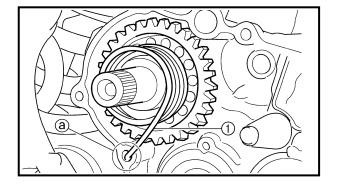

5. Hook:

• Torsion spring (1)

Turn the torsion spring clockwise and hook into the proper hole (a) in the crankcase.

Kick idle gear


- 1. Install:
 - Kick idle gear 1
 - Plain washer ②
 - Circlip ③ New

- Install the kick idle gear with its depressed side @ toward you.
- Apply the engine oil on the kick idle gear inner circumference.

③ New

CDI MAGNETO




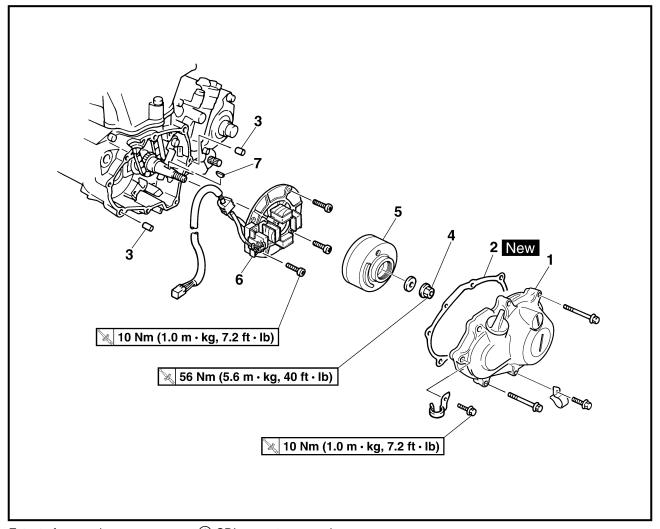


Extent of removal:

① CDI magneto removal

Extent of removal	Order	Part name	Q'ty	Remarks
		CDI MAGNETO REMOVAL		
Preparation for removal		Seat and fuel tank		Refer to "SAET, FUEL TANK AND SIDE COVERS" section.
		Bolt [radiator (left)]		Refer to "RADIATOR" section.
		Disconnect the CDI magneto lead.		
1	1	Crankcase cover (left)	1	
	2	Gasket	1	
	3	Dowel pin	2	
1	4	Nut (rotor)	1	Use special tool.
	5	Rotor	1	Refer to "REMOVAL POINTS".
	6	Stator	1	
 	7	Woodruff key	1	

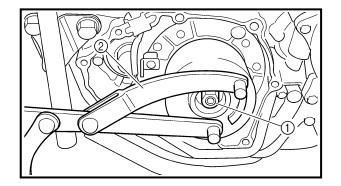

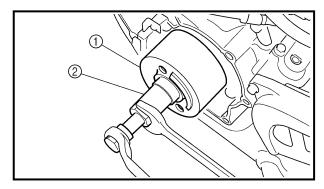

REMOVAL POINTS

EC4L3101

Rotor

- 1. Remove:
 - Nut (rotor) ①
 - Plain washer
 Use the rotor holding tool ②.



Rotor holding tool: YU-1235/90890-01235


- 2. Remove:
 - Rotor ①
 Use the flywheel puller ②.




Flywheel puller: YM-1189/90890-01189

NOTE: _

When installing the flywheel puller, turn it counterclockwise.

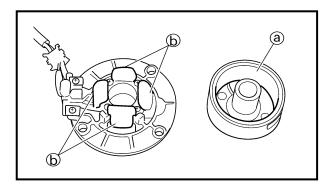

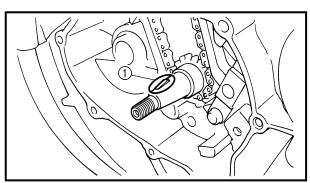

EC4L4000

INSPECTION

EC4L4101


CDI magneto

- 1. Inspect:
 - Rotor inner surface (a)
 - Stator outer surface ⑤
 Damage → Inspect the crankshaft runout and crankshaft bearing.
 If necessary, replace CDI magneto and/ or stator.

EC4L4200

Woodruff key

- 1. Inspect:
 - Woodruff key ①
 Damage → Replace.

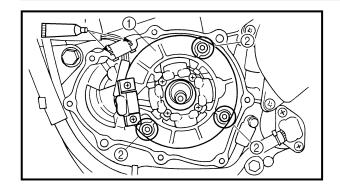

EC4L5000

ASSEMBLY AND INSTALLATION CDI magneto

- 1. Install:
 - Stator (1)
 - Screw (stator) ②


№ 10 Nm (1.0 m · kg, 7.2 ft · lb)

NOTE: .

- Apply the sealant to the grommet of the CDI magneto lead.
- Tighten the screws using the T30 bit.




Quick gasket[®]: ACC-QUICK-GS-KT YAMAHA Bond No. 1215: 90890-85505

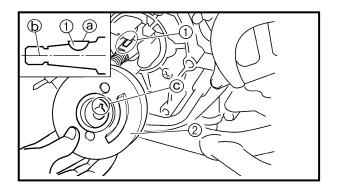

- 2. Install:
 - Woodruff key 1)
 - Rotor ②

NOTE: _

- Clean the tapered portions of the crankshaft and rotor.
- When installing the woodruff key, make sure that its flat surface (a) is in parallel with the crankshaft center line (b).
- When installing the rotor, align the keyway © of the rotor with the woodruff key.

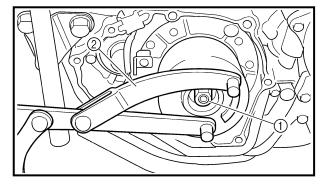

- 3. Install:
 - Plain washer
 - Nut (rotor) 1

🗽 56 Nm (5.6 m · kg, 40 ft · lb)


Use the rotor holding tool 2.



Rotor holding tool: YU-1235/90890-01235


CDI MAGNETO



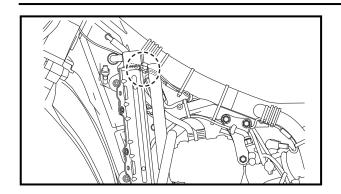

4. Connect:

CDI magneto lead
 Refer to "CABLE ROUTING DIA-GRAM" section in the CHAPTER 2.

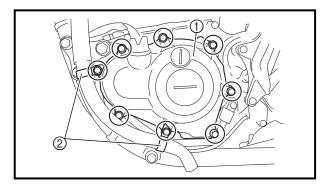

5. Install:


- Gasket [crankcase cover (left)] New
- Crankcase cover (left) ①
- Hose holder (cylinder head breather hose) ②
- Bolt [crankcase cover (left)]

10 Nm (1.0 m · kg, 7.2 ft · lb)


NOTE: _

Tighten the bolts in stage, using a crisscross pattern.



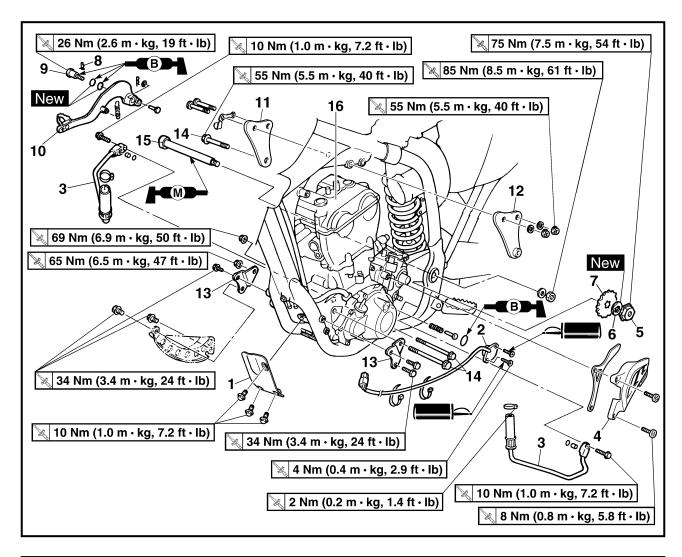



Extent of removal	Order	Part name	Q'ty	Remarks
Preparation for removal		ENGINE REMOVAL Hold the machine by placing the suitable stand under the frame.		A WARNING Support the machine securely so there is no danger of it falling over.
		Seat and fuel tank		Refer to "SEAT, FUEL TANK AND SIDE COVERS" section.
		Carburetor		Refer to "CARBURETOR" section.
		Exhaust pipe and silencer		Refer to "EXHAUST PIPE AND SILENCER" section.
		Clutch cable and guide		Disconnect at engine side.
		Radiator		Refer to "RADIATOR" section.
		Shift pedal		Refer to "CDI MAGNETO" section.
		Cylinder head breather hose and oil tank breather hose		Refer to "CAMSHAFTS" section.
		Drain the engine oil		Refer to "ENGINE OIL REPLACEMENT"
				section in the CHAPTER 3.
		Ignition coil		
		Disconnect the CDI magneto lead.		

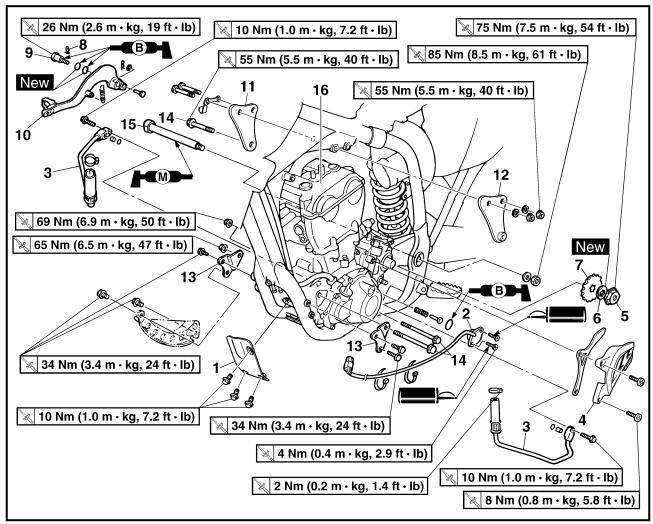



Extent of removal: ① Engine removal

Extent of removal	Order	Part name	Q'ty	Remarks
†	1	Engine skid plate (front)	1	
	2	Neutral switch	1	
	3	Oil hose	2	
	4	Chain cover	1	
	5	Nut (drive sprocket)	1	П
	6	Lock washer	1	- Refer to "REMOVAL POINTS".
	7	Drive sprocket	1	Ц
	8	Clip	1	
Ψ	9	Bolt (brake pedal)	1	
	10	Brake pedal	1	
	11	Engine upper bracket (right)	1	
	12	Engine upper bracket (left)	1	
	13	Engine lower bracket	2	
	14	Engine mounting bolt	3	
	15	Pivot shaft	1	Pofor to "PEMOVAL POINTS"
<u> </u>	16	Engine	1	Refer to "REMOVAL POINTS".

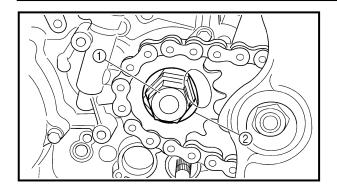

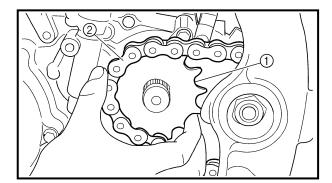

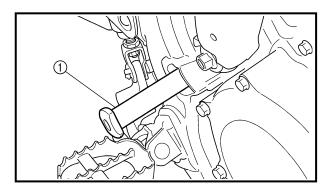

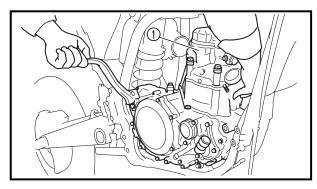

EC4M3000

REMOVAL POINTS

EC4F3100

Drive sprocket

- 1. Remove:
 - Nut (drive sprocket) ①
 - Lock washer ②

NOTE: .

- Straighten the lock washer tab.
- Loosen the nut while applying the rear brake.
 - 2. Remove:
 - Drive sprocket ①
 - Drive chain ②

NOTF:

Remove the drive sprocket together with the drive chain.

EC4M3301

Engine removal

- 1. Remove:
 - Pivot shaft ①

NOTE: .


If the pivot shaft is pulled all the way out, the swingarm will come loose. If possible, insert a shaft of similar diameter into the other side of the swingarm to support it.

- 2. Remove:
 - Engine ①
 From right side.

NOTE:

Make sure that the couplers, hoses and cables are disconnected.



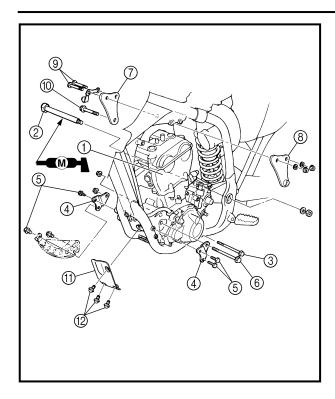



ASSEMBLY AND INSTALLATION Engine installation

- 1. Install:
 - Engine ①
 Install the engine from right side.
 - Pivot shaft ②

• Engine mounting bolt (lower) ③

№ 69 Nm (6.9 m · kg, 50 ft · lb)

- Engine lower bracket 4
- Bolt (engine bracket) (5)

34 Nm (3.4 m ⋅ kg, 24 ft ⋅ lb)

• Engine mounting bolt (front) (6)

№ 65 Nm (6.5 m · kg, 47 ft · lb)

- Engine upper bracket (right) (7)
- Engine upper bracket (left) ®
- Bolt (engine bracket) (9)

№ 55 Nm (5.5 m · kg, 40 ft · lb)

• Engine mounting bolt (upper) 100

№ 55 Nm (5.5 m · kg, 40 ft · lb)

- Engine skid plate (front) 11
- Bolt (engine skid plate) (2)

№ 10 Nm (1.0 m · kg, 7.2 ft · lb)

NOTE

Apply the molybdenum disulfide grease on the pivot shaft.

EC4M5211

Brake pedal

- 1. Install:
 - Spring
 - Brake pedal (1)
 - O-ring ② New
 - Bolt (brake pedal) ③

26 Nm (2.6 m · kg, 19 ft · lb)

• Clip (4)

NOTE: .


- Apply the lithium soap base grease on the bolt, O-rings and brake pedal bracket.
- Install the clip with its stopper portion (a) facing inward.


Drive sprocket

- 1. Install:
 - Drive sprocket 1
 - Drive chain ②


NOTE:

Install the drive sprocket together with the drive chain.

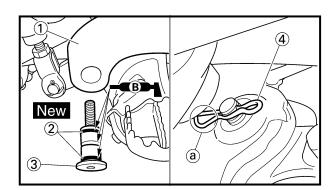

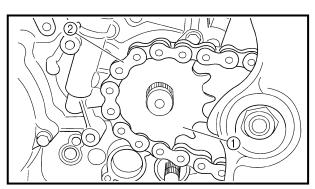



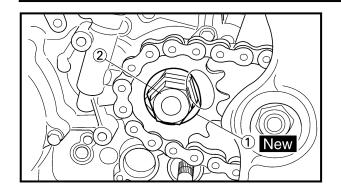

2. Install:


• Lock washer ① New

• Nut (drive sprocket) (2)

№ 75 Nm (7.5 m · kg, 54 ft · lb)

NOTE: .

Tighten the nut while applying the rear brake.

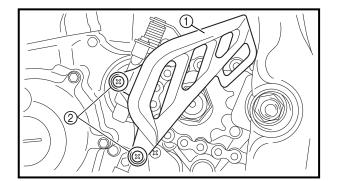

3. Bend the lock washer tab to lock the nut.


4. Install:

• Chain guide

• Chain cover ①

• Screw (chain cover) ②

| **8 Nm (0.8 m ⋅ kg, 5.8 ft ⋅ lb)**

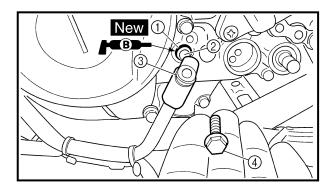

5. Install:

O-ring ① New

• Dowel pin ②


• Oil hose ③

• Bolt (oil hose) 4

№ 10 Nm (1.0 m · kg, 7.2 ft · lb)

NOTE: .

Apply the lithium soap base grease on the Oring.

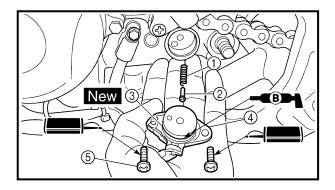

6. Install:

• Spring ①

• Pin ②

O-ring (3) New

• Neutral switch 4

• Screw (neutral switch) ⑤

(■ 4 Nm (0.4 m · kg, 2.9 ft · lb)


NOTE:

Apply the lithium soap base grease on the Oring.




CRANKCASE AND CRANKSHAFT

CRANKCASE AND CRANKSHAFT

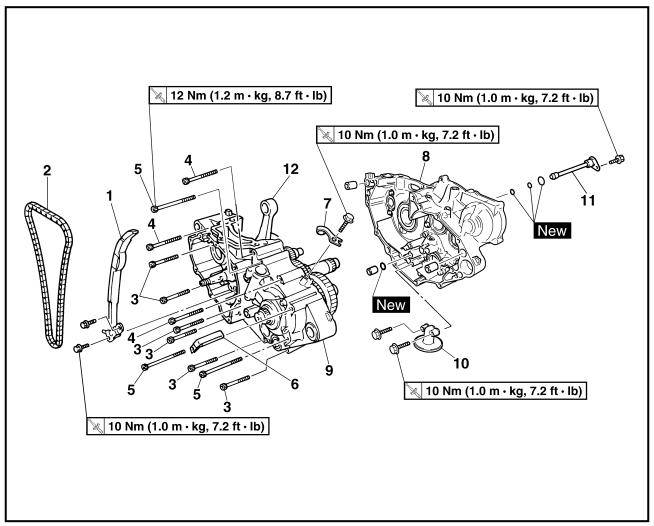

Francisco de la companya del companya del companya de la companya	O O	Θ O I I II I
Extent of removal:	Crankcase separation	② Crankshaft removal


Extent of removal	Order	Part name	Q'ty	Remarks
		CRANKCASE SEPARATION		
Preparation for removal		Engine		Refer to "ENGINE REMOVAL" section.
		Piston		Refer to "CYLINDER AND PISTON" section.
		Balancer		Refer to "BALANCER" section.
		Kick axle assembly		Refer to "KICK AXLE AND SHIFT
		Segment		SHAFT" section.
		Stator		Refer to "CDI MAGNETO" section.
1	1	Timing chain guide (rear)	1	
	2	Timing chain	1	
	3	Bolt (50 mm)	6	П
	4	Bolt (60 mm)	3	
()	5	Bolt (75 mm)	3	
	6	Hose guide	1	- Refer to "REMOVAL POINTS".
	7	Clutch cable holder	1	
	8	Crankcase (right)	1	
↓ ↓	9	Crankcase (left)	1	Ц

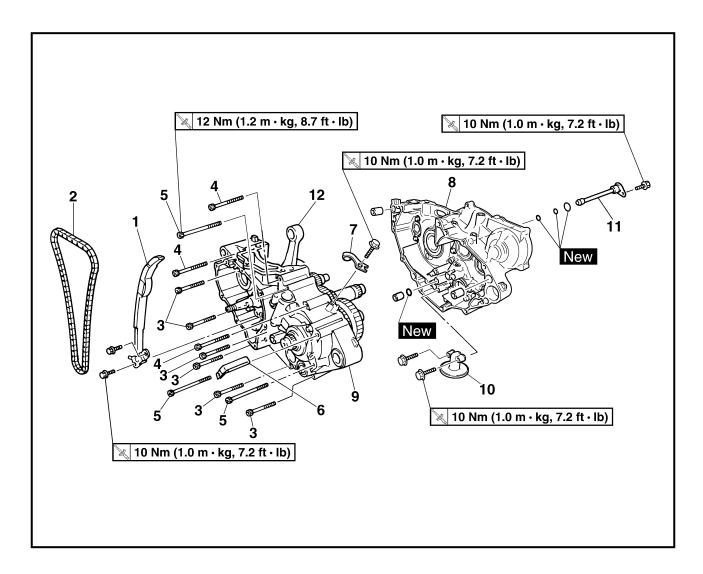

Extent of removal	Order	Part name	Q'ty	Remarks
1	10	Oil strainer	1	
2	11	Oil delivery pipe 2	1	
 	12	Crankshaft	1	Use special tool.
				Refer to "REMOVAL POINTS".



CRANKCASE BEARING

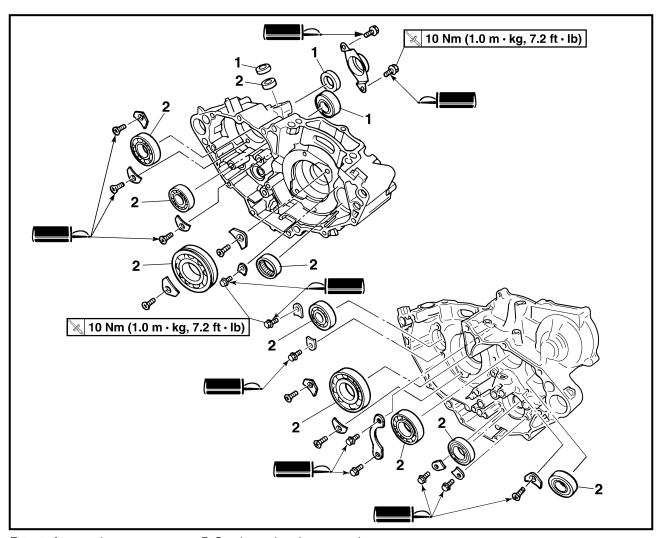


Extent of removal:


① Crankcase bearing removal


Extent of removal	Order	Part name	Q'ty	Remarks
		CRANKCASE BEARING REMOVAL		
Preparation for removal		Transmission Shift cam and shift fork		Refer to "TRANSMISSION, SHIFT CAM AND SHIFT FORK" section.
1	1	Oil seal	3	
<u> </u>	2	Bearing	10	Refer to "REMOVAL POINTS".





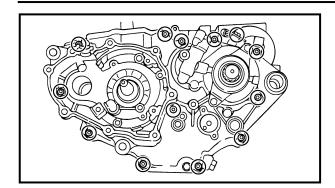

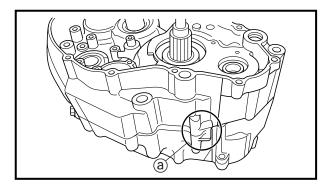

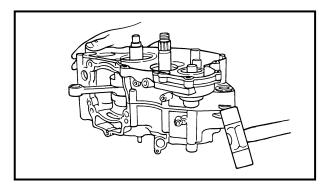

REMOVAL POINTS

Crankcase

- 1. Separate:
 - Crankcase (right)
 - Crankcase (left)

Separation steps:

 Remove the crankcase bolts, hose guide and clutch cable holder.

NOTE: .

Loosen each bolt 1/4 of a turn at a time and after all the bolts are loosened, remove them.

• Remove the crankcase (right).

NOTE:

- Place the crankcase with its left side downward and split it by inserting a screwdriver tip into the splitting slit (a) in the crankcase.
- Lift the crankcase (right) horizontally while lightly patting the case splitting slit and engine mounting boss using a soft hammer, and leave the crankshaft and transmission with the crankcase (left).


CAUTION:


Use soft hammer to tap on the case half. Tap only on reinforced portions of case. Do not tap on gasket mating surface. Work slowly and carefully. Make sure the case halves separate evenly. If one end "hangs up", take pressure off the push screw, realign, and start over. If the cases do not separate, check for a remaining case screw or fitting. Do not force.


Remove the dowel pins and O-ring.







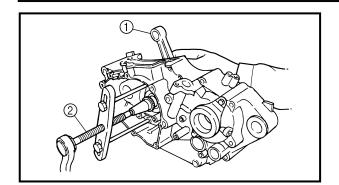

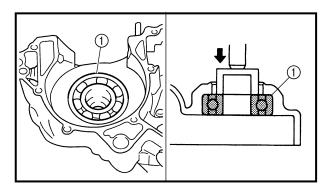

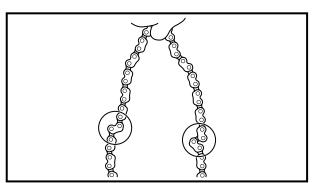

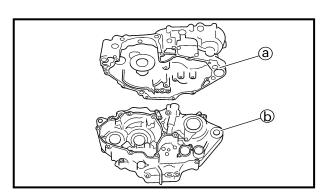

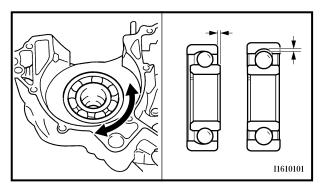

Crankshaft

- 1. Remove:
 - Crankshaft ①
 Use the crankcase separating tool ②.



Crankcase separating tool: YU-1135-A/90890-01135

CAUTION:

Do not use a hammer to drive out the crankshaft.

Crankshaft bearing

- 1. Remove:
 - Bearing (1)

NOTE

- Remove the bearing from the crankcase by pressing its inner race.
- Do not use the removed bearing.

INSPECTION

Timing chain and timing chain guide

- 1. Inspect:
 - Timing chain
 Cracks/stiff → Replace the timing chain and camshaft sprocket as a set.
- 2. Inspect:
 - Timing chain guide
 Wear/damage → Replace.

EC4N4101


Crankcase


- 1. Inspect:
 - Contacting surface ⓐ
 Scratches → Replace.
 - Engine mounting boss ⊕, crankcase Cracks/damage → Replace.
- 2. Inspect:
 - Bearing
 Rotate inner race with a finger.

 Rough spot/seizure → Replace.
- 3. Inspect:
 - Oil seal
 Wear/damage → Replace.





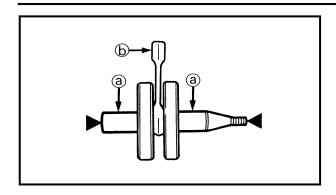

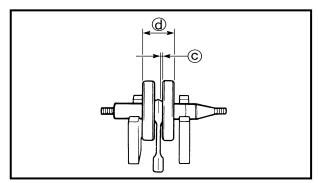

EC4N4201


Crankshaft

- 1. Measure:
 - Runout limit ⓐ
 - Small end free play limit (b)
 - Connecting rod big end side clearance ©
 - Crank width ⓓ
 Out of specification → Replace.
 Use the dial gauge and a thickness gauge.




Dial gauge and stand: YU-3097/90890-01252

(*	Standard	<limit></limit>
Runout limit:	0.03 mm (0.0012 in)	0.05 mm (0.002 in)
Small end free play:	0.4 ~ 1.0 mm (0.016 ~ 0.039 in)	2.0 mm (0.08 in)
Side clearance:	0.15 ~ 0.45 mm (0.0059 ~ 0.0177 in)	0.50 mm (0.02 in)
Crack width:	61.95 ~ 62.00 mm (2.439 ~ 2.441 in)	_

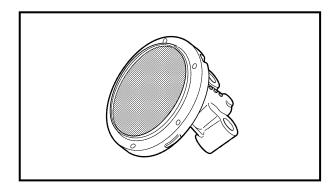

Oil strainer


- 1. Inspect:
 - $\bullet \mbox{ Oil strainer} \\ \mbox{ Damage} \rightarrow \mbox{Replace}.$

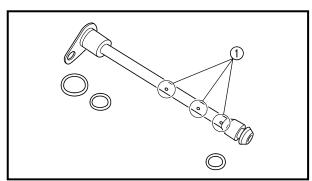

Oil delivery pipe

- 1. Inspect:
 - Oil delivery pipe ${\sf Cracks/damage} \to {\sf Replace}.$
 - Oil delivery pipe holes ①
 Clogged → Blow out with compressed air.



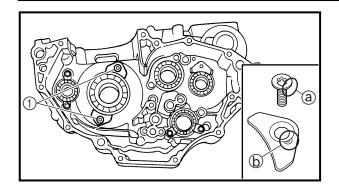

EC4N5000

ASSEMBLY AND INSTALLATION Crankshaft bearing

- 1. Install:
 - Bearing New
 - Bearing stopper
 - Bolt (bearing stopper)

| 10 Nm (1.0 m ⋅ kg, 7.2 ft ⋅ lb)

Screw (bearing stopper)

■ 10 Nm (1.0 m · kg, 7.2 ft · lb)


• Screw [bearing stopper (crankshaft)] ①


№ 10 Nm (1.0 m · kg, 7.2 ft · lb)

To crankcase (left and right).

NOTE: .

- Install the bearing by pressing its outer race parallel.
- To prevent the screw [bearing stopper (crankshaft)] from becoming loose, crush the screw head periphery (a) into the concave (b) using a punch etc. In so doing, take care not to damage the screwdriver receiving hole in the screw head.

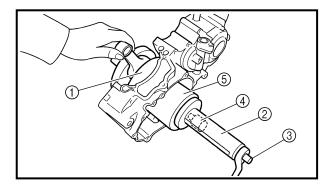

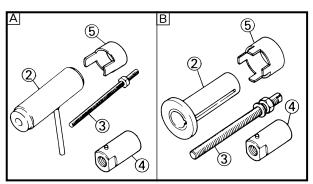

Crankshaft

- 1. Install:
 - Crankshaft ①
 Use the crankshaft installing tool ②, ③,
 ④ and ⑤.



Crankshaft installing pot ②:
YU-90050/90890-01274
Crankshaft installing bolt ③:
YU-90050/90890-01275
Adaptor (M12) ④:
YU-90063/90890-01278
Spacer (crankshaft installer) ⑤:
YM-91044/90890-04081


- A For USA and CDN
- **B** Except for USA and CDN

	_	_	_	_	
N		Т	П		1
v	u		ш	ᆫ	

- Hold the connecting rod at top dead center with one hand while turning the nut of the installing tool with the other. Operate the installing tool until the crankshaft bottoms against the bearing.
- Before installing the crankshaft, clean the contacting surface of crankcase.


C													

Do not use a hammer to drive in the crankshaft.

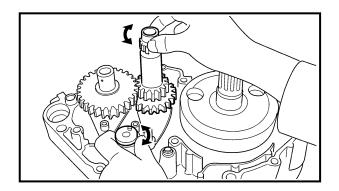

2. Check:

- Shifter operation
- Transmission operation
 Unsmooth operation → Repair.

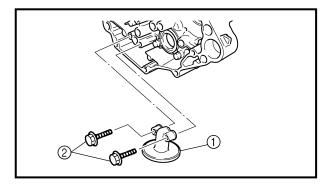

- 3. Install:
 - Oil strainer (1)
 - Bolt (oil strainer) ②

№ 10 Nm (1.0 m · kg, 7.2 ft · lb)




Sealant
 On the crankcase (right) ①.




Quick gasket®: ACC-QUICK-GS-KT YAMAHA Bond No. 1215: 90890-85505

NOTE:

Clean the contacting surface of crankcase (left and right) before applying the sealant.

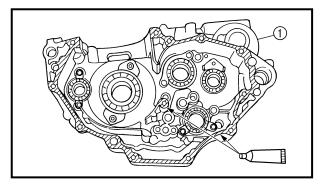



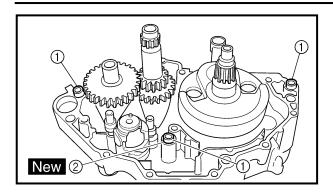

5. Install:

• Dowel pin ①


O-ring ② New

Crankcase (right)
 To crankcase (left).

NOTE:

 Fit the crankcase (right) onto the crankcase (left). Tap lightly on the case with soft hammer.

When installing the crankcase, the connecting rod should be positioned at TDC (top dead center).

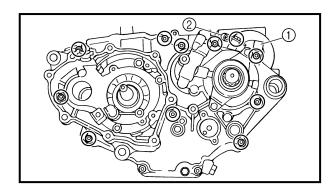

6. Tighten:

• Hose guide ①

• Clutch cable holder ②

• Bolt (clutch cable holder)

№ 10 Nm (1.0 m · kg, 7.2 ft · lb)

• Bolt (crankcase)

12 Nm (1.2 m ⋅ kg, 8.7 ft ⋅ lb)

NOTE: _

Tighten the crankcase tightening bolts in stage, using a crisscross pattern.

7. Install:

• Oil delivery pipe

O-ring New

Bolt (oil delivery pipe)

№ 10 Nm (1.0 m · kg, 7.2 ft · lb)

8. Install:

Timing chain

• Timing chain guide (rear)

• Bolt (timing chain guide)

№ 10 Nm (1.0 m · kg, 7.2 ft · lb)

9. Remove:

Sealant

Forced out on the cylinder mating surface.

10. Apply:

Engine oil

To the crank pin, bearing and oil delivery hole.


11. Check:

Crankshaft and transmission operation.
 Unsmooth operation → Repair.





TRANSMISSION, SHIFT CAM AND SHIFT FORK TRANSMISSION, SHIFT CAM AND SHIFT FORK

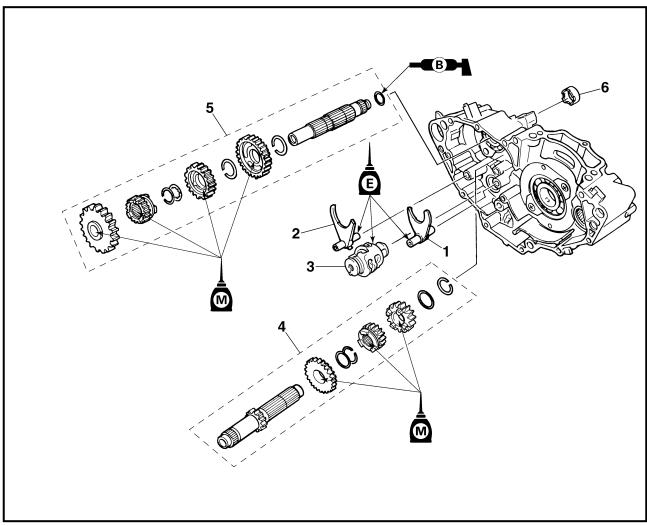


Extent of removal:

① Shift fork, shift cam, main axle and drive axle removal

Extent of removal	Order	Part name	Q'ty	Remarks
		TRANSMISSION, SHIFT CAM AND SHIFT FORK REMOVAL		
Preparation for removal		Engine		Refer to "ENGINE REMOVAL" section.
		Separate the crankcase.		Refer to "CRANKCASE AND CRANK-SHAFT" section.
1	1	Shift fork 1	1	7
	2	Shift fork 2	1	
	3	Shift cam	1	- Refer to "REMOVAL POINTS".
	4	Main axle	1	
	5	Drive axle	1	Ц
 	6	Collar	1	



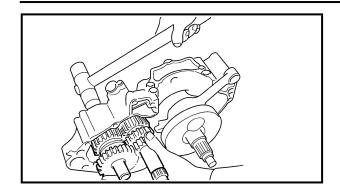


REMOVAL POINTS Shift fork, shaft cam and transmission

- 1. Remove:
 - Shift forks
 - Shift cam
 - Main axle
 - Drive axle

NOTE: .

- Tap lightly on the transmission drive axle and shift cam with a soft hammer to remove.
- Remove assembly carefully. Note the position of each part. Pay particular attention to the location and direction of shift forks.

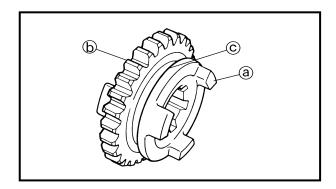


EC4H4000 INSPECTION

EC4H4200

Gears

- 1. Inspect:
 - Matching dog @
 - Gear teeth (b)
 - Shift fork groove © Wear/damage \rightarrow Replace.

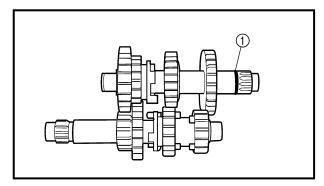


2. Inspect:

• O-ring ①

Damage \rightarrow Replace.

- 3. Check:
 - Gears movement Unsmooth movement → Repair or replace.

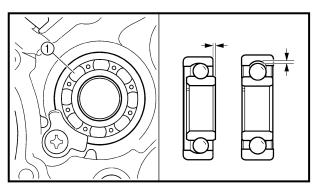


EC4H4600

Bearing

- 1. Inspect:
 - Bearing ① Rotate inner race with a finger. Rough spot/seizure \rightarrow Replace.




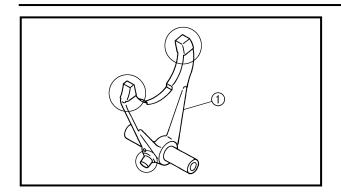

EC4H4801


Shift fork, shift cam and segment

- 1. Inspect:
 - Shift fork ①
 Wear/damage/scratches → Replace.

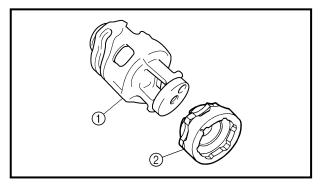

2. Inspect:

- Shift cam ①
- Segment ②
 Bend/wear/damage → Replace.

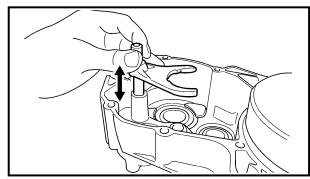


3. Check:

 Shift fork movement Unsmooth operation → Replace shift fork.

NOTE:

For a malfunctioning shift fork, replace not only the shift fork itself but the two gears each adjacent to the shift fork.

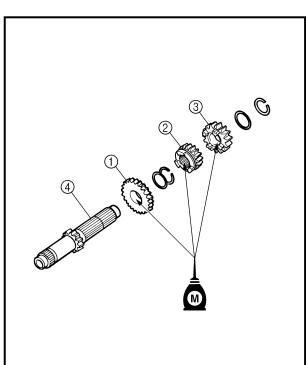

ASSEMBLY AND INSTALLATION Transmission


- 1. Install:
 - 4th pinion gear (20T) ①
 - 3rd pinion gear (18T) ②
 - 2nd pinion gear (16T) ③
 To main axle ④.

NOTE: .

- Apply the molybdenum disulfide oil on the 2nd and 5th pinion gears inner circumference and on the end surface.
- Apply the molybdenum disulfide oil on the 3rd pinion gear inner circumference.





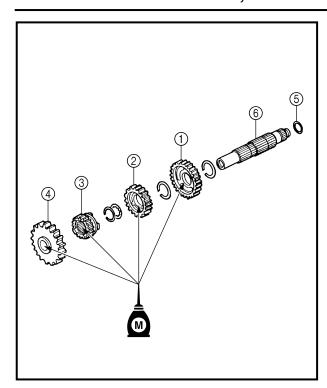


- 2. Install:
 - 2nd wheel gear (25T) ①
 - 3rd wheel gear (23T) ②
 - 4th wheel gear (21T) (3)
 - 1st wheel gear (27T) 4
 - O-ring (5)

To drive axle 6.


NOTE: .

- Apply the molybdenum disulfide oil on the 1st, 2nd and 3rd wheel gears inner circumference and on the end surface.
- Apply the molybdenum disulfide oil on the 4th wheel gear inner circumference.
- Apply the lithium soap base grease on the Oring.

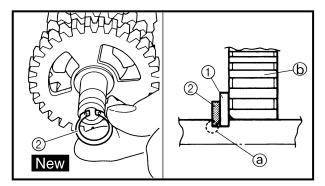


- 3. Install:
 - Plain washer (1)
 - Circlip ② New

- Be sure the circlip sharp-edged corner @ is positioned opposite side to the plain washer and gear (b).
- Be sure the circlip end © is positioned at axle spline groove d.

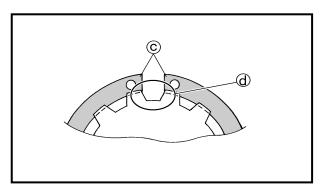

- 4. Install:
 - Collar (1)

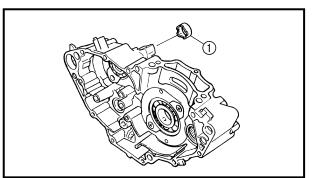


NOTE: .

- Apply the lithium soap base grease on the oil seal lip.
- When installing the spacer into the crankcase, pay careful attention to the crankcase oil seal lip.





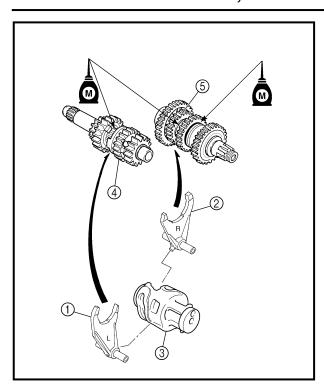


- 5. Install:
 - Shift fork 1 (L) ①
 - Shift fork 2 (R) ②

To main axle and drive axle.

NOTE: .

- Apply the molybdenum disulfide oil on the shift fork grooves.
- Mesh the shift fork #1 (L) with the 3rd pinion gear ④ on the main axle.
- Mesh the shift fork #2 (R) with the 4th wheel gear ⑤ on the drive axle.

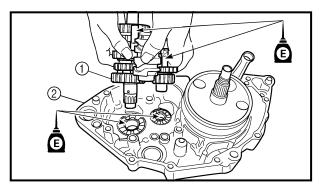


6. Install:

Transmission assembly ①
 To crankcase (left) ②.

NOTE:

Apply the engine oil on the bearings and guide bars.

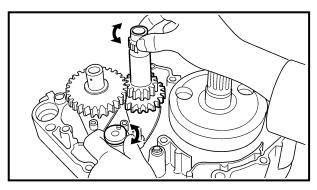

7. Check:


- Shifter operation
- Transmission operation
 Unsmooth operation → Repair.



CHASSIS

FRONT WHEEL AND REAR WHEEL

FRONT WHEEL

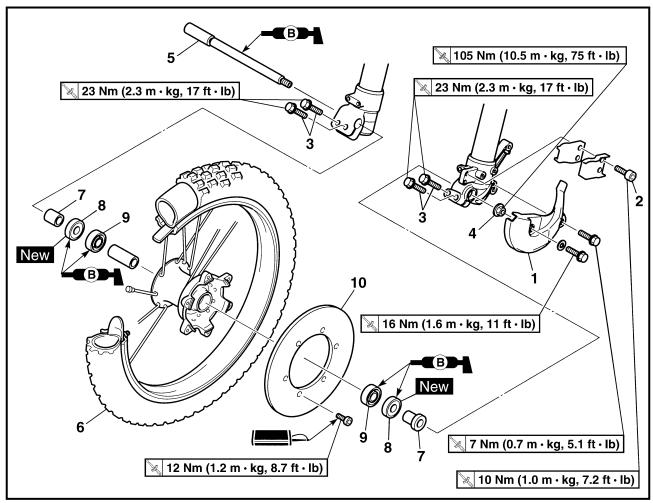


Extent of removal:


- 1) Front wheel removal
- 3 Brake disc removal

② Wheel bearing removal

Extent of removal	Order	Part name	Q'ty	Remarks
Preparation for removal		FRONT WHEEL REMOVAL Hold the machine by placing the suitable stand under the engine.		▲ WARNING Support the machine securely so there is no danger of it falling over.
† † †	1	Hose cover	1	
	2	Bolt (brake hose holder)	2	Only loosening.
	3	Bolt (axle holder)	4	Only loosening.
	4	Nut (front wheel axle)	1	
	5	Front wheel axle	1	
	6	Front wheel	1	
	7	Collar	2	
	8	Oil seal	2	
	9	Bearing	2	Refer to "REMOVAL POINTS".
* ③	10	Brake disc	1	

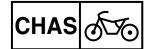

REAR WHEEL

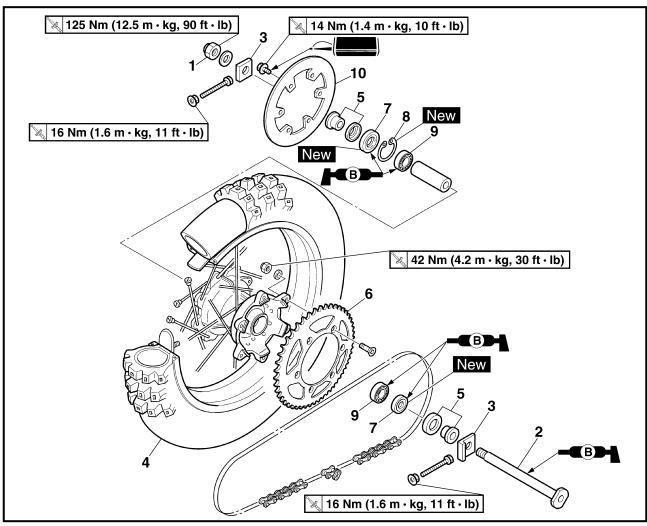


Extent of removal:


- Rear wheel removal
 Brake disc removal
- removal ② Wheel bearing removal


Extent of removal	Order	Part name	Q'ty	Remarks
Preparation for removal		REAR WHEEL REMOVAL Hold the machine by placing the suitable stand under the engine.		A WARNING Support the machine securely so there is no danger of it falling over.
† † †	1	Nut (rear wheel axle)	1	
	2	Rear wheel axle	1	
	3	Chain puller	2	
	4	Rear wheel	1	Refer to "REMOVAL POINTS".
	5	Collar	2	
	6	Driven sprocket	1	
	7	Oil seal	2	
	8	Circlip	1	
1	9	Bearing	2	Refer to "REMOVAL POINTS".
]	10	Brake disc	1	



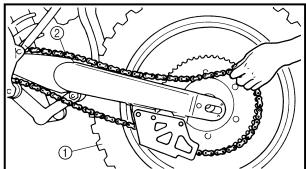

2

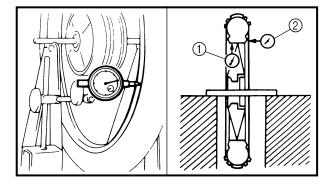

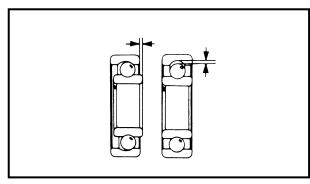

REMOVAL POINTS

EC523101

Rear wheel

- 1. Remove:
 - Wheel (1)

Push the wheel forward and remove the drive chain (2).

Wheel bearing (if necessary)

- 1. Remove:
 - Bearing ①

Remove the bearing using a general bearing puller 2).

EC594000 INSPECTION

EC514100

Wheel

- 1. Measure:
 - Wheel runout Out of limit \rightarrow Repair/replace.

Wheel runout limit:


Radial ①: 2.0 mm (0.08 in) Lateral 2: 2.0 mm (0.08 in)

- 2. Inspect:
 - Bearing

Rotate inner race with a finger. Rough spot/seizure \rightarrow Replace.

Replace the bearings, oil seal and wheel collar as a set.



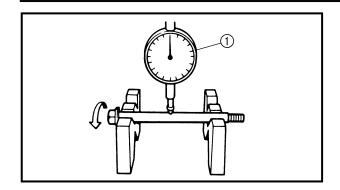

EC514200

Wheel axle

- 1. Measure:
 - Wheel axle bends Out of specification \rightarrow Replace. Use the dial gauge 1.




Wheel axle bending limit: 0.5 mm (0.020 in)

NOTE: _

The bending value is shown by one half of the dial gauge reading.

A WARNING

Do not attempt to straighten a bent axle.

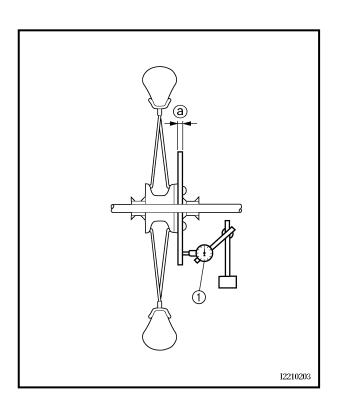

EC594200 Brake disc

- 1. Measure:
 - Brake disc deflection (only rear brake

Use the dial gauge ①.

Out of specification \rightarrow Inspect wheel runout.

If wheel runout is in good condition, replace the brake disc.


	Disc deflection	Disc deflection limit:									
	Standard	<limit></limit>									
Rear	_	0.15 mm (0.006 in)									


2. Measure:


• Brake disc thickness @ Out of limit \rightarrow Replace.


1	Disc wear limit:	
	Standard	<limit></limit>
Front	3.0 mm (0.12 in)	2.5 mm (0.10 in)
Rear	4.0 mm (0.16 in)	3.5 mm (0.14 in)



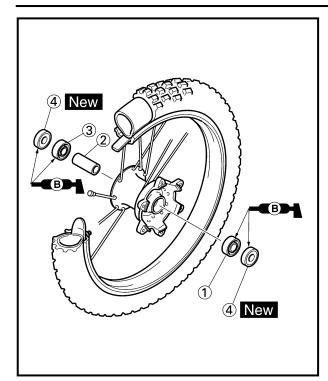

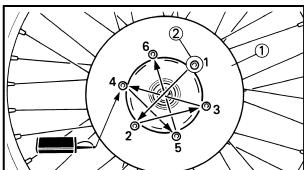

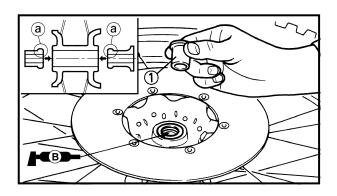

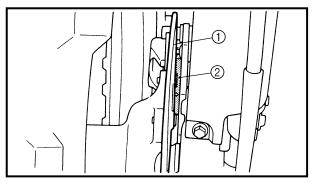

EC595000

ASSEMBLY AND INSTALLATION Front wheel

- 1. Install:
 - Bearing (left) (1)
 - Spacer ②
 - Bearing (right) ③
 - Oil seal (4) New

NOTE: .

- Apply the lithium soap base grease on the bearing and oil seal lip when installing.
- Use a socket that matches the outside diameter of the race of the bearing.
- Left side of bearing shall be installed first.
- Install the oil seal with its manufacture's marks or numbers facing outward.

	•														

Do not strike the inner race of the bearing. Contact should be made only with the outer race.

- Install:
 - Brake disc (1)
 - Bolt (brake disc) ②

9.
- XX

12 Nm (1.2 m ⋅ kg, 8.7 ft ⋅ lb)

NOTE: _

Tighten the bolts in stage, using a crisscross pattern.


- 3. Install:
 - Collar (1)

NOTE:

- Apply the lithium soap base grease on the oil seal lip.
- Install the collars with their projections (a) facing the wheel.
 - 4. Install:
 - Wheel

NOTE: .

Install the brake disc ① between the brake pads ② correctly.

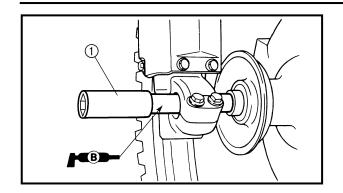


5. Install:

Wheel axle ①

NOTE: .


Apply the lithium soap base grease on the wheel axle.

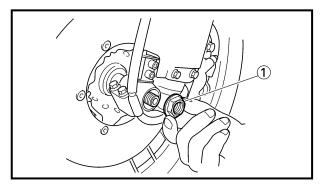

6. Install:

• Nut (wheel axle) 1

🗽 105 Nm (10.5 m · kg, 75 ft · lb)

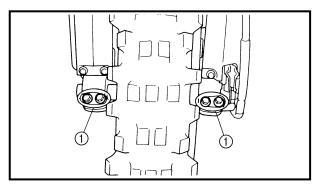


7. Tighten:

• Bolt (axle holder) 1

🗽 23 Nm (2.3 m · kg, 17 ft · lb)

NOTE: .

Before tightening the bolt, fit the wheel axle to the axle holder by stroking the front fork several times with the front brake applied.

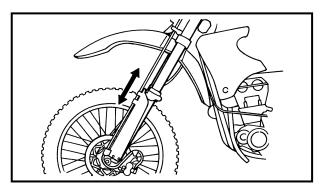

8. Install:


• Brake hose ①


№ 10 Nm (1.0 m · kg, 7.2 ft · lb)


To brake hose holder ②.

NOTE:

Before tightening the bolt (brake hose holder), align the top ⓐ of the brake hose neck with the brake hose holder bottom ⓑ. Then pass the brake hose in front of the axle boss ⓒ and fit it into the hose groove ⓓ so that the brake hose does not contact the nut (wheel axle).

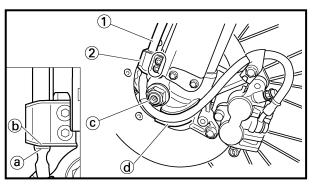

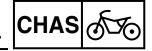

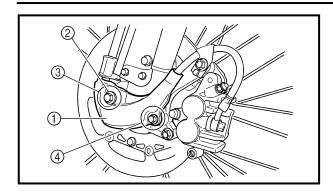


9. Install:

- Hose cover ①
- Plain washer ②
- Bolt [hose cover (M8)] ③

№ 16 Nm (1.6 m · kg, 11 ft · lb)

• Bolt [hose cover (M6)] (4)

№ 7 Nm (0.7 m · kg, 5.1 ft · lb)

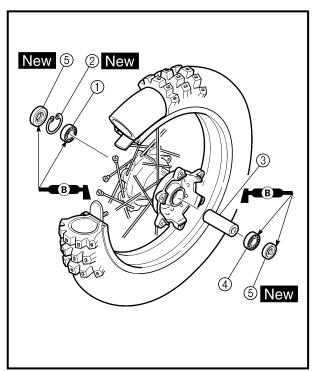

Rear wheel


- 1. Install:
 - Bearing (right) ①
 - Circlip ② New
 - Spacer ③
 - Bearing (left) 4
 - Oil seal ⑤ New

NOTE: _

- Apply the lithium soap base grease on the bearing and oil seal lip when installing.
- Install the bearing with seal facing outward.
- Use a socket that matches the outside diameter of the race of the bearing.
- Right side of bearing shall be installed first.
- Install the oil seal with its manufacture's marks or numbers facing outward.

CAUTION:

Do not strike the inner race of the bearing. Contact should be made only with the outer race.

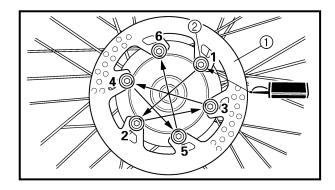



- 2. Install:
 - Brake disc (1)
 - Bolt (brake disc) ②


NOTE:


Tighten the bolts in stage, using a crisscross pattern.




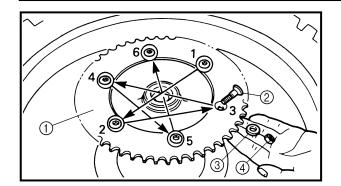

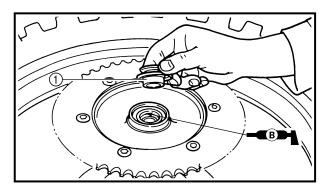

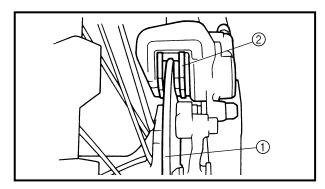

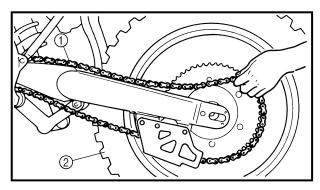

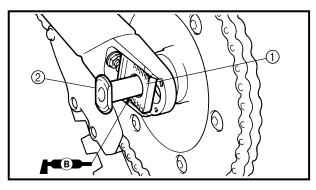

3. Install:

• Driven sprocket ①

• Bolt (driven sprocket) (2)

• Plain washer (driven sprocket) ③

• Nut (driven sprocket) 4

42 Nm (4.2 m ⋅ kg, 30 ft ⋅ lb)

NOTE: _

Tighten the nuts in stage, using a crisscross pattern.

4. Install:

• Collar 1

NOTE:

Apply the lithium soap base grease on the oil seal lip.

5. Install:

Wheel

NOTE: _

Install the brake disc ① between the brake pads ② correctly.

6. Install:

• Drive chain 1

NOTE:

Push the wheel ② forward and install the drive chain.

7. Install:

• Chain puller (left) (1)


• Wheel axle ②


NOTE: _


 Install the chain puller (left), and insert the wheel axle from left side.

 Apply the lithium soap base grease on the wheel axle.



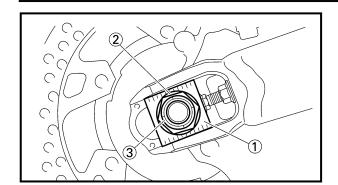

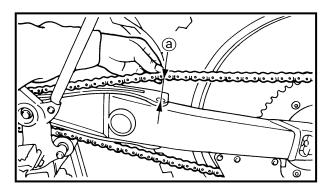

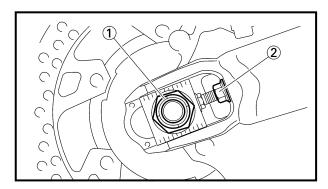

8. Install:

- Chain puller (right) 1
- Plain washer ②
- Nut (wheel axle) ③

NOTE:

Temporarily tighten the nut (wheel axle) at this point.

9. Adjust:

• Drive chain slack ⓐ



Drive chain slack: 40 ~ 50 mm (1.6 ~ 2.0 in)

Refer to "DRIVE CHAIN SLACK ADJUSTMENT" section in the CHAPTER 3.

10. Tighten:

• Nut (wheel axle) ①

🗽 125 Nm (12.5 m · kg, 90 ft · lb)

Locknut ②


16 Nm (1.6 m ⋅ kg, 11 ft ⋅ lb)

FRONT BRAKE AND REAR BRAKE



FRONT BRAKE AND REAR BRAKE

EC5A8000 FRONT BRAKE

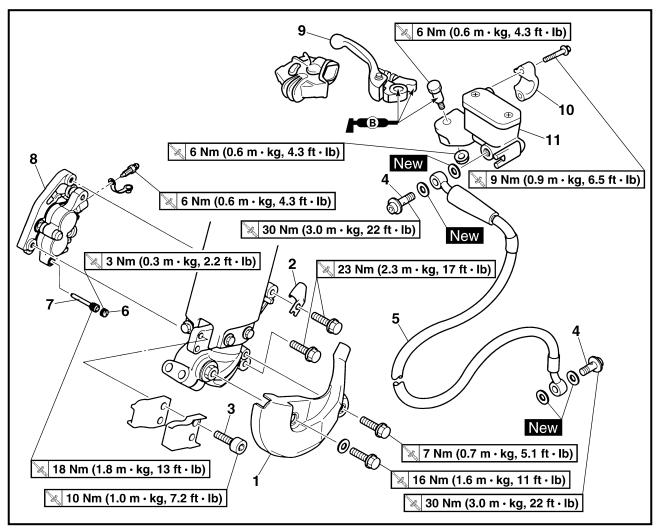

Extent of removal:

- 1 Brake hose removal
- (3) Master cylinder removal
- ② Caliper removal


Extent of removal	Order	Part name	Q'ty	Remarks
Preparation for removal		FRONT BRAKE REMOVAL Hold the machine by placing the suitable stand under the engine.		▲ WARNING Support the machine securely so there is no danger of it falling over.
		Drain the brake fluid.		Refer to "REMOVAL POINTS".
1	1	Hose cover	1	
	2	Brake hose holder	1	
1 1	3	Bolt (brake hose holder)	2	Only loosening.
1 1 31	4	Union bolt	2	
	5	Brake hose	1	
	6	Pad pin plug	1	Remove when loosening the pad pin.
	7	Pad pin	1	Loosen when disassembling the caliper.
	8	Caliper	1	
I	9	Brake lever	1	
3	10	Master cylinder bracket	1	
 	11	Master cylinder	1	

FRONT BRAKE AND REAR BRAKE



EC5A8100

REAR BRAKE

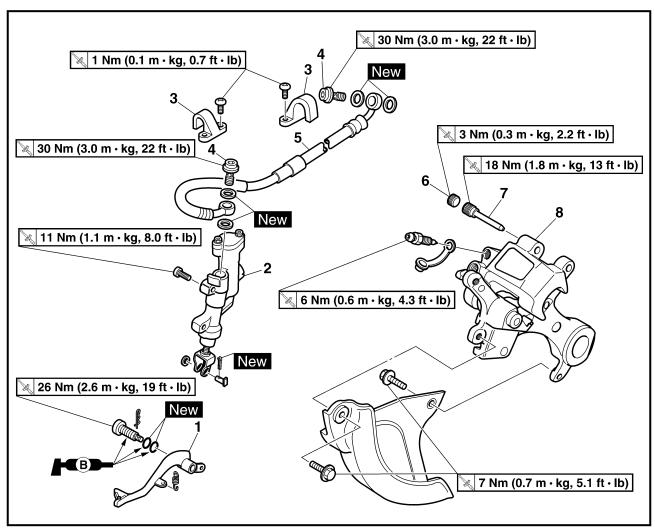

Extent of removal:

- $\textcircled{1} \ \textbf{Master cylinder removal}$
- ③ Caliper removal


② Brake hose removal

Exter	nt of re	moval	Order	Part name	Q'ty	Remarks					
Prepara	Preparation for removal			REAR BRAKE REMOVAL Hold the machine by placing the suitable stand under the engine.		A WARNING Support the machine securely so there is no danger of it falling over.					
				Rear wheel		Refer to "FRONT WHEEL AND REAR WHEEL" section.					
				Drain the brake fluid.		Refer to "REMOVAL POINTS".					
1			1	Brake pedal	1						
ΙΨ			2	Master cylinder	1						
	1		3	Brake hose holder	2						
11	2	③ ↑	4	Union bolt	2						
'		·	5	Brake hose	1						
	•	1	6	Pad pin plug	1	Remove when loosening the pad pin.					
		(3)	7	Pad pin	1	Loosen when disassembling the caliper.					
		ļ	8	Caliper	1						



EC5A8200

CALIPER DISASSEMBLY

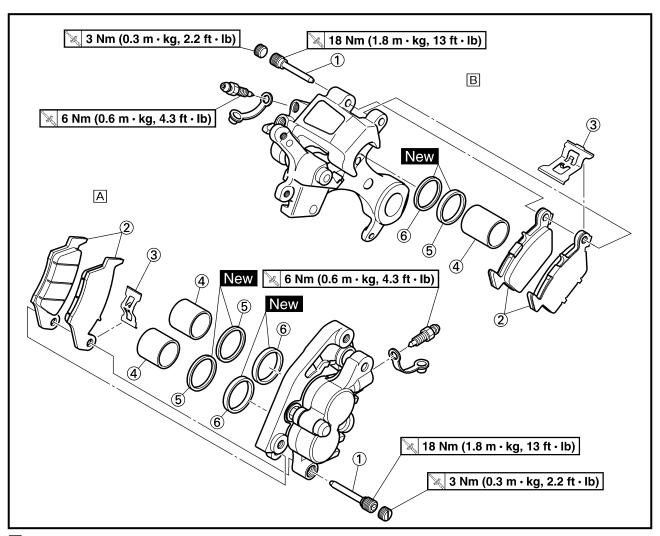

A Front

B Rear

Extent of removal:

① Front caliper disassembly


② Rear caliper disassembly

Extent c	Extent of removal		Part name	Q	'ty	Remarks
			CALIPER DISASSEMBLY	Α	В	
1	1	1	Pad pin	1	1	
		2	Brake pad	2	2	
		3	Pad support	1	1	
ΙΨ	2	4	Caliper piston	2	1	Refer to "REMOVAL POINTS".
		(5)	Dust seal	2	1	Refer to "REMOVAL POINTS".
 	\downarrow	6	Piston seal	2	1	F NEIGUAL POINTS.



EC5A8300

MASTER CYLINDER DISASSEMBLY

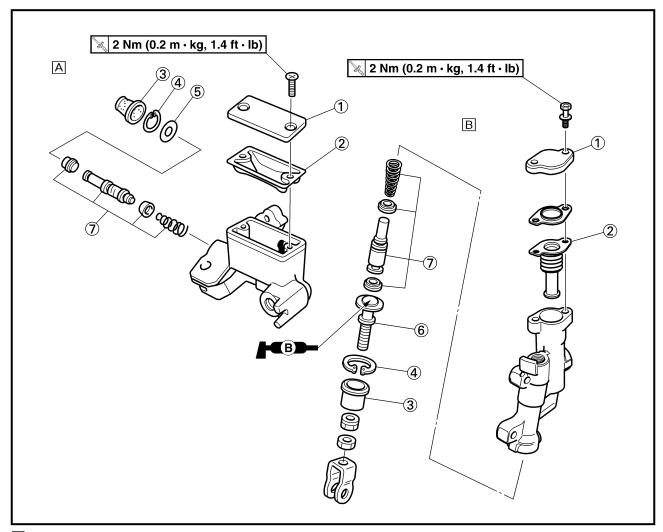

A Front

■ Rear


Extent of removal:


① Front master cylinder disassembly


② Rear master cylinder disassembly


Extent o	Extent of removal		Part name	Q'ty	Remarks
			MASTER CYLINDER DISAS- SEMBLY		
†	†	1	Master cylinder cap	1	
		2	Diaphragm	1	
1	2	3	Master cylinder boot	1	
		4	Circlip	1	Use a long nose circlip pliers.
	•	(5)	Plain washer	1	
,	† (2)	6	Push rod	1	
1	∠)	7	Master cylinder kit	1	




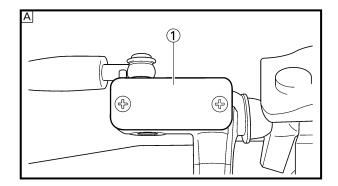

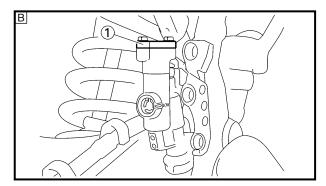

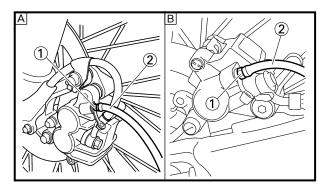

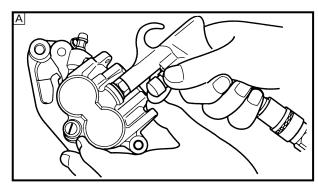

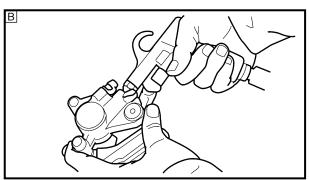

EC5A3000

REMOVAL POINTS Brake fluid

Jake Hala

1. Remove:

[Front]

• Master cylinder cap (1)

[Rear]

- Master cylinder cap (1)
- Protector

NOTE:

Do not remove the diaphragm.

- A Front
- **B** Rear
 - 2. Connect the transparent hose ② to the bleed screw ① and place a suitable container under its end.
- A Front
- **B** Rear
 - Loosen the bleed screw and drain the brake fluid while pulling the lever in or pushing down on the pedal.

CAUTION:

- Do not reuse the drained brake fluid.
- Brake fluid may erode painted surfaces or plastic parts. Always clean up spilled fluid immediately.

EC533301

Caliper piston


- 1. Remove:
 - Caliper piston
 Use compressed air and proceed carefully.


A WARNING


- Cover piston with rag and use extreme caution when expelling piston from cylinder.
- Never attempt to pry out piston.


Caliper piston removal steps:


- Insert a piece of rag into the caliper to lock one caliper.
- Carefully force the piston out of the caliper cylinder with compressed air.
- A Front
- **B** Rear

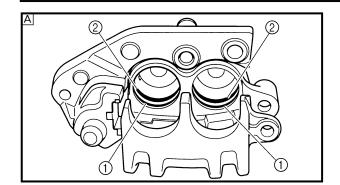

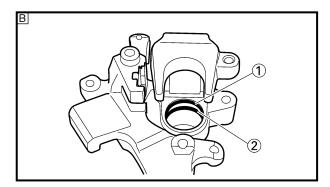

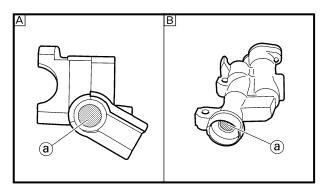

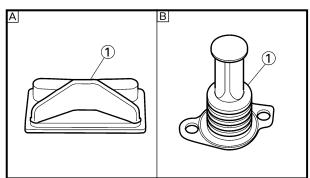

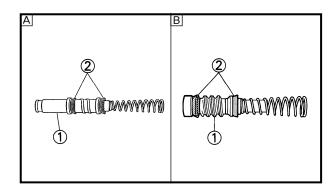

EC533402

Piston seal kit

- 1. Remove:
 - Dust seal 1
 - Piston seal ②

NOTE: _

Remove the piston seals and dust seals by pushing them with a finger.

CAUTION:

Never attempt to pry out piston seals and dust seals.

A WARNING

Replace the piston seals and dust seals whenever a caliper is disassembled.

- A Front
- **B** Rear

EC5A4000 INSPECTION

EC534112

Master cylinder


- 1. Inspect:
 - Master cylinder inner surface (a) Wear/scratches → Replace master cylinder assembly. Stains \rightarrow Clean.

A WARNING

Use only new brake fluid.


- A Front
- **B** Rear
 - 2. Inspect:
 - Diaphragm (1) Crack/damage \rightarrow Replace.
- A Front
- **B** Rear
 - 3. Inspect:
 - Master cylinder piston (1)
 - Master cylinder cup ② Wear/damage/score marks → Replace master cylinder kit.
- A Front
- **B** Rear



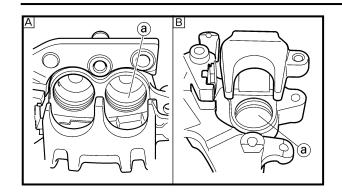

EC534214 Caliper

- 1. Inspect:
 - Caliper cylinder inner surface ⓐ
 Wear/score marks → Replace caliper assembly.
- A Front
- **B** Rear

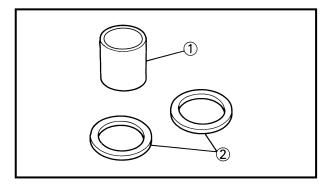


2. Inspect:

Caliper piston ①
 Wear/score marks → Replace caliper piston assembly.

▲ WARNING

Replace the piston seals and dust seals ② whenever a caliper is disassembled.

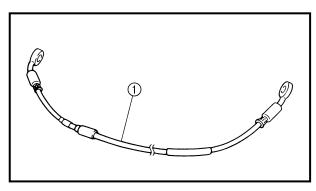

EC534301

Brake hose

- 1. Inspect:
 - Brake hose ①
 Crack/damage → Replace.

EC5A5000

ASSEMBLY AND INSTALLATION


A WARNING


- All internal parts should be cleaned in new brake fluid only.
- Internal parts should be lubricated with brake fluid when installed.
- Replace the piston seals and dust seals whenever a caliper is disassembled.

EC5A5800

Caliper piston

- 1. Clean:
 - Caliper
 - Piston seal
 - Dust seal
 - Caliper piston
 Clean them with brake fluid.

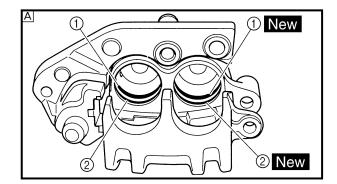

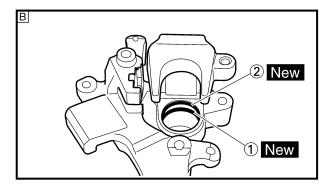



- Piston seal (1)New
- Dust seal ② New


A WARNING

Always use new piston seals and dust seals.

NOTE: _

Fit the piston seals and dust seals onto the slot on caliper correctly.

- A Front
- **B** Rear

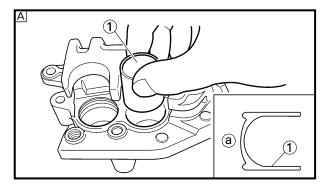

- 3. Install:
 - Caliper piston 1

NOTE: _

Apply the brake fluid on the piston wall.

CAUTION:

- Install the piston with its shallow depressed side @ facing the caliper.
- Never force to insert.
- A Front
- **B** Rear

EC5A5700


Front caliper


- 1. Install:
 - Pad support (1)
 - Brake pad ②
 - Pad pin ③


NOTE: .

- Install the brake pads with their projections
 a) into the caliper recesses
 b).
- Temporarily tighten the pad pin at this point.



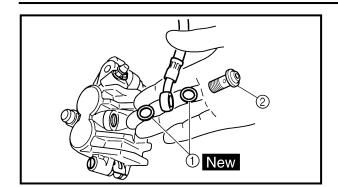

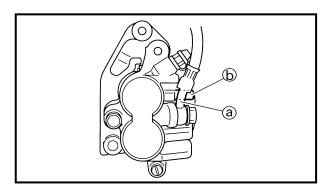

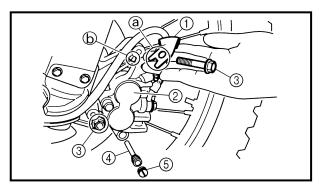



- Copper washer ① New
- Union bolt ②

30 Nm (3.0 m ⋅ kg, 22 ft ⋅ lb)

A WARNING

Always use new copper washers.

CAUTION:

Install the brake hose so that its pipe portion ⓐ directs as shown and lightly touches the projection ⓑ on the caliper.

- 3. Install:
 - Brake hose holder ①
 - Caliper ②
 - Bolt (caliper) ③

≥ 23 Nm (2.3 m · kg, 17 ft · lb)

NOTE: .

Fit the brake hose holder cut ⓐ over the projection ⓑ on the front fork and clamp the brake hose.

- 4. Tighten:
 - Pad pin (4)

🗽 18 Nm (1.8 m · kg, 13 ft · lb)

- 5. Install:
 - Pad pin plug ⑤

3 Nm (0.3 m ⋅ kg, 2.2 ft ⋅ lb)


EC5A5100

Rear caliper


- 1. Install:
 - Pad support 1
 - Brake pad ②
 - Pad pin ③

NOTE: _

- Install the brake pads with their projections
 (a) into the caliper recesses (b).
- Temporarily tighten the pad pin at this point.

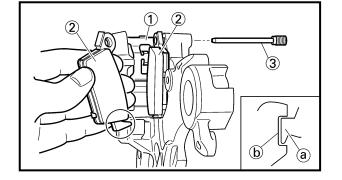




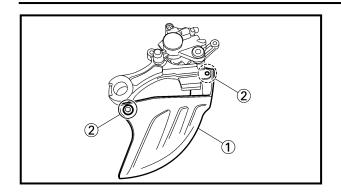

- 2. Install:
 - Disc cover ①
 - Bolt (disc cover) ②

7 Nm (0.7 m ⋅ kg, 5.1 ft ⋅ lb)

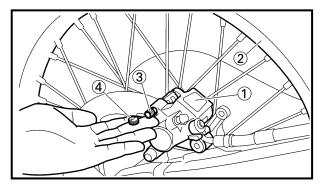

- 3. Install:
 - Caliper 1
 - Rear wheel ②
 Refer to "FRONT WHEEL AND REAR WHEEL" section.
- 4. Tighten:
 - Pad pin ③

🗽 18 Nm (1.8 m · kg, 13 ft · lb)

- 5. Install:
 - Pad pin plug ④

3 Nm (0.3 m ⋅ kg, 2.2 ft ⋅ lb)

Master cylinder kit

- 1. Clean:
 - Master cylinder
 - Master cylinder kit
 Clean them with brake fluid.
- 2. Install:
 - Master cylinder cup (primary) ①
 - Master cylinder cup (secondary) ② To master cylinder piston ③.





Apply the brake fluid on the master cylinder cup.





After installing, cylinder cup should be installed as shown direction. Wrong installation cause improper brake performance.


- A Front
- B Rear

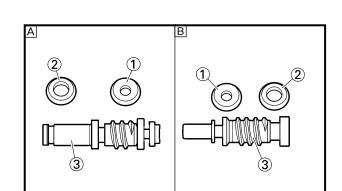


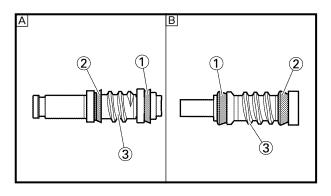


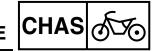

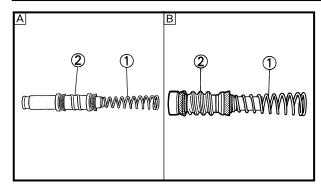

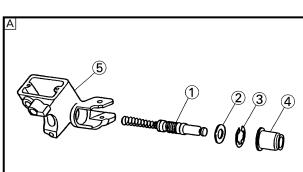

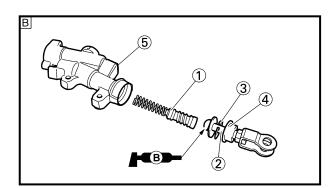

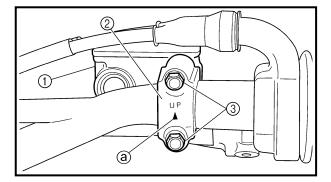

- 3. Install:
 - Spring ①
 To master cylinder piston ②.

NOTE: .

Install the spring at the smaller dia. side.

- A Front
- Rear

4. Install:

[Front]

- Master cylinder kit 1
- Plain washer ②
- Circlip (3)
- Master cylinder boot 4
 To master cylinder 5

[Rear]

- Master cylinder kit (1)
- Push rod ②
- Circlip ③
- Master cylinder boot ④ To master cylinder ⑤.

NOTE

- Apply the brake fluid on the master cylinder kit.
- Apply the lithium soap base grease on the tip of the push rod.
- When installing the circlip, use a long nose circlip pliers.
- A Front
- **B** Rear

EC5A5310

Front master cylinder


- 1. Install:
 - Master cylinder ①
 - Master cylinder bracket ②
 - Bolt (master cylinder bracket) ③


9 Nm (0.9 m ⋅ kg, 6.5 ft ⋅ lb)


NOTE: _


- Install the bracket so that the arrow mark (a) face upward.
- First tighten the bolts on the upper side of the master cylinder bracket, and then tighten the bolts on the lower side.




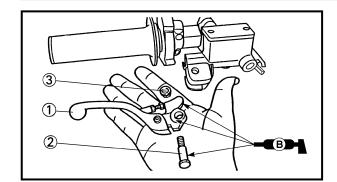

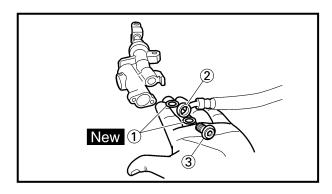

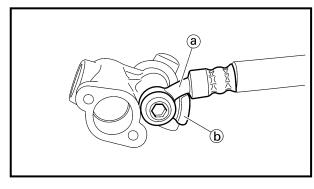

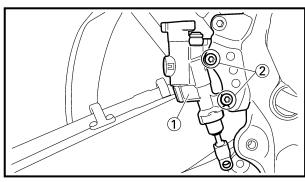

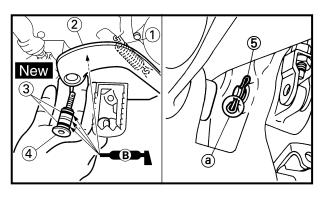

- 2. Install:
 - Brake lever ①
 - Bolt (brake lever) ②

№ 6 Nm (0.6 m · kg, 4.3 ft · lb)

Nut (brake lever) ③

№ 6 Nm (0.6 m · kg, 4.3 ft · lb)

NOTE: .

Apply the lithium soap base grease on the brake lever sliding surface, bolt and contacting surface of the master cylinder piston.

Rear master cylinder

- 1. Install:
 - Copper washer ① New
 - Brake hose ②
 - Union bolt ③

🗽 30 Nm (3.0 m ⋅ kg, 22 ft ⋅ lb)

WARNING

Always use new copper washers.

CAUTION:

Install the brake hose so that its pipe portion ⓐ directs as shown and lightly touches the projection ⓑ on the master cylinder.

- 2. Install:
 - Master cylinder (1)
 - Bolt (master cylinder) ②

| 11 Nm (1.1 m ⋅ kg, 8.0 ft ⋅ lb)


- 3. Install:
 - Spring (1)
 - Brake pedal ②
 - O-ring ③ New
 - Bolt (brake pedal) (4)


≥ 26 Nm (2.6 m · kg, 19 ft · lb)


Clip (5)

NOTE:

- Apply the lithium soap base grease on the bolt, O-ring and brake pedal bracket.
- Install the clip with its stopper portion @ facing inward.

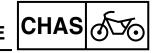

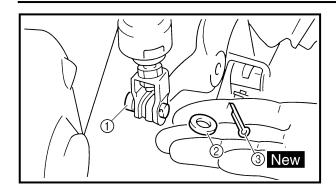

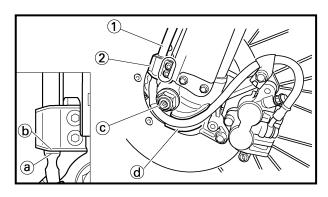

4. Install:

- Pin (1)
- Plain washer ②
- Cotter pin ③ New

NOTE:

After installing, check the brake pedal height. Refer to "REAR BRAKE ADJUSTMENT" section in the CHAPTER 3.

Front brake hose


- 1. Install:
 - Brake hose (1)


№ 10 Nm (1.0 m · kg, 7.2 ft · lb)

To brake hose holder 2.

NOTE:

Before tightening the bolt (brake hose holder), align the top ⓐ of the brake hose neck with the brake hose holder bottom ⓑ. Then pass the brake hose in front of the axle boss ⓒ and fit it into the hose groove ⓓ so that the brake hose does not contact the nut (wheel axle).

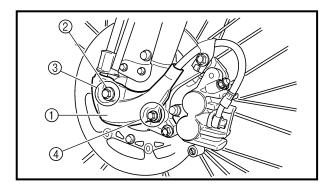

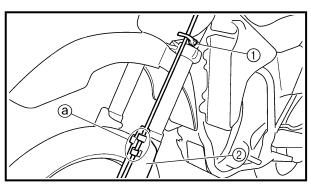

- 2. Install:
 - Hose cover (1)
 - Plain washer ②
 - Bolt [hose cover (M8)] ③


🗽 16 Nm (1.6 m · kg, 11 ft · lb)


• Bolt [hose cover (M6)] 4)

🗽 7 Nm (0.7 m · kg, 5.1 ft · lb)

3. Pass the brake hose through the cable guide ①, then through the guide ② on the protector ②.



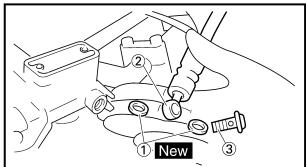

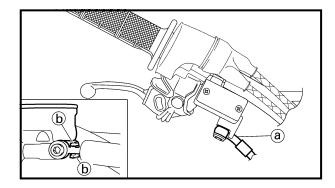





Copper washer ① New

• Brake hose ② • Union bolt (3)


№ 30 Nm (3.0 m · kg, 22 ft · lb)


A WARNING

Always use new copper washers.

CAUTION:

Install the brake hose so that its pipe portion @ directs as shown and lightly touches the projection (b) on the master cylinder.

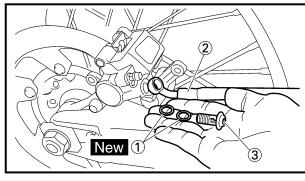

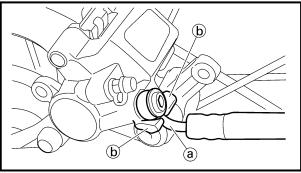

Rear brake hose

- 1. Install:
 - Copper washer (1) New
 - Brake hose ②
 - Union bolt ③

30 Nm (3.0 m ⋅ kg, 22 ft ⋅ lb)


A WARNING


Always use new copper washers.

CAUTION:

Install the brake hose so that its pipe portion @ directs as shown and lightly touches the projection (b) on the caliper.



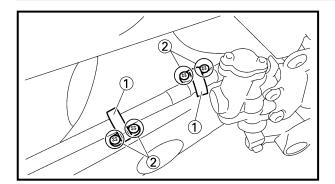

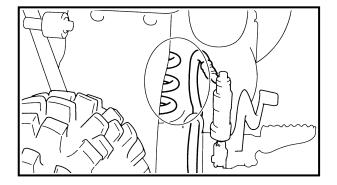





- Brake hose holder ①
- Screw (brake hose holder) ②

🗽 1 Nm (0.1 m · kg, 0.7 ft · lb)



After installing the brake hose holders, make sure the brake hose does not contact the spring (rear shock absorber). If it does, correct its twist.

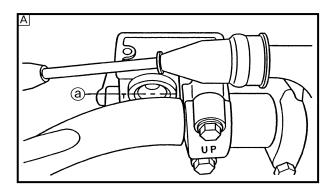

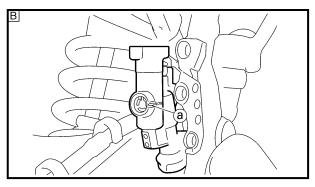

Brake fluid

- 1. Fill:
 - Brake fluid
 Until the fluid level reaches "LOWER"
 level line (a).



Recommended brake fluid: DOT #4

WARNING

- Use only the designated quality brake fluid:
 - otherwise, the rubber seals may deteriorate, causing leakage and poor brake performance.
- Refill with the same type of brake fluid; mixing fluids may result in a harmful chemical reaction and lead to poor performance.
- Be careful that water does not enter the master cylinder when refilling. Water will significantly lower the boiling point of the fluid and may result in vapor lock.

CAUTION:

Brake fluid may erode painted surfaces or plastic parts. Always clean up spilled fluid immediately.


- A Front
- **B** Rear





- 2. Air bleed:
 - Brake system
 Refer to "BRAKE SYSTEM AIR
 BLEEDING" section in the CHAPTER
 3.



Brake fluid level
 Fluid at lower level → Fill up.
 Refer to "BRAKE FLUID LEVEL
 INSPECTION" section in the CHAP TER 3.

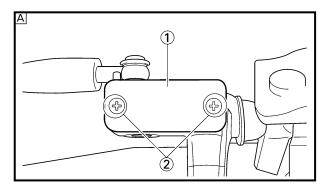

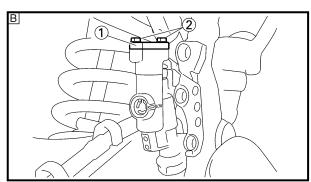

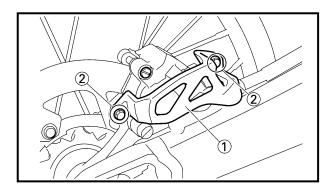

4. Install:

[Front]

- Diaphragm
- Master cylinder cap ①
- Screw (master cylinder cap) (2)

2 Nm (0.2 m ⋅ kg, 1.4 ft ⋅ lb)

[Rear]

- Diaphragm
- Master cylinder cap (1)
- Bolt (master cylinder cap) ②


2 Nm (0.2 m ⋅ kg, 1.4 ft ⋅ lb)

CAUTION:

After installation, while pulling the lever in or pushing down on the pedal, check whether there is any brake fluid leaking where the union bolts are installed respectively at the master cylinder and caliper.

- A Front
- **B** Rear
 - 5. Install: (rear brake only)
 - Protector ①
 - Bolt (protector) ②

№ 7 Nm (0.7 m · kg, 5.1 ft · lb)

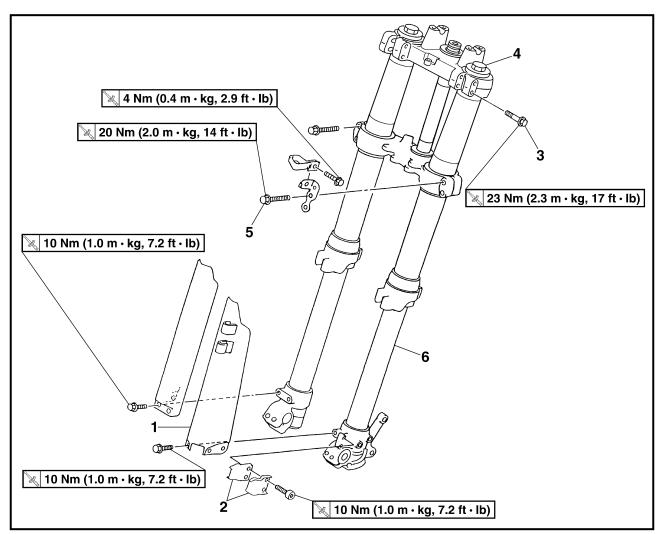


Extent of removal:

① Front fork removal

Extent of removal	Order	Part name	Q'ty	Remarks
Preparation for removal		FRONT FORK REMOVAL Hold the machine by placing the suitable stand under the engine.		A WARNING Support the machine securely so there is no danger of it falling over.
		Front wheel		Refer to "FRONT WHEEL AND REAR WHEEL" section.
		Front caliper		Refer to "FRONT BRAKE AND REAR BRAKE" section.
		Number plate		
		Handlebar		Refer to "HANDLEBAR" section.
1	1	Protector	1	
	2	Brake hose holder	2	
	3	Pinch bolt (handle crown)	2	Only loosening.
Ψ	4	Cap bolt	1	Loosen when disassembling the front fork.
	5	Pinch bolt (under bracket)	2	Only loosening.
	6	Front fork	1	

FRONT FORK DISASSEMBLY

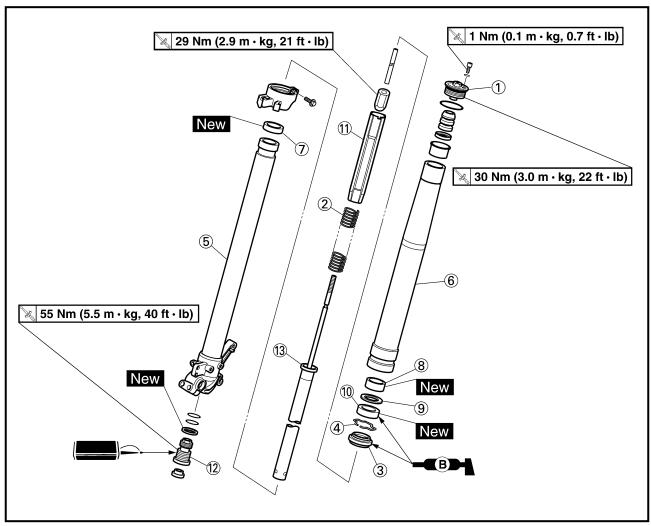

Extent of removal: ① Oil seal removal ② Damper rod removal

Extent of	Extent of removal		Part name	Q'ty	Remarks
			FRONT FORK DISASSEMBLY		
†	†	1	Cap bolt	1	Refer to "REMOVAL POINTS".
		2	Fork spring	1	Drain the fork oil.
		3	Dust seal	1	
		4	Stopper ring	1	Refer to "REMOVAL POINTS".
		⑤	Inner tube	1	Ц
Ť		6	Outer tube	1	
	2	7	Piston metal	1	
		8	Slide metal	1	
		9	Plain washer	1	
\downarrow		10	Oil seal	1	
		11)	Spring guide	1	
		12	Base valve	1	Use special tool.
	ļ	13	Damper rod	1	Refer to "REMOVAL POINTS".

HANDLING NOTE

N	a	т	F	
1.4	v	•	_	ì

The front fork requires careful attention. So it is recommended that the front fork be maintained at the dealers.


CAUTION:


To prevent an accidental explosion of air, the following instructions should be observed:

 The front fork with a built-in piston rod has a very sophisticated internal construction and is particularly sensitive to foreign material.

Use enough care not to allow any foreign material to come in when the oil is replaced or when the front fork is disassembled and reassembled.

 Before removing the cap bolts or front forks, be sure to extract the air from the air chamber completely.

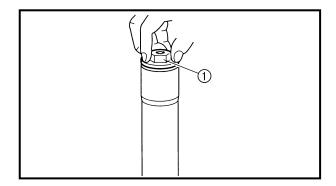

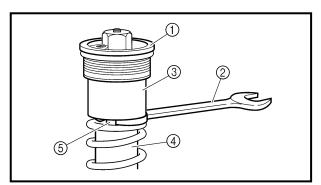

EC553000

REMOVAL POINTS

EC553150

Cap bolt

- 1. Remove:
 - Cap bolt ①
 From the outer tube.


NOTE: _


Before removing the front fork from the machine, loosen the cap bolt.


- 2. Remove:
 - Cap bolt 1


NOTE: _

- While compressing the fork spring, set the thin type spanners ② between the spacer ③ and spring guide ④.
- Hold the locknut ⑤ and remove the cap bolt.

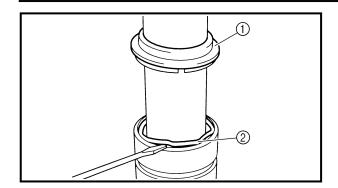

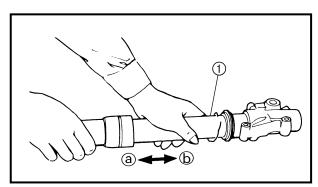

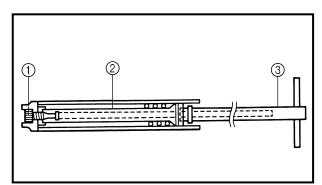

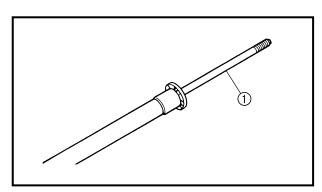

Inner tube

- 1. Remove:
 - Dust seal 1
 - Stopper ring ②
 Using slotted-head screwdriver.

CAUTION:

Take care not to scratch the inner tube.

- 2. Remove:
 - Inner tube ①

Oil seal removal steps:

- Push in slowly (a) the inner tube just before it bottoms out and then pull it back quickly (b).
- Repeat this step until the inner tube can be pulled out from the outer tube.

EC553311

Damper rod

- 1. Remove:
 - Base valve (1)
 - Damper rod (2)

NOTE:

Use a damper rod holder ③ to lock the damper rod.



Damper rod holder: YM-1423/90890-01423

C554000

INSPECTION

EC554100


Damper rod


- 1. Inspect:
 - Damper rod ①
 Bend/damage → Replace damper rod.


CAUTION:


The front fork with a built-in piston rod has a very sophisticated internal construction and is particularly sensitive to foreign material.


Use enough care not to allow any foreign material to come in when the oil is replaced or when the front fork is disassembled and reassembled.

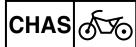

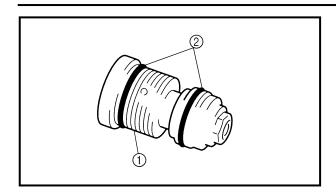

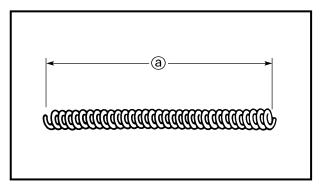

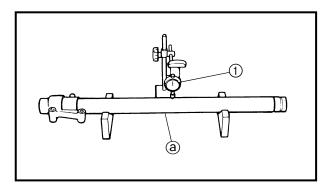

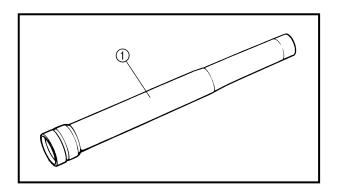

Base valve

- 1. Inspect:
 - Valve assembly ①
 Wear/damage → Replace.
 - O-ring ②
 Damage → Replace.

EC554400

Fork spring

- 1. Measure:
 - Fork spring free length (a)
 Out of specification → Replace.

	Fork spring free length:			
	Standard	Limit		
460	mm (18.1 in)	455 mm (17.9 in)		

EC554502

Inner tube

- 1. Inspect:
 - Inner tube surface ⓐ
 Score marks → Repair or replace.
 Use #1,000 grit wet sandpaper.
 Damaged oil lock piece → Replace.
 - Inner tube bends
 Out of specification → Replace.
 Use the dial gauge ①.



Inner tube bending limit: 0.2 mm (0.008 in)

NOTE: .

The bending value is shown by one half of the dial gauge reading.

A WARNING


Do not attempt to straighten a bent inner tube as this may dangerously weaken the tube.

EC554600

Outer tube

- 1. Inspect:
 - Outer tube ①
 Score marks/wear/damage → Replace.



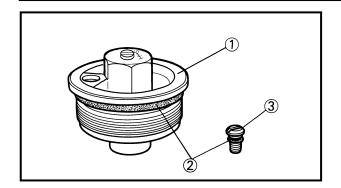


Cap bolt


- 1. Inspect:
 - Cap bolt ①
 - O-ring ②
 - Air bleed screw ③
 Wear/damage → Replace.


EC555000

ASSEMBLY AND INSTALLATION Front fork assembly

1. Wash the all parts in a clean solvent.

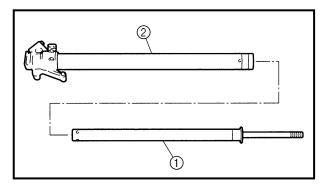

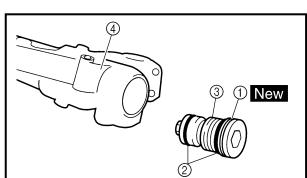

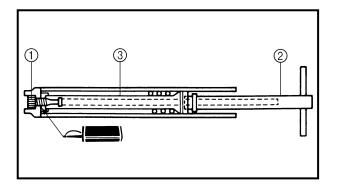


- 2. Install:
 - Damper rod ①
 To inner tube ②.

CAUTION:

To install the damper rod into the inner tube, hold the inner tube aslant. If the inner tube is held vertically, the damper rod may fall into it, damaging the valve inside.

- 3. Install:
 - Copper washer ① New
 - O-ring ②
 - Base valve ③
 To inner tube ④.
- 4. Tighten:
 - Base valve 1

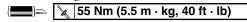


NOTE: _


- Use a damper rod holder ② to lock the damper rod ③.
- Apply the LOCTITE[®] on the base valve thread.





Damper rod holder: YM-1423/90890-01423




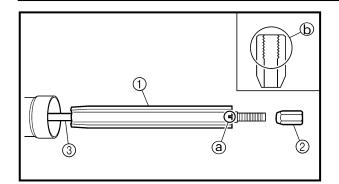

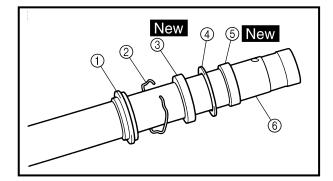

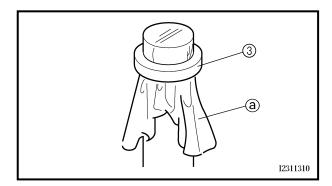

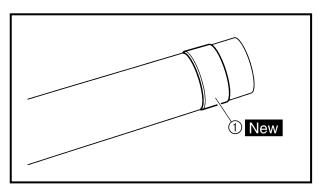

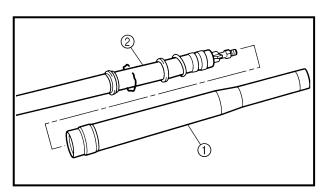

- 5. Install:
 - Spring guide ①
 - Locknut ②
 To damper rod ③.

NOTE:

- Install the spring guide with its cut (a) facing upward.
- With its thread **(b)** facing upward, fully finger tighten the locknut onto the damper rod.
 - 6. Install:
 - Dust seal ①
 - Stopper ring ②
 - Oil seal ③ New
 - Plain washer 4
 - Slide metal ⑤ New To inner tube ⑥.

NOTE:


- Apply the fork oil on the inner tube.
- When installing the oil seal, use vinyl seat (a) with fork oil applied to protect the oil seal lip.
- Install the oil seal with its manufacture's marks or number facing the axle holder side.


- 7. Install:
 - Piston metal ① New


NOTE:


Install the piston metal onto the slot on inner tube.


- 8. Install:
 - Outer tube ①
 To inner tube ②.

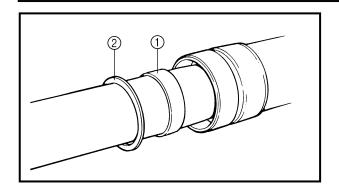

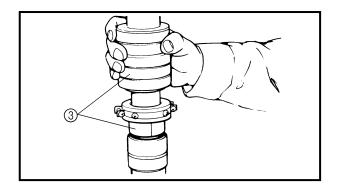

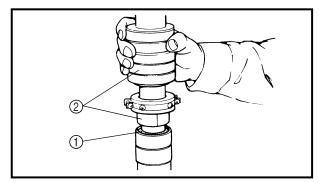

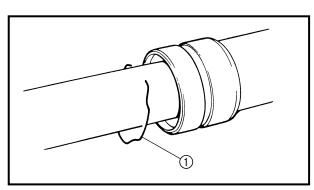

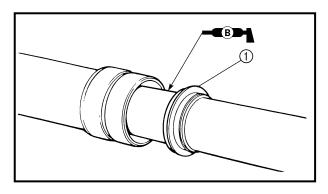

9. Install:

- Slide metal ①
- Plain washer ②
 To outer tube slot.

NOTE:

Press the slide metal into the outer tube with fork seal driver ③.



Fork seal driver: YM-01442/90890-01442

10. Install:

• Oil seal 1

NOTE

Press the oil seal into the outer tube with fork seal driver ②.



Fork seal driver: YM-01442/90890-01442

11. Install:

• Stopper ring ①

NOTE:

Fit the stopper ring correctly in the groove in the outer tube.


12. Install:

• Dust seal (1)

NOTE


Apply the lithium soap base grease on the inner tube.



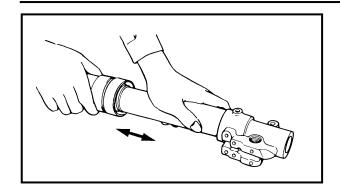

13. Check:

 Inner tube smooth movement Tightness/binding/rough spots → Repeat the steps 2 to 12.

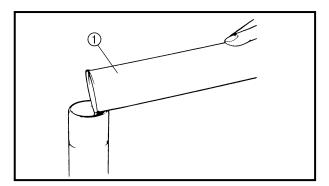

14. Compress the front fork fully.

15. Fill:


Front fork oil
 Until outer tube top surface with recommended fork oil ①.




Recommended oil: Suspension oil "01"

CAUTION:

- Be sure to use recommended fork oil. If other oils are used, they may have an excessively adverse effect on the front fork performance.
- Never allow foreign materials to enter the front fork.

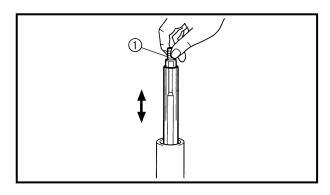

- 16. After filling, pump the damper rod ① slowly up and down more than 10 times to distribute the fork oil.
- 17. Fill:
 - Front fork oil
 Until outer tube top surface with recommended fork oil once more.

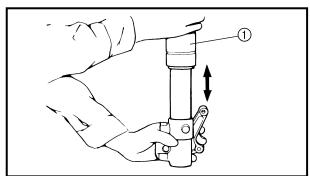

18. After filling, pump the outer tube ① slowly up and down (about 200 mm (7.9 in) stroke) to distribute the fork oil once more.

NOTE: .


Be careful not to excessive full stroke. A stroke of 200 mm (7.9 in) or more will cause air to enter. In this case, repeat the steps 15 to 18.

19. Wait ten minutes until the air bubbles have been removed from the front fork, and the oil has dispense evenly in system before setting recommended oil level.

NOTE

Fill with the fork oil up to the top end of the outer tube, or the fork oil will not spread over to every part of the front forks, thus making it impossible to obtain the correct level.

Be sure to fill with the fork oil up to the top of the outer tube and bleed the front forks.

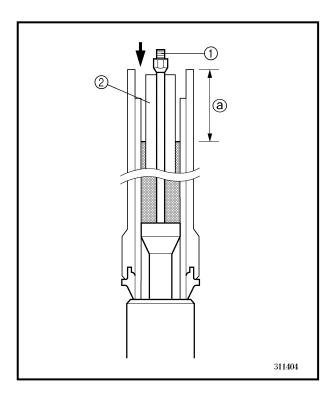

20. Measure:

Oil level (left and right) ⓐ
 Out of specification → Adjust.



Standard oil level:
135 mm (5.31 in)
Extent of adjustment:
80 ~ 150 mm (3.15 ~ 5.91 in)
From top of outer tube with inner tube and damper rod ① fully compressed without spring.


NOTE: _

Be sure to install the spring guide ② when checking the oil level.

A WARNING

Never fail to make the oil level adjustment between the maximum and minimum level and always adjust each front fork to the same setting. Uneven adjustment can cause poor handling and loss of stability.



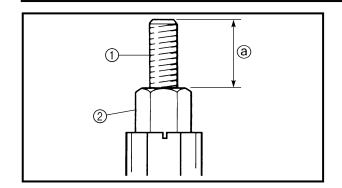

21. Measure:


Distance @

Out of specification \rightarrow Turn into the locknut.



Distance (a):

20 mm (0.79 in) or more Between damper rod ① top and locknut ② top.

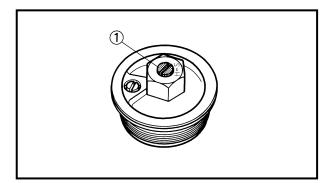


22. Loosen:

• Rebound damping adjuster ①

NOTE:

- Loosen the rebound damping adjuster finger tight.
- Record the set position of the adjuster (the amount of turning out the fully turned in position).

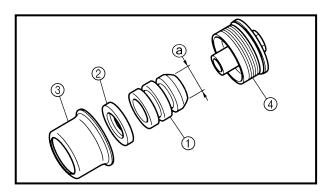


23. Install

- Cushion rubber (1)
- Washer ②
- Spacer ③
 To cap bolt ④.

NOTE: .

Install the cushion rubber with its smaller dia.end ⓐ facing the cap bolt.

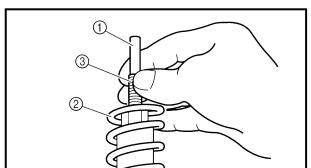


24. Install:

- Push rod (1)
- Fork spring ②

NOTE:

- Install the fork spring with the damper rod ③ pulled up.
- After installing the fork spring, hold the damper rod end so that it will not go down.

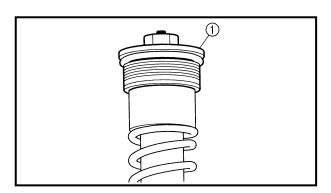



25. Install:


• Cap bolt (1)


Fully tighten the cap bolt onto the damper rod by hand.




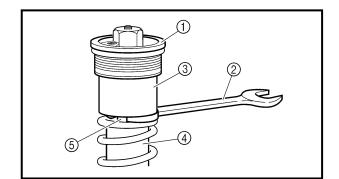

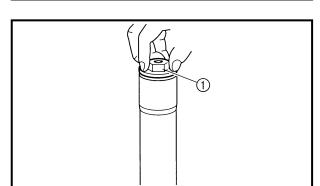

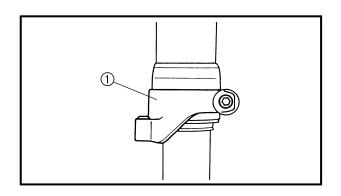

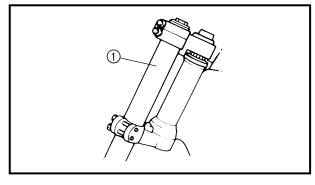

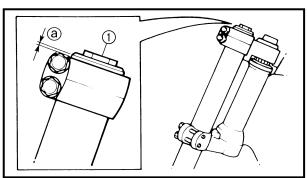

26. Tighten:

• Cap bolt (locknut) 1

≥ 29 Nm (2.9 m · kg, 21 ft · lb)

NOTE: _

- While compressing the fork spring, set the thin type spanners ② between the spacer ③ and spring guide ④.
- Hold the locknut ⑤ and tighten the cap bolt with specified torque.

27. Install:

• Cap bolt ①
To outer tube.

NOTE: .

Temporarily tighten the cap bolt.

28. Install:

• Protector guide ①

Installation

- 1. Install:
 - Front fork (1)

NOTE: .

- Temporarily tighten the pinch bolts (under bracket).
- Do not tighten the pinch bolts (handle crown) yet.
 - 2. Tighten:
 - Cap bolt (1)


30 Nm (3.0 m ⋅ kg, 22 ft ⋅ lb)


- 3. Adjust:
 - Front fork top end @




Front fork top end (standard) ⓐ: Zero mm (Zero in)



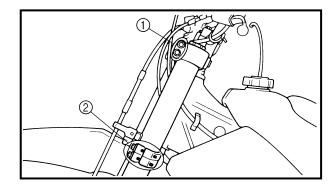

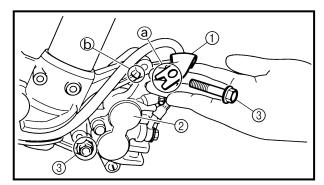

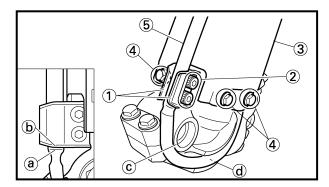



• Pinch bolt (handle crown) ①

23 Nm (2.3 m ⋅ kg, 17 ft ⋅ lb)

• Pinch bolt (under bracket) ②

20 Nm (2.0 m · kg, 14 ft · lb)

CAUTION:

Tighten the under bracket to specified torque. If torqued too much, it may cause the front fork to malfunction.

5. Install:

- Brake hose holder ①
- Caliper ②
- Bolt (caliper) ③

23 Nm (2.3 m ⋅ kg, 17 ft ⋅ lb)

NOTE:

Fit the brake hose holder cut ⓐ over the projection ⓑ on the front fork and clamp the brake hose.

6. Install:

- Brake hose holder (1)
- Bolt (brake hose holder) ②


№ 10 Nm (1.0 m · kg, 7.2 ft · lb)

- Protector (3)
- Bolt (protector) (4)

№ 10 Nm (1.0 m · kg, 7.2 ft · lb)

NOTE: _

When installing the brake hose holder, align the top ⓐ of the brake hose neck with the brake hose holder bottom ⓑ. Then pass the brake hose ⑤ in front of the axle boss ⓒ and fit it into the hose groove ⓓ so that the brake hose does not contact the nut (wheel axle).

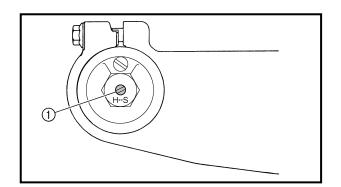

7. Adjust:


• Rebound damping force

NOTE:

Turn in the damping adjuster ① finger-tight and then turn out to the originally set position.




HANDLEBAR

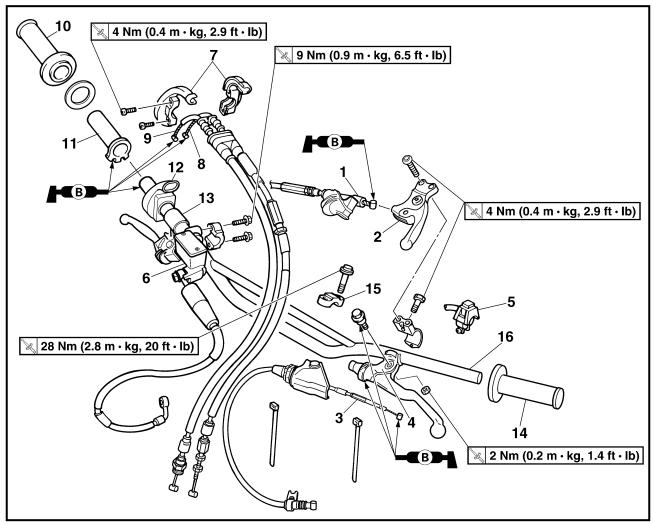

Extent of removal:

① Handlebar removal

Extent of removal	Order	Part name	Q'ty	Remarks
		HANDLEBAR REMOVAL		
Preparation for removal		Number plate		Remove the clamp portion only.
↑	1	Hot starter cable	1	Disconnect at the lever side.
	2	Hot starter lever holder	1	
	3	Clutch cable	1	Disconnect at the lever side.
	4	Clutch lever holder	1	
	5	"ENGINE STOP" button	1	
	6	Master cylinder	1	Refer to "REMOVAL POINTS".
	7	Throttle cable cap	1	
	8	Throttle cable #2 (pushed)	1	Disconnect at the throttle side.
Ψ	9	Throttle cable #1 (pulled)	1	Disconnect at the throttle side.
	10	Grip (right)	1	Refer to "REMOVAL POINTS".
	11	Tube guide	1	
	12	Cover (grip cap)	1	
	13	Collar	1	
	14	Grip (left)	1	Refer to "REMOVAL POINTS".
	15	Handlebar holder (upper)	2	
↓	16	Handlebar	1	

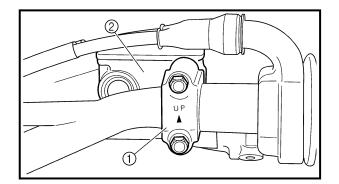

EC5B3000

REMOVAL POINTS


EC5B3100

Master cylinder

- 1. Remove:
 - Master cylinder bracket ①
 - Master cylinder ②

CAUTION:

- Do not let the master cylinder hang on the brake hose.
- Keep the master cylinder cap side horizontal to prevent air from coming in.

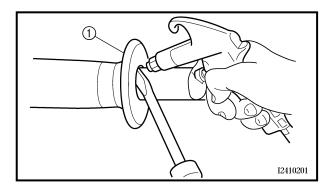


EC5B3200

Grip1. Remove:

• Grip (1)

NOTE: _

Blow in air between the handlebar or tube guide and the grip. Then remove the grip which has become loose.

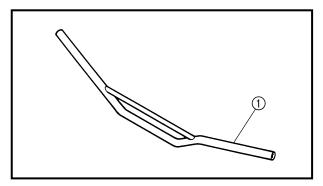

EC5B4000

INSPECTION


EC5B4100


Handlebar


- 1. Inspect:
 - Handlebar ①
 Bends/cracks/damage → Replace.


A WARNING


Do not attempt to straighten a bent handlebar as this may dangerously weaken the handlebar.

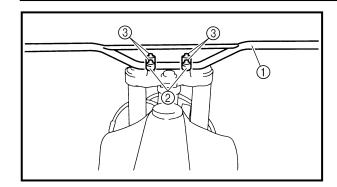

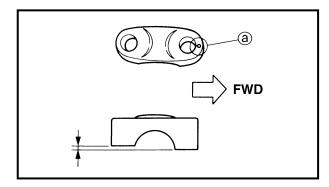

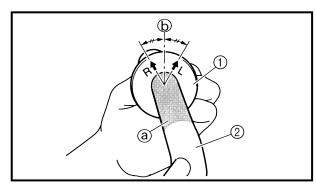

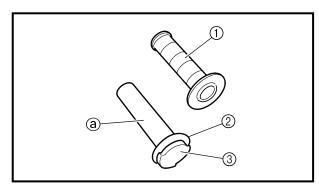

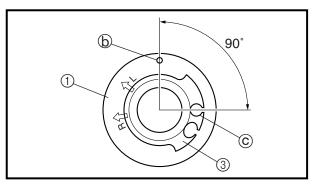

EC5B5000

ASSEMBLY AND INSTALLATION Handlebar

- 1. Install:
 - Handlebar (1)
 - Handlebar holder ②
 - Bolt (handlebar holder) ③

≥ 28 Nm (2.8 m · kg, 20 ft · lb)

NOTE: _

- The upper handlebar holder should be installed with the punched mark ⓐ forward.
- First tighten the bolts on the front side of the handlebar holder, and then tighten the bolts on the rear side.

2. Install:

Grip (left) ①
 Apply the adhesive to the handlebar ②.

NOTE


- Before applying the adhesive, wipe off grease or oil on the handlebar surface ⓐ with a lacquer thinner.
- Install the grip (left) to the handlebar so that the line ⓑ between the two arrow marks faces straight upward.

3. Install:


- Grip (right) ①
- Collar ②
 Apply the adhesive on the tube guide
 ③.


NOTE: _


- Before applying the adhesive, wipe off grease or oil on the tube guide surface @ with a lacquer thinner.
- Install the grip to the tube guide so that the grip match mark
 b and tube guide slot
 c form the angle as shown.

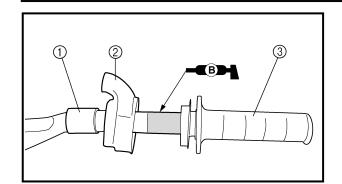

2 1 1 1 1 1 1 1 1 1 1 1 1 1

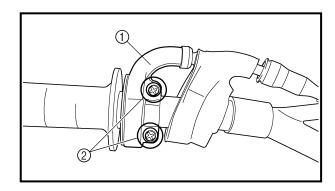

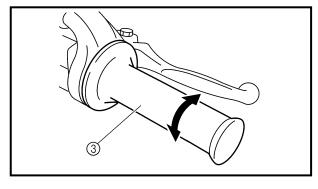

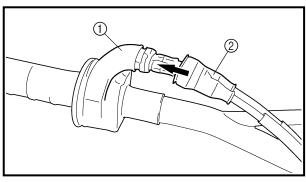

- 4. Install:
 - Collar 1
 - Cover (grip cap) ②
 - Throttle grip ③

NOTE:

Apply the lithium soap base grease on the throttle grip sliding surface.

- 5. Install:
 - Throttle cables ①
 To tube guide ②.

NOTF:

Apply the lithium soap base grease on the throttle cable end and tube guide cable winding portion.

- 6. Install:
 - Throttle cable cap (1)
 - Screw (throttle cable cap) (2)

¼ 4 Nm (0.4 m ⋅ kg, 2.9 ft ⋅ lb)


A WARNING


After tightening the screws, check that the throttle grip ③ moves smoothly. If it does not, retighten the bolts for adjustment.


- 7. Install:
 - Cover (grip cap) ①
 - Cover (throttle cable cap) ②


HANDLEBAR



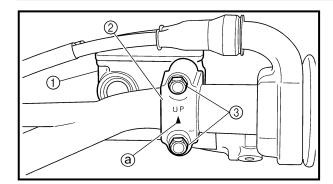

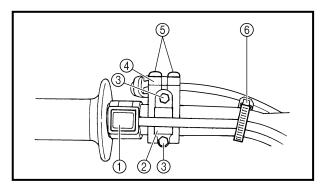

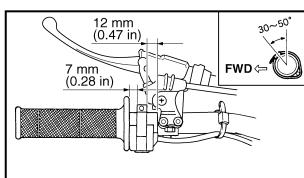

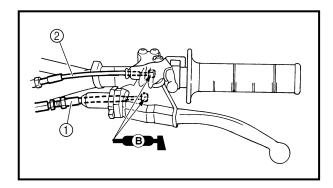

8. Install:

- Master cylinder ①
- Master cylinder bracket ②
- Bolt (master cylinder bracket) (3)

9 Nm (0.9 m ⋅ kg, 6.5 ft ⋅ lb)

NOTE:

- Install the bracket so that the arrow mark (a) faces upward.
- First tighten the bolt on the upper side of the master cylinder bracket, and then tighten the bolt on the lower side.

9. Install:

- "ENGINE STOP" button (1)
- Clutch lever holder ②
- Bolt (clutch lever holder) ③

| ★ | 4 Nm (0.4 m · kg, 2.9 ft · lb)

- Hot starter lever holder (4)
- Bolt (hot starter lever holder) ⑤

4 Nm (0.4 m ⋅ kg, 2.9 ft ⋅ lb)

• Clamp ⑥

NOTE: _

- The "ENGINE STOP" button, clutch lever holder and clamp should be installed according to the dimensions shown.
- Pass the "ENGINE STOP" button lead in the middle of the clutch lever holder.

10. Install:

- Clutch cable (1)
- Hot starter cable ②

NOTE: .


Apply the lithium soap base grease on the clutch cable end and hot starter cable end.

11. Adjust:


- Clutch lever free play Refer to "CLUTCH ADJUSTMENT" section in the CHAPTER 3.
- Hot starter lever free play Refer to "HOT STARTER LEVER ADJUSTMENT" section in the CHAP-TER 3.

HANDLEBAR




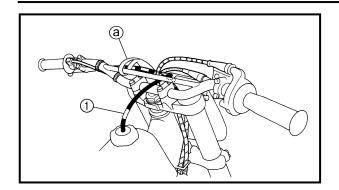

- 12. Clamp the clamp portion ⓐ of the number plate to the handlebar.
- 13. Insert the end of the fuel breather hose ① into the hole of the number plate.

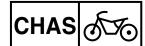


STEERING

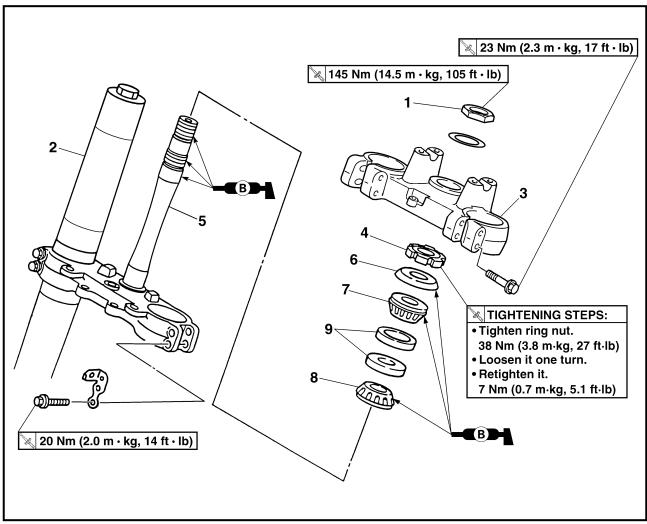

Extent of removal:	Under bracket removal	② Bearing removal

Extent of removal	Order	Part name	Q'ty	Remarks
Preparation for removal	STEERING REMOVAL Hold the machine by placing the suitable stand under the engine.			⚠ WARNING Support the machine securely so there is no danger of it falling over.
		Number plate Handlebar Cable guide Front fender		Refer to "HANDLEBAR" section.
†	1	Steering shaft nut	1	
	2	Front fork	2	Refer to "FRONT FORK" section.
	3	Handle crown	1	
	4	Ring nut	1	Use special tool. Refer to "REMOVAL POINTS".
	5	Under bracket	1	
	6	Ball race cover	1	
	7	Bearing (upper)	1	
	8	Bearing (lower)	1	Refer to "REMOVAL POINTS".
	9	Ball race	2	Refer to "REMOVAL POINTS".

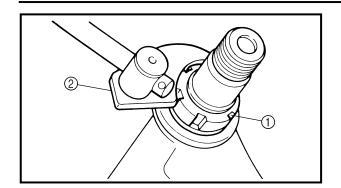

REMOVAL POINTS

EC563202

Ring nut


- 1. Remove:
 - Ring nut ①
 Use the ring nut wrench ②.



Ring nut wrench: YU-33975/90890-01403

A WARNING

Support the steering shaft so that it may not fall down.

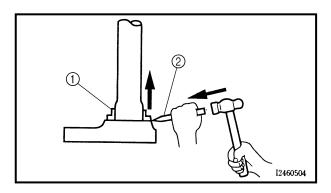


EC563300

Bearing (lower)

- 1. Remove:
 - Bearing (lower) ①
 Use the floor chisel ②.

CAUTION:


Take care not to damage the steering shaft thread.

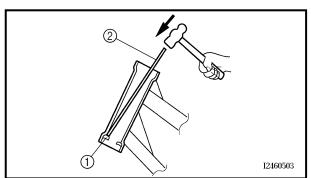

EC563400

Ball race

- 1. Remove:
 - Ball race ①
 Remove the ball race using long rod ②
 and the hammer.

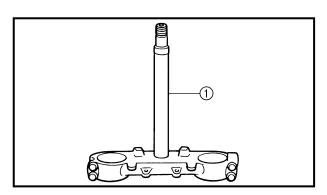


EC564000

INSPECTION

EC564200

Steering shaft

- 1. Inspect:
 - Steering shaft ①
 Bend/damage → Replace.

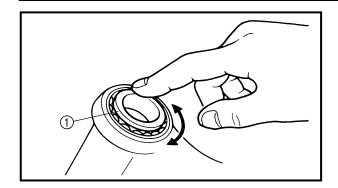


Bearing and ball race

- 1. Wash the bearings and ball races with a solvent.
- 2. Inspect:
 - Bearing ①
 - Ball race

Pitting/damage \rightarrow Replace bearings and ball races as a set.

Install the bearing in the ball races. Spin the bearings by hand. If the bearings hang up or are not smooth in their operation in the ball races, replace bearings and ball races as a set.

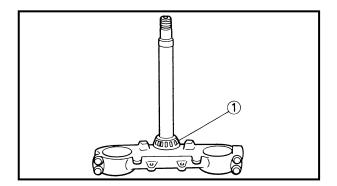


EC565000

ASSEMBLY AND INSTALLATION Under bracket

- 1. Install:
 - Bearing (lower) ①

NOTE:


Apply the lithium soap base grease on the dust seal lip and bearing inner circumference.

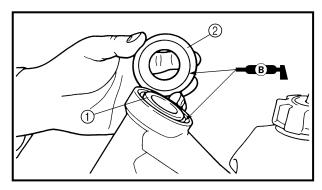

- 2. Install:
 - Ball race
 - Bearing (upper) ①
 - Ball race cover ②

NOTE: _

Apply the lithium soap base grease on the bearing and ball race cover lip.

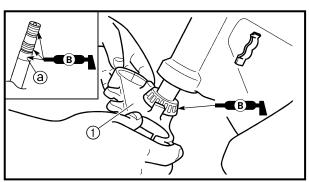

- 3. Install:
 - Under bracket (1)

NOTE:

Apply the lithium soap base grease on the bearing, the portion ⓐ and thread of the steering shaft.

STEERING

4. Install:

• Ring nut 1

wrench (2).

the CHAPTER 3.




🗽 7 Nm (0.7 m · kg, 5.1 ft · lb)


Tighten the ring nut using the ring nut

Refer to "STEERING HEAD INSPEC-


TION AND ADJUSTMENT" section in

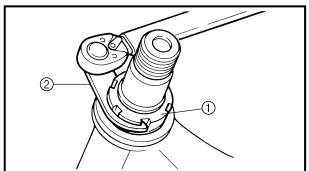


5. Check the steering shaft by turning it lock to lock. If there is any binding, remove the steering shaft assembly and inspect the steering bearings.

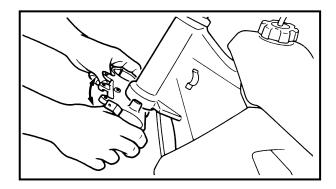

- 6. Install:
 - Front fork ①
 - Handle crown ②

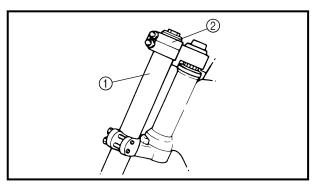


- Temporarily tighten the pinch bolts (under bracket).
- Do not tighten the pinch bolts (handle crown) yet.

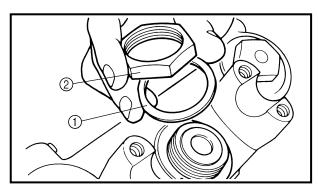

- 7. Install:
 - Plain washer (1)
 - Steering shaft nut ②

🗽 145 Nm (14.5 m · kg, 105 ft · lb)

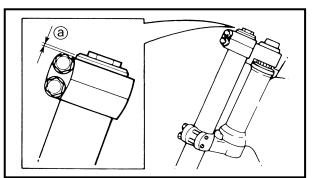


- 8. After tightening the nut, check the steering for smooth movement. If not, adjust the steering by loosening the ring nut little by little.
- 9. Adjust:
 - Front fork top end ⓐ



Front fork top end (standard) @: Zero mm (Zero in)

STEERING CHAS

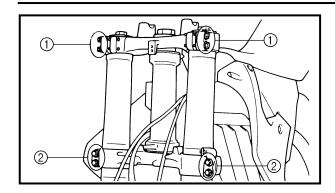

10. Tighten:

• Pinch bolt (handle crown) ①


23 Nm (2.3 m · kg, 17 ft · lb)


• Pinch bolt (under bracket) ②

🗽 20 Nm (2.0 m · kg, 14 ft · lb)

CAUTION

Tighten the under bracket to specified torque. If torqued too much, it may cause the front fork to malfunction.

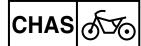

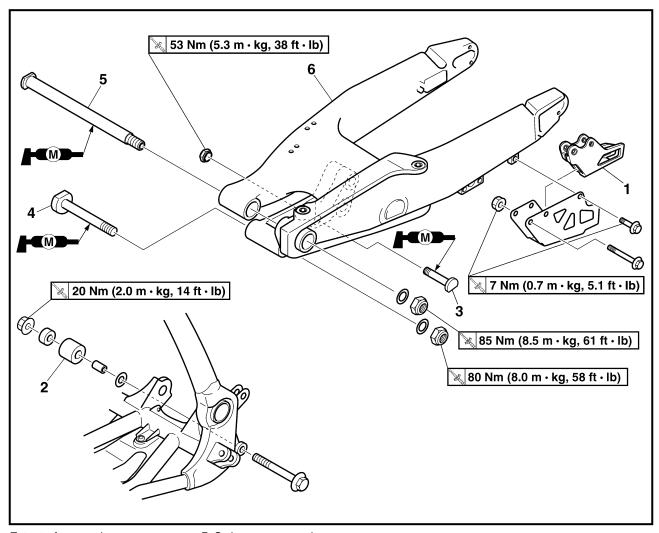


Extent of removal:

① Swingarm removal

Extent of removal	Order	Part name	Q'ty	Remarks
Preparation for removal		SWINGARM REMOVAL Hold the machine by placing the suitable stand under the engine.		A WARNING Support the machine securely so there is no danger of it falling over.
		Brake hose holder Rear caliper Bolt (brake pedal) Drive chain		Refer to "FRONT BRAKE AND REAR BRAKE" section. Shift the brake pedal backward.
1	1	Chain support	1	
	2	Chain tensioner (lower)	1	
1	3	Bolt (rear shock absorber-relay arm)	1	Hold the swingarm.
	4	Bolt (connecting rod)	1	
	5	Pivot shaft	1	
<u> </u>	6	Swingarm	1	




EC578000 SWINGARM DISASSEMBLY

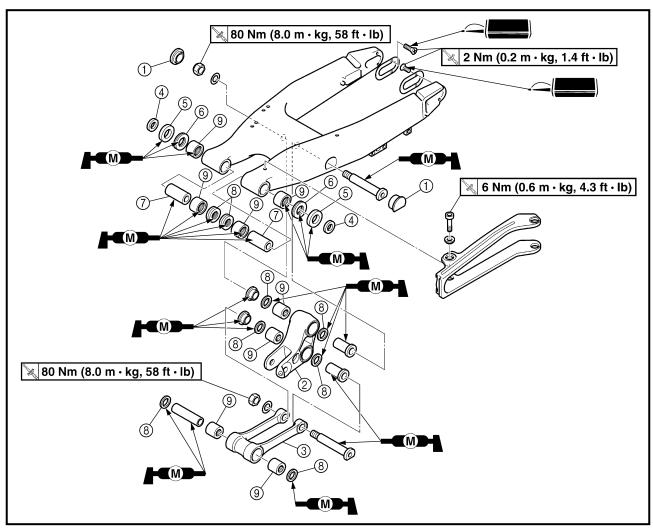


Extent of removal:

- ① Swingarm disassembly
- ③ Relay arm removal and disassembly
- ② Connecting rod removal and disassembly

Extent of removal	Order	der Part name		Remarks
		SWINGARM DISASSEMBLY		
l 1	1	Сар	2	
3	2	Relay arm	1	
2 1	3	Connecting rod	1	
	4	Collar	2	
1 1	(5)	Oil seal	2	
	6	Thrust bearing	2	
	7	Bush	2	
	8	Oil seal	8	
	9	Bearing	8	Refer to "REMOVAL POINTS".

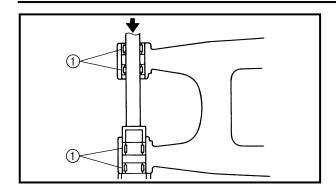

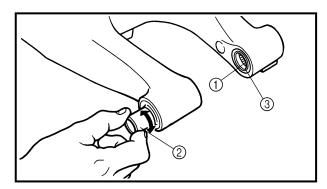

REMOVAL POINTS

EC573200

Bearing

- 1. Remove:
 - Bearing ①

NOTE: .

Install the bearing by pressing its outer race.

EC574010

INSPECTION

Wash the bearings, bushes, collars, and covers in a solvent.

EC574111


Swingarm

- 1. Inspect:
 - Bearing ①
 - Bush (2)

Free play exists/unsmooth revolution/ rust \rightarrow Replace bearing and bush as a set.

- 2. Inspect:
 - Oil seal ③

Damage \rightarrow Replace.

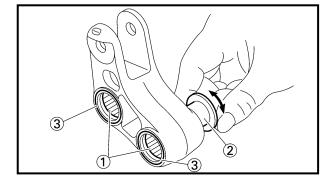

C574210

Relay arm

- 1. Inspect:
 - Bearing (polylube bearing) 1
 - Collar ②


Free play exists/unsmooth revolution/rust

- → Replace bearing and collar as a set.
- 2. Inspect:
 - Bearing (polylube bearing) ①
 Loss of solid lubrication → Replace.
 - Oil seal ③
 Damage → Replace.

NOTE: .

Polylube bearings, with solid lubrication, have been adopted with the intent to make the needle bearings, used in this model, maintenance free. With polylube bearings, no grease nipple and regular lubrication is necessary. However, grease should be applied to all oil seals and collars when removed or installed.



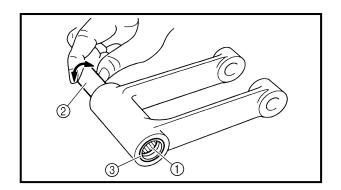

EC574310

Connecting rod


- 1. Inspect:
 - Bearing (polylube bearing) ①
 - Collar 2


Free play exists/unsmooth revolution/rust

- \rightarrow Replace bearing and collar as a set.
- 2. Inspect:
 - Bearing (polylube bearing) ①
 Loss of solid lubrication → Replace.
 - Oil seal ③
 Damage → Replace.

NOTF:

Polylube bearings, with solid lubrication, have been adopted with the intent to make the needle bearings, used in this model, maintenance free. With polylube bearings, no grease nipple and regular lubrication is necessary. However, grease should be applied to all oil seals and collars when removed or installed.

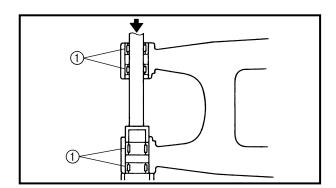

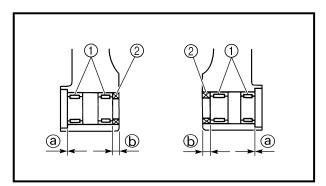

EC575000

ASSEMBLY AND INSTALLATION

EC575201

Bearing and oil seal

- 1. Install:
 - Bearing 1
 - Oil seal ②

To swingarm.


NOTE: .

- Apply the molybdenum disulfide grease on the bearing when installing.
- Install the bearing by pressing it on the side having the manufacture's marks or numbers.
- First install the outer and then the inner bearings to a specified depth from inside.



Installed depth of bearings: Outer @: Zero mm (Zero in) Inner b: 8.5 mm (0.33 in)



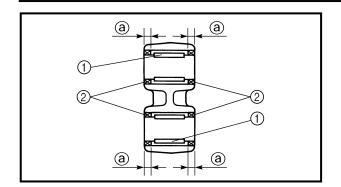

- 2. Install:
 - Bearing ①
 - Oil seal ②
 To relay arm.

NOTE:

- Apply the molybdenum disulfide grease on the bearing when installing.
- Install the bearing by pressing it on the side having the manufacture's marks or numbers.



Installed depth of bearings ⓐ: 5 mm (0.20 in)



- Bearing (1)
- Oil seal ②
 To connecting rod.

NOTE:

- Apply the molybdenum disulfide grease on the bearing when installing.
- Install the bearing by pressing it on the side having the manufacture's marks or numbers.



Installed depth of bearings (a): 5 mm (0.20 in)

Swingarm

- 1. Install:
 - Bush (1)
 - Thrust bearing ②
 - Oil seal ③
 - Collar (4)

To swingarm ⑤.

NOTE: _


Apply the molybdenum disulfide grease on the bushes, thrust bearings and oil seal lips.


- 2. Install:
 - Collar ①


To relay arm (2).

NOTE:


Apply the molybdenum disulfide grease on the collars and oil seal lips.

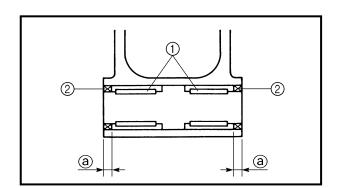


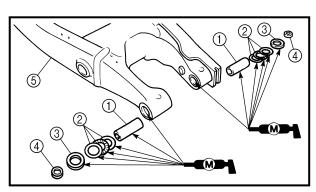


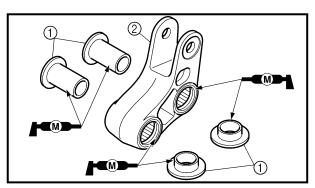





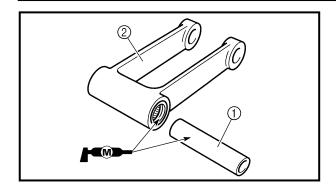

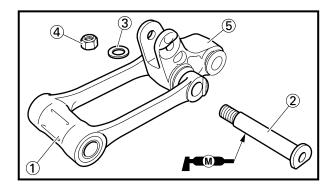

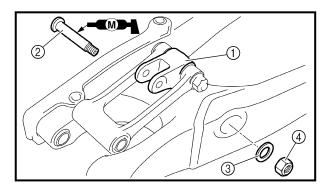

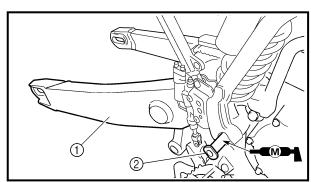

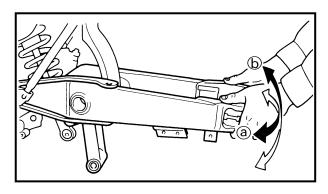

3. Install:

Collar ①

To connecting rod ②.

NOTE: _

Apply the molybdenum disulfide grease on the collar and oil seal lips.

4. Install:

- Connecting rod (1)
- Bolt (connecting rod) ②
- Plain washer ③
- Nut (connecting rod) 4

№ 80 Nm (8.0 m · kg, 58 ft · lb)

To relay arm ⑤.

NOTE: .

Apply the molybdenum disulfide grease on the bolt.

5. Install:

- Relay arm ①
- Bolt (relay arm) ②
- Plain washer ③
- Nut (relay arm) ④
 To swingarm.

NOTE:

- Apply the molybdenum disulfide grease on the bolt.
- Do not tighten the nut yet.

6. Install:

- Swingarm (1)
- Pivot shaft ②

85 Nm (8.5 m ⋅ kg, 61 ft ⋅ lb)


NOTE:


- Apply the molybdenum disulfide grease on the pivot shaft.
- Insert the pivot shaft from right side.


7. Check:


- Swingarm side play ⓐ
 Free play exists → Replace thrust bearing.
- Swingarm up and down movement (b)
 Unsmooth movement/binding/rough spots → Grease or replace bearings, bushes and collars.




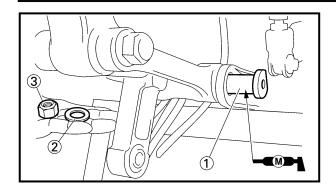

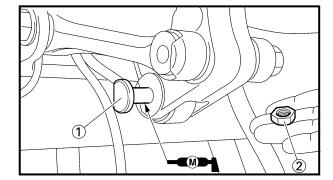

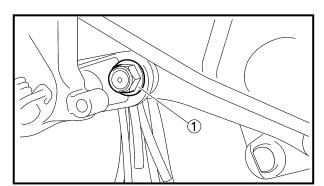

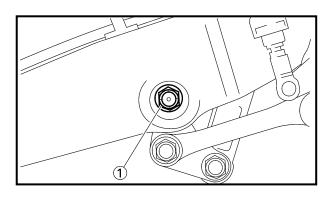

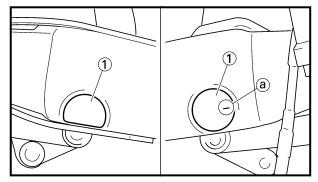

8. Install:

• Bolt (connecting rod) 1

• Plain washer ②

• Nut (connecting rod) ③

NOTE:

 Apply the molybdenum disulfide grease on the bolt.

• Do not tighten the nut yet.

9. Install:

• Bolt (rear shock absorber-relay arm) ①

• Nut (rear shock absorber-relay arm) ②

№ 53 Nm (5.3 m · kg, 38 ft · lb)

NOTE: _

Apply the molybdenum disulfide grease on the bolt.

10. Tighten:

• Nut (connecting rod) ①

№ 80 Nm (8.0 m · kg, 58 ft · lb)

11. Tighten:

• Nut (relay arm) ①

80 Nm (8.0 m ⋅ kg, 58 ft ⋅ lb)


12. Install:


• Cap (1)

NOTE: .

Install the cap (right) with its mark @ facing forward.

CHAS **SWINGARM**

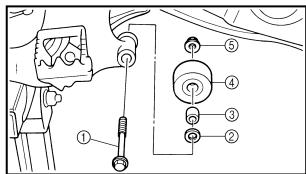

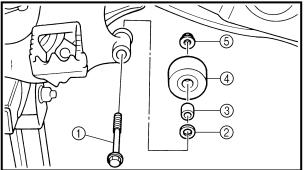

13. Install:

- Bolt [chain tensioner (lower)] ①
- Plain washer ②
- Collar ③
- Chain tensioner ④
- Nut [chain tensioner (lower)] ⑤

≥ 20 Nm (2.0 m · kg, 14 ft · lb)

14. Install:


- Chain support ①
- Support cover ②
- Bolt {chain support [ℓ = 50 mm (1.97 in)]}
- Nut (chain support) ④

№ 7 Nm (0.7 m · kg, 5.1 ft · lb)

• Bolt {support cover [ℓ = 10 mm (0.39 in)]}

7 Nm (0.7 m · kg, 5.1 ft · lb) (5)



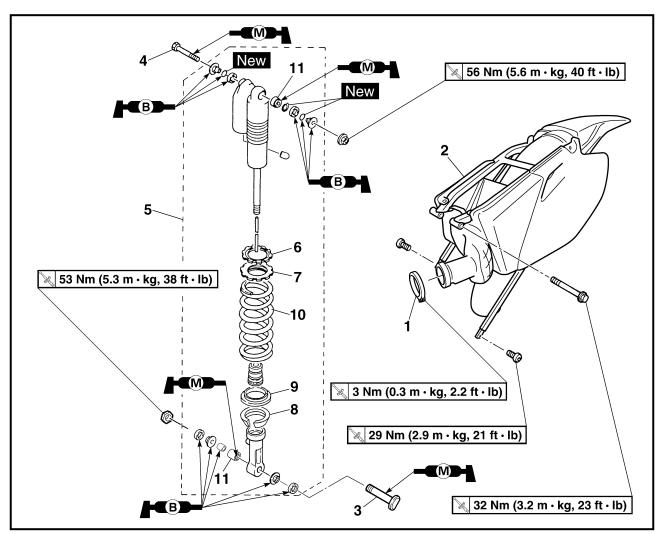


Extent of removal:

① Rear shock absorber removal

② Rear shock absorber disassembly

Extent of removal	Order	Part name	Q'ty	Remarks
Preparation for removal		REAR SHOCK ABSORBER REMOVAL Hold the machine by placing the suitable stand under the engine.		A WARNING Support the machine securely so there is no danger of it falling over.
		Seat and fitting band		Refer to "SEAT, FUEL TANK AND SIDE COVERS" section in the CHAPTER 4.
		Silencer		Refer to "EXHAUST PIPE AND SILENCER" section in the CHAPTER 4.
†	1	Clamp (air filter joint)	1	Only loosening.
	2	Rear frame	1	
•	3	Bolt (rear shock absorber-relay arm)	1	Hold the swingarm.
2	4	Bolt (rear shock absorber-frame)	1	
↓	5	Rear shock absorber	1	
	6	Locknut	1	Only loosening.
	7	Adjuster	1	Only loosening.
<u> </u>	8	Spring guide (lower)	1	



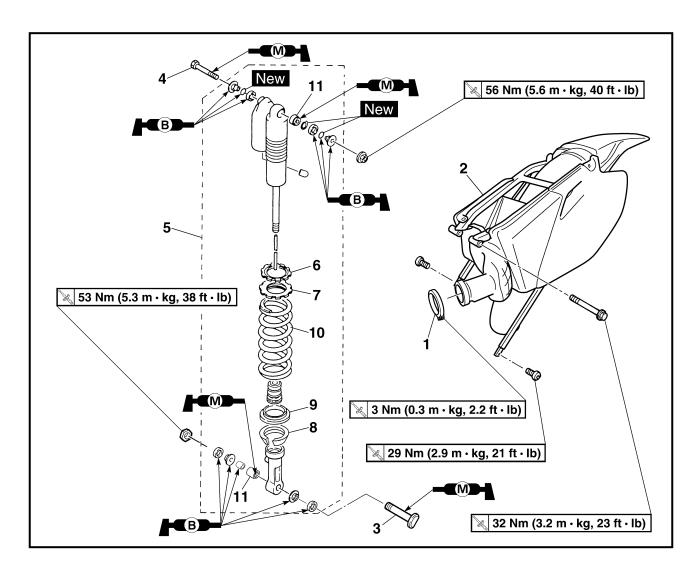

Extent of removal	Order	Part name	Q'ty	Remarks
†	9	Spring guide (upper)	1	
2	10	Spring (rear shock absorber)	1	
↓	11	Bearing	2	Refer to "REMOVAL POINTS".



EC586000


HANDLING NOTE

A WARNING

This shock absorber is provided with a separate type tank filled with high-pressure nitrogen gas. To prevent the danger of explosion, read and understand the following information before handling the shock absorber.

The manufacturer can not be held responsible for property damage or personal injury that may result from improper handling.

- 1. Never tamper or attempt to disassemble the cylinder or the tank.
- 2. Never throw the shock absorber into an open flame or other high heat. The shock absorber may explode as a result of nitrogen gas expansion and/ or damage to the hose.
- 3. Be careful not to damage any part of the gas tank. A damaged gas tank will impair the damping performance or cause a malfunction.
- 4. Take care not to scratch the contact surface of the piston rod with the cylinder; or oil could leak out.
- 5. Never attempt to remove the plug at the bottom of the nitrogen gas tank. It is very dangerous to remove the plug.
- 6. When scrapping the shock absorber, follow the instructions on disposal.

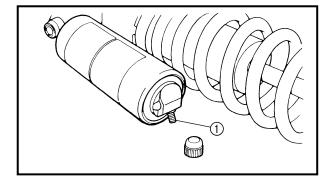

EC587000


NOTES ON DISPOSAL (YAMAHA DEALERS ONLY)


Before disposing the shock absorber, be sure to extract the nitrogen gas from valve ①. Wear eye protection to prevent eye damage from escaping gas and/or metal chips.


A WARNING


To dispose of a damaged or worn-out shock absorber, take the unit to your Yamaha dealer for this disposal procedure.




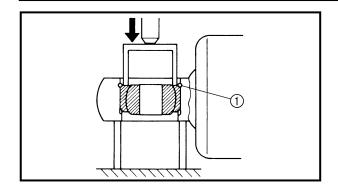

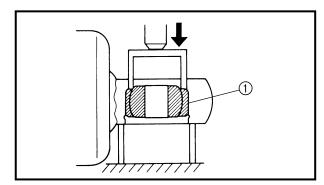

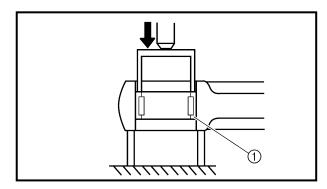

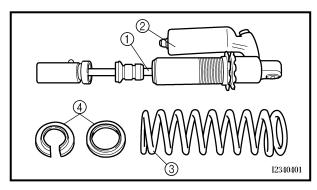

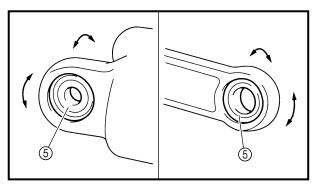

C583000

REMOVAL POINTS

EC583320

Bearing

- 1. Remove:
 - Stopper ring (upper bearing) ①

NOTE:

Press in the bearing while pressing its outer race and remove the stopper ring.

- 2. Remove:
 - Upper bearing (1)

NOTE: _

Remove the bearing by pressing its outer race.

- 3. Remove:
 - Lower bearing 1

NOTE: .

Remove the bearing by pressing its outer race.

EC584000

INSPECTION

Rear shock absorber

- 1. Inspect:
 - Damper rod ①
 Bends/damage → Replace absorber assembly.
 - Shock absorber ②

Oil leaks \rightarrow Replace absorber assembly.

Gas leaks \rightarrow Replace absorber assembly.

• Spring ③

 $\mathsf{Damage} \to \mathsf{Replace} \; \mathsf{spring}.$

Fatigue → Replace spring.


Move spring up and down.

• Spring guide 4

Wear/damage → Replace spring guide.

• Bearing (5)

Free play exists/unsmooth revolution/ rust \rightarrow Replace.

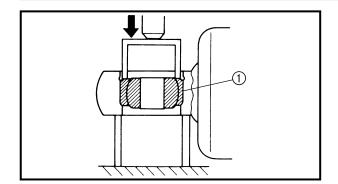

ASSEMBLY AND INSTALLATION

EC585300


Bearing

- 1. Install:
 - Upper bearing ①

Install the bearing parallel until the stopper ring groove appears by pressing its outer race.

CAUTION:

Do not apply the grease on the bearing outer race because it will wear the rear shock absorber surface on which the bearing is press fitted.

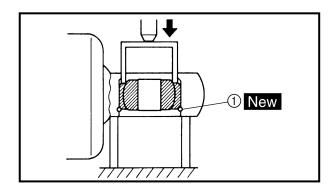


2. Install:

Stopper ring (upper bearing) ① New

NOTE: .

After installing the stopper ring, push back the bearing until it contacts the stopper ring.

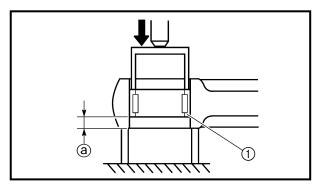

- 3. Install:
 - Lower bearing 1


Install the bearing by pressing it on the side having the manufacture's marks or numbers.



Installed depth of the bearing @: 4 mm (0.16 in)


Spring (rear shock absorber)


- 1. Install:
 - Spring (1)
 - Spring guide (upper) ②
 - Spring guide (lower) ③

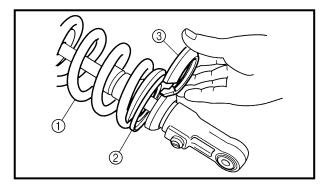

2. Tighten:


• Adjuster ①

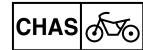

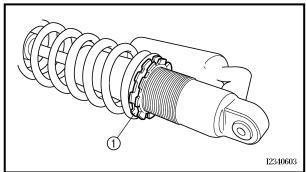

3. Adjust:

Spring length (installed) (a)

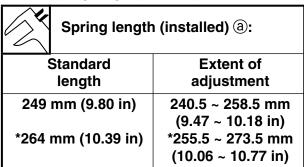

^{*} For EUROPE


NOTE: .

The length of the spring (installed) changes 1.5 mm (0.06 in) per turn of the adjuster.

CAUTION:

Never attempt to turn the adjuster beyond the maximum or minimum setting.

- 4. Tighten:
 - Locknut 1

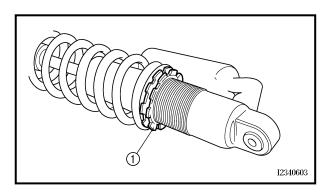


Rear shock absorber


- 1. Install:
 - Dust seal 1
 - O-ring ② New
 - Collar ③





- Apply the molybdenum disulfide grease on the bearing.
- Apply the lithium soap base grease on the dust seals, O-rings and collars.

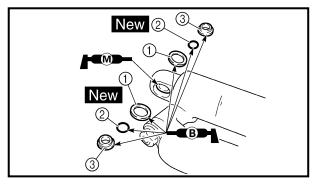





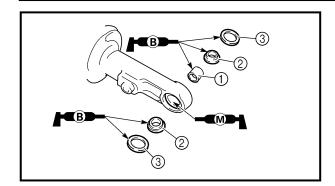

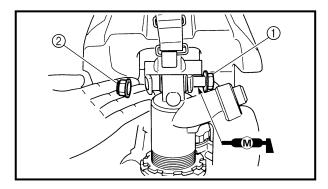

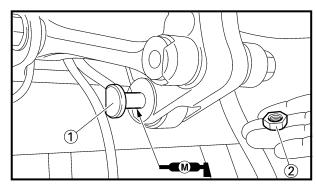

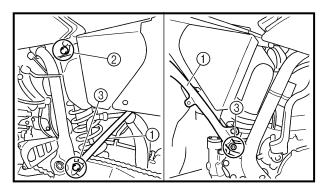

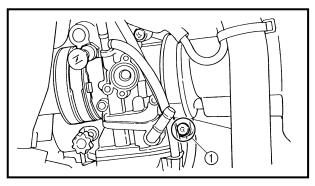

- 2. Install:
 - Bush ①
 - Collar (2)
 - Dust seal (3)

NOTE:

- Apply the molybdenum disulfide grease on the bearing.
- Apply the lithium soap base grease on the bush, collars and dust seals.
- Install the dust seals with their lips facing outward.
 - 3. Install:
 - Rear shock absorber
 - 4. Install:
 - Bolt (rear shock absorber-frame) (1)
 - Nut (rear shock absorber-frame) ②

NOTE: _

Apply the molybdenum disulfide grease on the bolt.

- 5. Install:
 - Bolt (rear shock absorber-relay arm) ①
 - Nut (rear shock absorber-relay arm) ②

№ 53 Nm (5.3 m · kg, 38 ft · lb)

NOTE: _

Apply the molybdenum disulfide grease on the bolt.

- 6. Install:
 - Rear frame (1)
 - Bolt [rear frame (upper)] ②

32 Nm (3.2 m ⋅ kg, 23 ft ⋅ lb)

• Bolt [rear frame (lower)] ③

≥ 29 Nm (2.9 m · kg, 21 ft · lb)

- 7. Tighten:
 - Screw (air filter joint) (1)

3 Nm (0.3 m ⋅ kg, 2.2 ft ⋅ lb)

ELECTRICAL COMPONENTS AND WIRING DIAGRAM



ELECTRICAL


ELECTRICAL COMPONENTS AND WIRING DIAGRAM


ELECTRICAL COMPONENTS

- ① "ENGINE STOP" button
- ② TPS (throttle position sensor)
- ③ Neutral switch
- 4 CDI magneto
- ⑤ Ignition coil
- ⑤ Spark plug
- ⑦ CDI unit


COLOR CODE

В	Black	W	White
Br	Brown	Υ	Yellow
G	Green	B/L	Black/Blue
L		B/W	Black/White
	Orange	B/Y	Black/Yellow
P			Green/Black
R		L/W	Blue/White
	Sky blue		Red/White

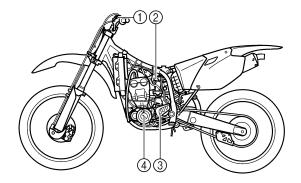

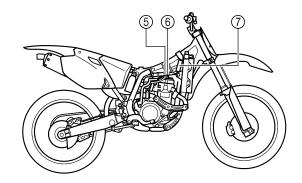

EC612000 WIRING DIAGRAM

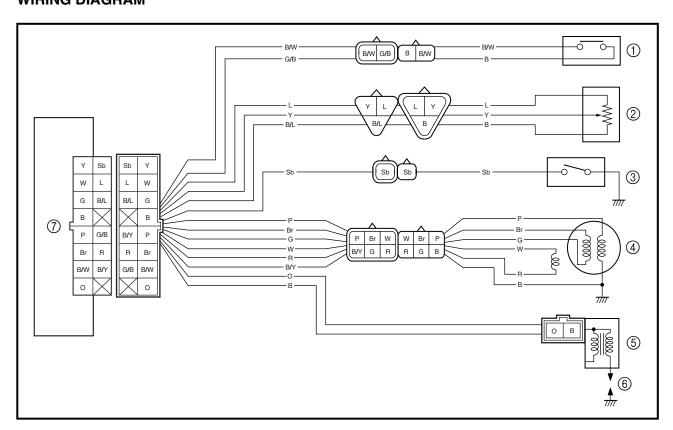


MAP-CONTROLLED CDI UNIT



MAP-CONTROLLED CDI UNIT

A map-controlled, CDI ignition system is used in the YZ450F.

The microcomputer in the CDI unit detects the engine speed and throttle position, thus determining the optimum ignition timing through the entire operating range. In this way, quick throttle response can be achieved according to various riding conditions.

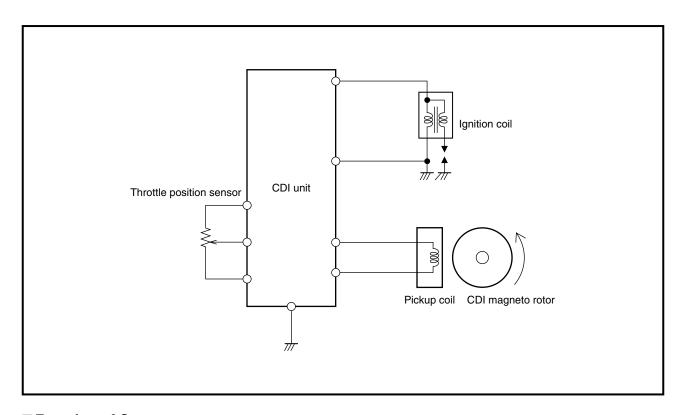


■ Function of Component

Component	Function
TPS (throttle position sensor)	Detects throttle valve opening and inputs it into the computer in the CDI unit as a throttle opening signal.
Pickup coil	Detects signal rotor revolutions and inputs them into the computer in the CDI unit as engine revolution signals.
CDI unit	The signals of the TPS and pickup coil sensor are analyzed by the computer in the CDI unit, which then adjusts ignition timing for the operation requirements.

■ Principal of 3-Dimensional Control

Conventionally, ignition timing was controlled only by engine revolutions (2-dimensional control). However, ignition timing needs advancement also by engine load. Thus, accurate ignition timing can be determined by adding throttle opening to determine ignition timing (3-dimensional control).

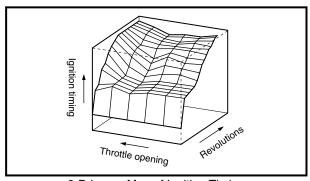

3-D Image Map of Ignition Timing (different from actual characteristics)




EC620000

IGNITION SYSTEM

INSPECTION STEPS

Use the following steps for checking the possibility of the malfunctioning engine being attributable to ignition system failure and for checking the spark plug which will not spark.

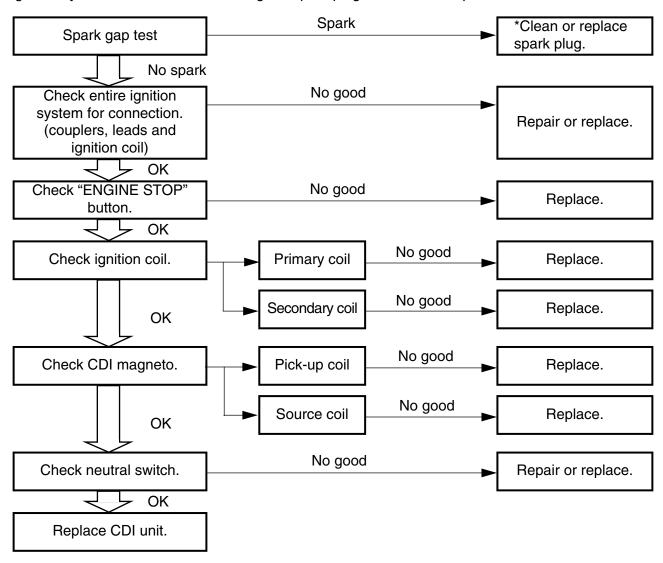

*marked: Only when the ignition checker is used.

NOTE

- Remove the following parts before inspection.
 - 1) Seat
 - 2) Fuel tank
- Use the following special tools in this inspection.




Dynamic spark tester: YM-34487 Ignition checker: 90890-06754





Pocket tester: YU-3112-C/90890-03112


IGNITION SYSTEM



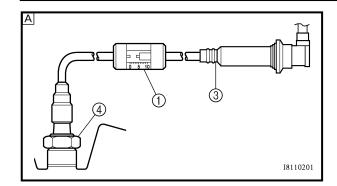

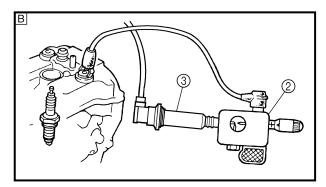

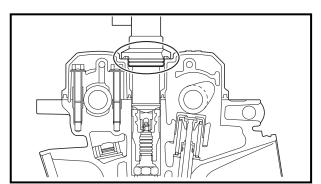

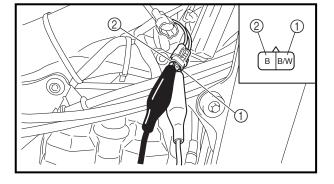

SPARK GAP TEST

- 1. Disconnect the ignition coil from spark plug.
- 2. Remove the ignition coil cap.
- 3. Connect the dynamic spark tester ① (ignition checker ②) as shown.
 - Ignition coil ③
 - Spark plug ④
- A For USA and CDN
- B Except for USA and CDN
 - 4. Kick the kick starter.
 - 5. Check the ignition spark gap.
 - 6. Start engine, and increase spark gap until misfire occurs. (for USA and CDN only)



Minimum spark gap: 6.0 mm (0.24 in)

COUPLERS, LEADS AND IGNITION COIL CONNECTION INSPECTION

- 1. Check:
 - Couplers and leads connection Rust/dust/looseness/short-circuit → Repair or replace.
 - Ignition coil and spark plug as they are fitted

Push in the ignition coil until it closely contacts the spark plug hole in the cylinder head cover.

EC625001

"ENGINE STOP" BUTTON INSPECTION

- 1. Inspect:
 - "ENGINE STOP" button conduct


Tester (+) lead → Black/White lead ①
Tester (-) lead → Black lead ②

	B/W ①	B	Tester selector position
PUSH IN	0	0	Ω× 1
FREE			22 / 1

No continuity while being pushed \rightarrow Replace. Continuity while being freed \rightarrow Replace.

IGNITION SYSTEM



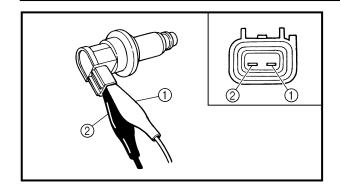


EC626002


IGNITION COIL INSPECTION


- 1. Remove the ignition coil cap.
- 2. Inspect:
 - $\begin{tabular}{ll} \bullet & Primary coil resistance \\ Out of specification \rightarrow Replace. \\ \end{tabular}$

Tester (+) lead \rightarrow Orange lead ① Tester (-) lead \rightarrow Black lead ②

Primary coil resistance	Tester selector position
0.08 ~ 0.10 Ω at 20 °C (68 °F)	$\Omega \times 1$

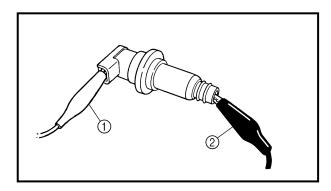

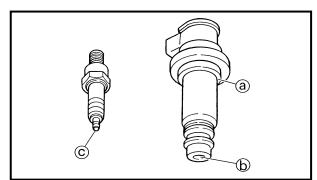

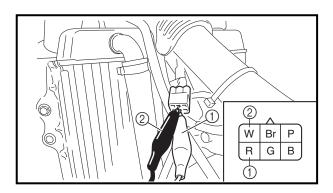

3. Inspect:

Secondary coil resistance
 Out of specification → Replace.

Tester (+) lead → Spark plug terminal ①
Tester (–) lead → Orange lead ②

Secondary coil resistance	Tester selector position
4.6 ~ 6.8 kΩ at 20 °C (68 °F)	$\mathbf{k}\Omega imes 1$

4. Inspect:

- Sealed portion of ignition coil (a)
- Spark plug terminal pin (b)
- Threaded portion of spark plug © Wear → Replace.

EC627011

CDI MAGNETO INSPECTION

1. Inspect:


Pick-up coil resistance
 Out of specification → Replace.


Tester (+) lead → Red lead ①
Tester (-) lead → White lead ②

Pick-up coil resistance	Tester selector position
248 ~ 372 Ω at 20 °C (68 °F)	Ω×100

IGNITION SYSTEM



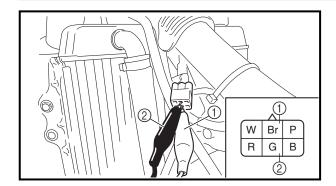

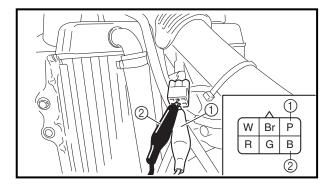

2. Inspect:

Source coil 1 resistance
 Out of specification → Replace.

Tester (+) lead → Brown lead ①
Tester (-) lead → Green lead ②


0	Source coil 1 resistance	Tester selector position
	720 ~ 1,080 Ω at 20 °C (68 °F)	Ω×100

3. Inspect:

Source coil 2 resistance
 Out of specification → Replace.

Tester (+) lead \rightarrow Pink lead ① Tester (-) lead \rightarrow Black lead ②

Source coil 2 resistance	Tester selector position
44 ~ 66 Ω at 20 °C (68 °F)	Ω×10

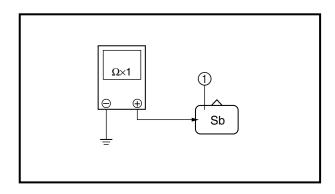

NEUTRAL SWITCH INSPECTION

- 1. Inspect:
 - Neutral switch conduct

Tester (+) lead \rightarrow Sky blue lead ① Tester (-) lead \rightarrow Ground

	Sb ①	Ground	Tester selector position
NEUTRAL	\bigcirc	0	0× 1
IN GEAR			22 / 1

No continuity while in neutral \rightarrow Replace. Continuity while in gear \rightarrow Replace.

CDI UNIT INSPECTION

Check all electrical components. If no fault is found, replace the CDI unit. Then check the electrical components again.




EC690000

TPS (THROTTLE POSITION SENSOR) SYSTEM

INSPECTION STEPS

If the TPS will not operate, use the following inspection steps.

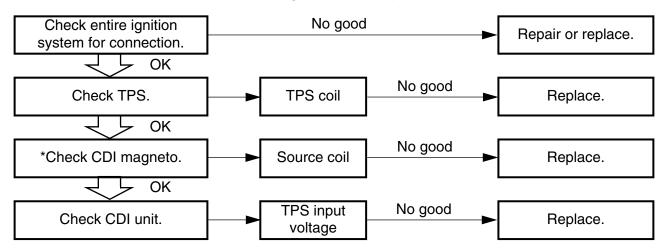

*marked: Refer to "IGNITION SYSTEM" section.

NOTE:

Use the following special tools in this inspection.




Pocket tester: YU-3112-C/90890-03112



Inductive tachometer: YU-8036-B Engine tachometer: 90890-03113



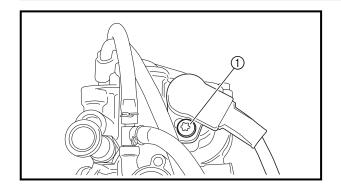

HANDLING NOTE


CAUTION:


Do not loosen the screws {TPS (throttle position sensor)} ① except when changing the TPS (throttle position sensor) due to failure because it will cause a drop in engine performance.

EC624000

COUPLERS AND LEADS CONNECTION INSPECTION

- 1. Check:
 - Couplers and leads connection Rust/dust/looseness/short-circuit → Repair or replace.

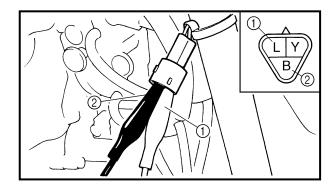

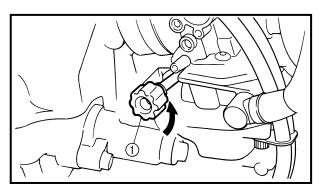

TPS COIL INSPECTION

- 1. Inspect:
 - TPS coil resistance
 Out of specification → Replace.

Tester (+) lead → Blue lead ①
Tester (-) lead → Black lead ②


TPS coil resistance	Tester selector position
4 ~ 6 kΩ at 20 °C (68 °F)	$\mathbf{k}\Omega \times 1$

- 2. Loosen:
 - Throttle stop screw (1)

NOTE:

Turn out the throttle stop screw until the throttle shaft is in the full close position.



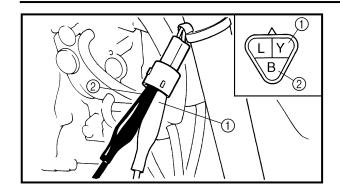


3. Inspect:


TPS coil variable resistance
 Check that the resistance in increased as the throttle grip is moved from the full close position to the full open position.

Out of specification \rightarrow Replace.

Tester (+) lead → Yellow lead ①
Tester (-) lead → Black lead ②

TPS coil variable resistance		Tester selector position
	Full opened 4 ~ 6 kΩ at 20 °C (68 °F)	$\mathbf{k}\Omega imes 1$

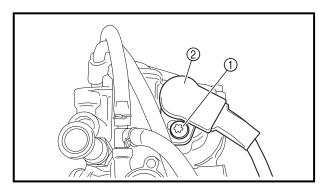

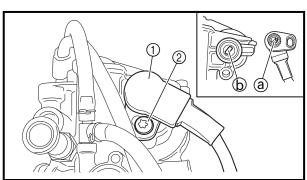

TPS REPLACEMENT AND ADJUSTMENT

- 1. Remove:
 - TPS coupler
 - Screw (TPS) ①
 - TPS ②

NOTE: _


Loosen the screws (TPS) using the T25 bit.


- 2. Replace:
 - TPS
- 3. Install:
 - TPS (1)
 - Screw (TPS) ②
 - TPS coupler

NOTE

- Align the slot ⓐ in the TPS with the projection ⓑ on the carburetor.
- Temporarily tighten the screws (TPS).



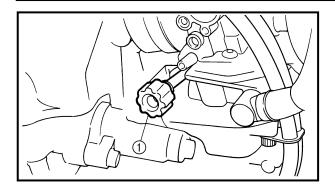

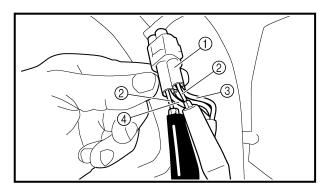



Idle speed

Adjustment steps:

- Attach the inductive tachometer (engine tachometer) to the high tension cord.
- Turn the throttle stop screw ① until the specified idle speed.

Refer to "IDLE SPEED ADJUSTMENT" section in the CHAPTER 3.



Idle speed:

1,900 ~ 2,100 r/min

5. Insert the thin electric conductors ② (lead) into the TPS coupler ①, as shown, and connect the tester to them.

Tester (+) lead \rightarrow Yellow lead ③ Tester (-) lead \rightarrow Black lead ④

CAUTION:

- Do not insert the electric conductors more than required because it may reduce the waterproof function of the coupler.
- Make sure that a short-circuit does not develop between the terminals because it may cause damage to electrical components.
 - 6. Start the engine.
 - 7. Adjust:
 - TPS output voltage


Adjustment steps:

Adjust the installation angle of the TPS ① to obtain the specified output voltage.


NOTE:

Measure the output voltage accurately with a digital electronic voltmeter that gives an easy reading of a small voltage.


TPS output voltage	Tester selector position	
0.58 ~ 0.78 V	DCV	

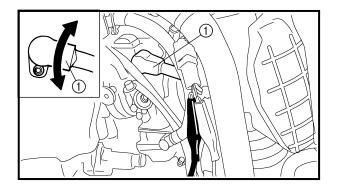



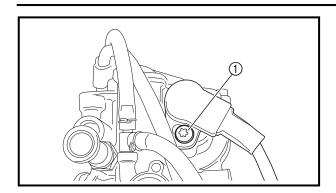

- 8. Tighten:
 - Screw (TPS) ①
- 9. Stop the engine.

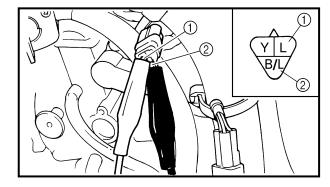

EC694000

TPS INPUT VOLTAGE INSPECTION

- 1. Disconnect the TPS coupler.
- 2. Start the engine.
- 3. Inspect:
 - TPS input voltage
 Out of specification → Replace the CDI unit.

Tester (+) lead → Blue lead ①
Tester (-) lead → Black/Blue lead ②

TPS input voltage	Tester selector position	
4 ~ 6 V	DCV-20	



EC700000

TUNING

EC710000

ENGINE

Carburetor setting

- The air/fuel mixture will vary depending on atmospheric conditions. Therefore, it is necessary to take into consideration the air pressure, ambient temperature, humidity, etc., when adjusting the carburetor.
- Perform a test run to check for proper engine performance (e.g., throttle response) and spark plug(-s) discoloration or fouling. Use these readings to determine the best possible carburetor setting.

NOTE: _

It is recommended to keep a record of all carburetor settings and external conditions (e.g., atmospheric conditions, track/surface conditions, lap times) to make future carburetor setting easier.

A WARNING

- The carburetor is a part of the fuel line.
 Therefore, be sure to install it in a well-ventilated area, away from flammable objects and any sources of fire.
- Never look into the carburetor intake.
 Flames may shoot out from the pipe if the engine backfires while it is being started.
 Gasoline may be discharged from the accelerator pump nozzle when the carburetor has been removed.

SETTING

TUN



CAUTION:

- The carburetor is extremely sensitive to foreign matter (dirt, sand, water, etc.).
 During installation, do not allow foreign matter to get into the carburetor.
- Always handle the carburetor and its components carefully. Even slight scratches, bends or damage to carburetor parts may prevent the carburetor from functioning correctly. Carefully perform all servicing with the appropriate tools and without applying excessive force.
- When the engine is stopped or when riding at no load, do not open and close the throttle unnecessarily. Otherwise, too much fuel may be discharged, starting may become difficult or the engine may not run well.
- After installing the carburetor, check that the throttle operates correctly and opens and closes smoothly.


Atmospheric conditions and carburetor settings

	Air temp.	Humidity	Air pressure (altitude)	Mixture	Setting
I	High	High	Low (high)	Richer	Leaner
I	Low	Low	High (low)	Leaner	Richer

The air density (i.e., concentration of oxygen in the air) determines the richness or leanness of the air/fuel mixture. Therefore, refer to the above table for mixture settings.


That is:

- Higher temperature expands the air with its resultant reduced density.
- Higher humidity reduces the amount of oxygen in the air by so much of the water vapor in the same air.
- Lower atmospheric pressure (at a high altitude) reduces the density of the air.

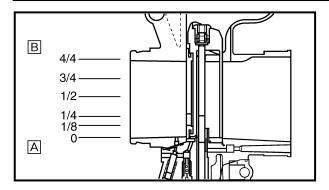


- A Closed
- Fully open

Effects of the setting parts on the throttle valve opening

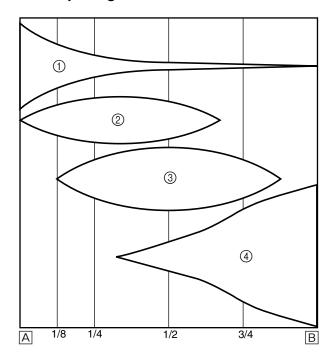

- 1) Pilot screw/pilot jet
- ② Throttle valve cutaway
- ③ Jet needle
- 4 Main jet

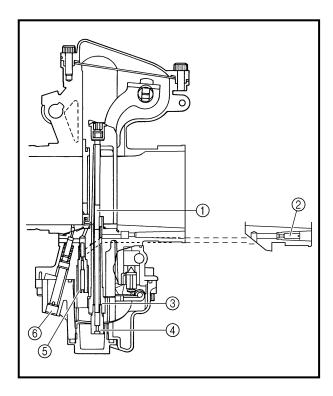

Main system


The FLATCR carburetor has a primary main jet. This type of main jet is perfect for racing motorcycles since it supplies an even flow of fuel, even at full load. Use the main jet and the jet needle to set the carburetor.

- ① Jet needle
- ② Pilot air jet
- ③ Needle jet
- 4 Main jet
- ⑤ Pilot jet
- 6 Pilot screw



Pilot system

The FLATCR carburetor is manufactured with a pilot screw. The pilot screw adjustment ranges from fully closed throttle to 1/4 open throttle.

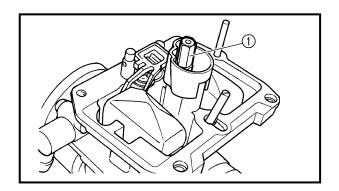


Main jet adjustment

The richness of the air-fuel mixture at full throttle can be set by changing the main jet ①.

Standard main jet	#165
-------------------	------


If the air-fuel mixture is too rich or too lean, the engine power will drop, resulting in poor acceleration.

Effects of changing the main jet (reference)

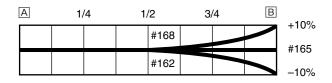

A Idle B Fully open



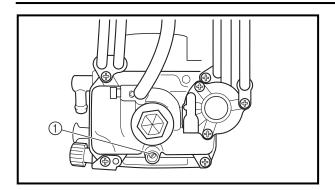

Pilot screw adjustment


The richness of the air-fuel mixture with the throttle fully closed to 1/4 open can be set by turning the pilot screw ①. Turning in the pilot screw will make the mixture lean at low speeds, and turning it out will enrich it.

Standard pilot	2
screw position	(example)

NOTE:


- If the idling speed fluctuates, turn the pilot screw only 1/2 of a turn in either direction.
- To optimize the fuel flow at a smaller throttle opening, each machine's pilot screw has been individually set at the factory. Before adjusting the pilot screw, turn it in fully and count the number of turns. Record this number as the factory-set number of turns out.

Effects of adjusting the pilot screw (reference)

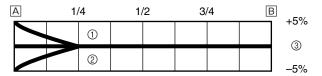

- A Idle
- Fully open
- (1) 2-1/2 turns out
- ② 1-1/2 turns out
- 3 2 turns out



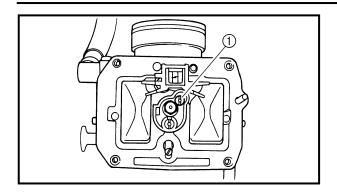



Pilot jet adjustment

The richness of the air-fuel mixture with the throttle open 1/4 or less can be set by adjusting the pilot jet ①.

Standard pilot jet	#42

Effects of adjusting the pilot jet (reference)

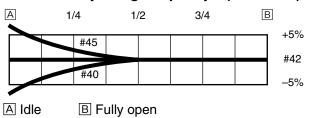

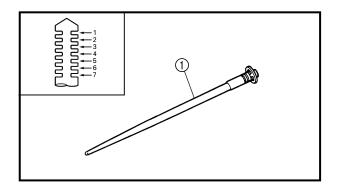

Jet needle groove position adjustment


Adjusting the jet needle ① position affects the acceleration when the throttle is 1/8 to 3/4 open.

- Too rich at intermediate speeds
 Rough engine operation is felt and the
 engine will not pick up speed smoothly. In
 this case, step up the jet needle clip by
 one groove and move down the needle to
 lean out the mixture.
- 2. Too lean at intermediate speeds
 The engine breathes hard and will not pick up speed quickly.

Step down the jet needle clip by one groove and move up the needle to enrich the mixture.

Standard clip position N	o.4 groove
--------------------------	------------

Effects of changing the jet needle groove position (reference)

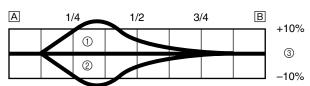

- A Idle
- B Fully open
- ① No.5 groove
- 2 No.3 groove
- ③ No.4 groove







Jet needle adjustment

The jet needle is adjusted by changing it.

NCVQ

The tapered sections of all jet needles have the same starting positions, but the needles are available with different straight-portion diameters.

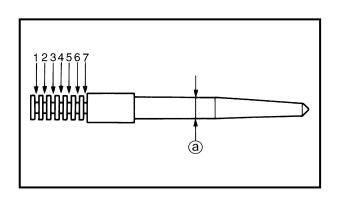


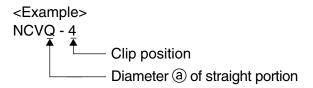

Effects of changing the jet needle (reference)

(Diameter of the straight portion)

Changing the diameter of the straight portion adjusts the air-fuel mixture when the throttle is 1/8 to 1/4 open.

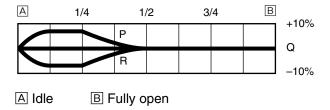

Relationship with throttle opening

The flow of the fuel through the carburetor main system is controlled by the main jet and then, it is further regulated by the area between the main nozzle and the jet needle.

The fuel flow relates to the diameter of the straight portion of the jet needle with the throttle 1/8 to 1/4 open and relates to the clip position with the throttle 1/8 to 3/4 open.

Therefore, the fuel flow is balanced at each stage of throttle opening by the combination of the jet needle straight portion diameter, and clip position.

SETTING





Carburetor setting parts

Part name		Size	Part number
Main jet	Rich	#178	4MX-14943-93
, , , , , ,		#175	4MX-14943-42
	T	#172	4MX-14943-92
		#170	4MX-14943-41
		#168	4MX-14943-91
(STD)	#165	4MX-14943-40
		#162	4MX-14943-90
		#160	4MX-14943-39
		#158	4MX-14943-89
	▼	#155	4MX-14943-38
	Lean	#152	4MX-14943-88
Pilot jet	Rich	#50	4MX-14948-07
	A	#48	4MX-14948-06
		#45	4MX-14948-05
(STD)	#42	4MX-14948-04
		#40	4MX-14948-03
	▼	#38	4MX-14948-02
	Lean	#35	4MX-14948-01
Jet needle	Rich	#CVM	5TA-14916-VM
	A	#CVN	5TA-14916-VN
		#CVP	5TA-14916-VP
(STD)		#CVQ	5TA-14916-V1
		#CVR	5TA-14916-VR
	▼	#CVS	5TA-14916-VS
	Lean	#CVT	5TA-14916-VT





Examples of carburetor setting depending on symptom

Symptom	Setting	Checking
At full throttle Hard breathing Shearing noise Whitish spark plug Lean mixture	Increase main jet calibration no. (Gradually)	Discoloration of spark plug → If tan color, it is in good condition. If cannot be corrected: Clogged float valve seat Clogged fuel hose Clogged fuel cock Check that the accelerator pump operates smoothly.
At full throttle Speed pick-up stops Slow speed pick-up Slow response Sooty spark plug Rich mixture	Decrease main jet calibration no. (Gradually)	Discoloration of spark plug → If tan color, it is in good condition. If cannot be corrected: Clogged air cleaner Fuel overflow from carburetor
Lean mixture	Lower jet needle clip position. (1 groove down)	Groobe 1 Groobe 2 Groobe 3 Groobe 3 Groobe 4 Groobe 4 Groobe 4 Groobe 4 Groobe 4
Rich mixture	Raise jet needle clip position. (1 groove up)	Groobe 5 T (Standard)
1/4 ~ 3/4 throttle Hard breathing Lack of speed	Lower jet needle clip position. (1 groove down)	Jet needle Richer
1/4 ~ 1/2 throttle Slow speed pick-up Poor acceleration	Raise jet needle clip position. (1 groove up)	The clip position is the jet needle groove on which the clip is installed. The positions are numbered from the top. Check that the accelerator pump operates smoothly (except for rich mixture symptom).
Closed to 1/4 throttle Hard breathing Speed down	Use jet needle with a smaller diameter.	Slow-speed-circuit passage Clogged → Clean. Overflow from carburetor
Closed to 1/4 throttle Poor acceleration	Use jet needle with a larger diameter. Raise jet needle clip position. (1 groove up)	
Poor response in the low to intermediate speeds	Raise jet needle clip position. If this has no effect, lower the jet needle clip position.	
Poor response when throttle is opened quickly	Check overall settings. Use main jet with a lower calibration no. Raise jet needle clip position. (1 groove up) If these have no effect, use a main jet with a higher calibration no. and lower the jet needle clip position.	Check air cleaner for fouling. Check that the accelerator pump operates smoothly.

^{*} This should be taken simply for an example. It is necessary to set the carburetor while checking the operating conditions of the engine.

C720000

CHASSIS

FC71P00

Selection of the secondary reduction ratio (Sprocket)

Secondary reduction ratio

Number of driven sprocket teeth

Number of drive sprocket teeth

Standard secondary 48 reduction ratio *47

48/14 (3.429) *47/14 (3.357)


- * For EUROPE
- <Requirement for selection of secondary gear reduction ratio>
- It is generally said that the secondary gear ratio should be reduced for a longer straight portion of a speed course and should be increased for a course with many corners.
 Actually, however, as the speed depends on the ground condition of the day of the race, be sure to run through the circuit to set the machine suitable for the entire course.
- In actuality, it is very difficult to achieve settings suitable for the entire course and some settings may be sacrificed. Thus, the settings should be matched to the portion of the course that has the greatest effect on the race result. In such a case, run through the entire course while making notes of lap times to find the best balance; then, determine the secondary reduction ratio.
- If a course has a long straight portion where a machine can run at maximum speed, the machine is generally set such that it can develop its maximum revolutions toward the end of the straight line, with care taken to avoid the engine over-revving.

NOTE:

Riding technique varies from rider to rider and the performance of a machine also vary from machine to machine. Therefore, do not imitate other rider's settings from the beginning but choose your own setting according to the level of your riding technique.





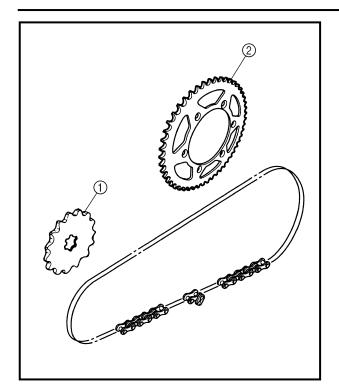

EC72N000

Drive and driven sprockets setting parts

Part name	Size	Part number
Drive sprocket ①		
(STD)	14T	9383E-14215
Drive sprocket ②	46T	5TA-25446-00
*(STD)	47T	5ET-25447-00
(STD)	48T	5NY-25448-00
	49T	5NY-25449-00
	50T	5NY-25450-00
	51T	5NY-25451-00
	52T	5NY-25452-00

^{*} For EUROPE

EC721002

Tire pressure

Tire pressure should be adjust to suit the road surface condition of the circuit.



Standard tire pressure: 100 kPa (1.0 kgf/cm², 15 psi)

 Under a rainy, muddy, sandy, or slippery condition, the tire pressure should be lower for a larger area of contact with the road surface.



Extent of adjustment: 60 ~ 80 kPa (0.6 ~ 0.8 kgf/cm², 9.0 ~ 12 psi)

 Under a stony or hard road condition, the tire pressure should be higher to prevent a flat tire.



Extent of adjustment:

100 ~ 120 kPa

 $(1.0 \sim 1.2 \text{ kgf/cm}^2, 15 \sim 18 \text{ psi})$



EC722011

Front fork setting

The front fork setting should be made depending on the rider's feeling of an actual run and the circuit conditions.

The front fork setting includes the following three factors:

- 1. Setting of air spring characteristics
 - Change the fork oil level.
- 2. Setting of spring preload
 - Change the spring.
 - Install the adjustment washer.
- 3. Setting of damping force
 - Change the compression damping.
 - Change the rebound damping.
 The spring acts on the load and the damping force acts on the cushion travel speed.

EC72300

Change in level and characteristics of fork oil

Damping characteristic near the final stroke can be changed by changing the fork oil amount.


CAUTION:


Adjust the oil level in 5 mm (0.2 in) increments or decrements. Too low oil level causes the front fork to produce a noise at full rebound or the rider to feel some pressure on his hands or body. Alternatively, too high oil level will develop unexpectedly early oil lock with the consequent shorter front fork travel and deteriorated performance an characteristics. Therefore, adjust the front fork within the specified range.




Standard oil level:
135 mm (5.31 in)
Extent of adjustment:
80 ~ 150 mm (3.15 ~ 5.91 in)
From top of outer tube with inner tube and damper rod fully compressed without spring.

- Air spring characteristics in relation to oil level change
- B Load
- C Stroke
- 1 Max. oil level
- ② Standard oil level
- (3) Min. oil level

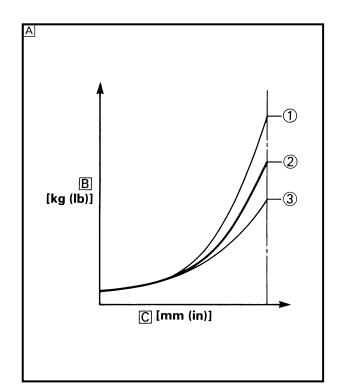

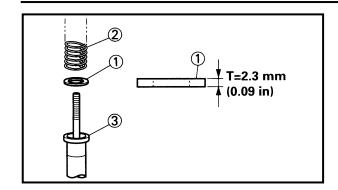

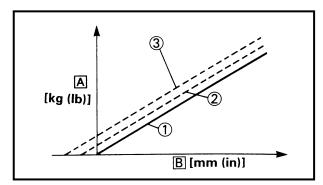

EC727020

Spring preload adjustment

The spring preload is adjusted by installing the adjustment washer ① between the fork spring ② and damper rod ③.

CAUTION:

Do not install three or more adjustment washers for each front fork.

WARNING

Always adjust each front fork to the same setting. Uneven adjustment can cause poor handling and loss of stability.



Standard washer quantity:
Zero adjustment washers
Extent of adjustment:
Zero ~ 2 adjustment washers

- A Load
- **B** Fork stroke
- (1) Without adjustment washer (standard)
- 2 1 adjustment washer
- 3 2 adjustment washers

EC72A001

Setting of spring after replacement

As the front fork setting can be easily affected by rear suspension, take care so that the machine front and rear are balanced (in position, etc.) when setting the front fork.

- Use of soft spring
 Generally a soft spring gives a soft riding
 feeling. Rebound damping tends to
 become stronger and the front fork may
 sink deeply over a series of gaps.
 - To set a soft spring:
 - Change the rebound damping. Turn out one or two clicks.
 - Change the compression damping. Turn in one or two clicks.






2. Use of stiff spring


Generally a stiff spring gives a stiff riding feeling. Rebound damping tends to become weaker, resulting in lack of a sense of contact with the road surface or in a vibrating handlebar.


To set a stiff spring:

- Change the rebound damping. Turn in one or two clicks.
- Change the compression damping. Turn out one or two clicks.

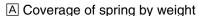

- B Rider weight
- 1) Soft
- ② Standard
- ③ Stiff

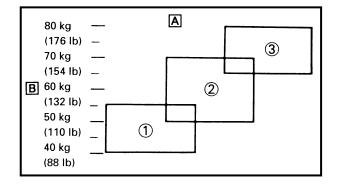

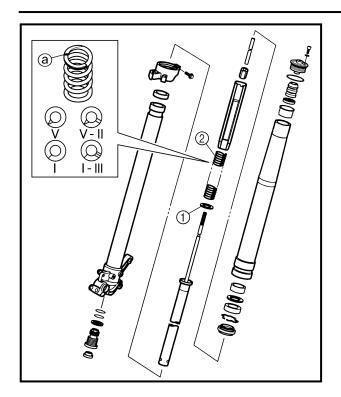

EC72P000

Front fork setting parts

• Adjustment washer ①

TYPE (thickness)	PART NUMBER
T = 2.3 mm (0.09 in)	4SS-23364-L0

• Front fork spring ②
[Equal pitch spring]

ТҮРЕ	SPRING RATE	SPRING PART NUMBER	I.D. MARK (slits)
SOFT	0.380	4SS-23141-10	I-I
	0.390	4SS-23141-20	I-II
	0.400	4SS-23141-30	I-III
	0.410	4SS-23141-40	I
	0.420	4SS-23141-50	II
	0.430	4SS-23141-60	III
STIFF	0.440	4SS-23141-70	IIII
STD	0.460	5GR-23141-L0	_

[Unequal pitch spring]

ТҮРЕ	SPRING RATE (approx.)	SPRING PART NUMBER	I.D. MARK (slits)
SOFT	0.400	5ET-23141-20	٧
	0.410	5ET-23141-00	V-I
	0.420	5ET-23141-30	V-II
	0.430	5ET-23141-10	V-III
STIFF	0.440	5ET-23141-40	V-IIII

NOTE: _

- The unequal pitch spring is softer in initial characteristic than the equal pitch spring and is difficult to bottom out under full compression.
- The I.D. mark (slits) (a) is proved on the end of the spring.




EC72B000

Rear suspension setting

The rear suspension setting should be made depending on the rider's feeling of an actual run and the circuit conditions.

The rear suspension setting includes the following two factors:


- 1. Setting of spring preload
 - Change the set length of the spring.
 - Change the spring.
- 2. Setting of damping force
 - Change the rebound damping.
 - Change the compression damping.

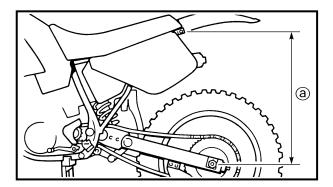

EC72C001

Choosing set length

- Place a stand or block under the engine to put the rear wheel above the floor, and measure the length (a) between the rear wheel axle center and the rear fender holding bolt.
- (a)
- 2. Remove the stand or block from the engine and with a rider astride the seat, measure the sunken length ⓑ between the rear wheel axle center and the rear fender holding bolt.

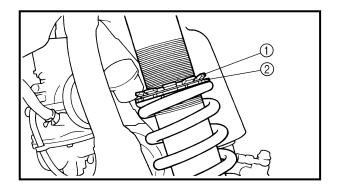

3. Loosen the locknut ① and make adjustment by turning the spring adjuster ② to achieve the standard figure from the subtraction of the length ⑥ from the length ⑥.



Standard figure:

90 ~ 100 mm (3.5 ~ 3.9 in)

TUN

NOTE:

- If the machine is new and after it is broken in, the same set length of the spring may change because of the initial fatigue, etc. of the spring. Therefore, be sure to make reevaluation.
- If the standard figure cannot be achieved by adjusting the spring adjuster and changing the spring set length, replace the spring with an optional one and make re-adjustment.


EC72G001


Setting of spring after replacement

After replacement, be sure to adjust the spring to the set length [sunken length $90 \sim 100$ mm $(3.5 \sim 3.9 \text{ in})$] and set it.

- 1. Use of soft spring
 - Set the soft spring for less rebound damping to compensate for its less spring load. Run with the rebound damping adjuster one or two clicks on the softer side and readjust it to suit your preference.
- 2. Use of stiff spring
 - Set the soft spring for more rebound damping to compensate for its greater spring load. Run with the rebound damping adjuster one or two clicks on the stiffer side and readjust it to suit your preference.
- * Adjusting the rebound damping will be followed more or less by a change in the compression damping. For correction, turn the low compression damping adjuster on the softer side.



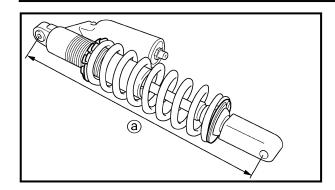

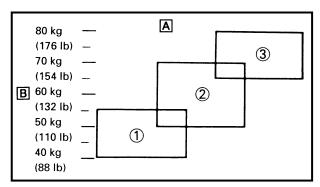

CAUTION:


When using a rear cushion other than currently installed, use the one whose overall length (a) does not exceed the standard as it may result in faulty performance. Never use one whose overall length is greater than standard.



Length ⓐ of standard shock: 490.5 mm (19.31 in)

- A Coverage of spring by weight
- Rider weight
- ① Soft
- ② Standard
- ③ Stiff



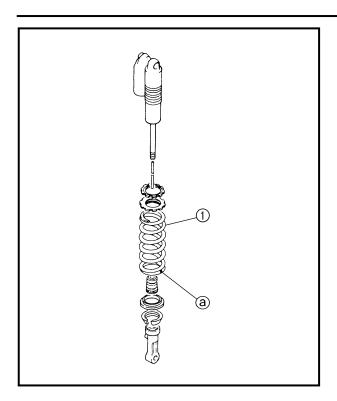

EC72Q000

Rear shock absorber setting parts

• Rear shock spring ① [Equal pitch spring]

TYPE	SPRING RATE	SPRING PART NUMBER	I.D. COLOR/ POINT	SPRING FREE LENGTH
SOFT	4.3	5UN-22212-00	Brown/1	260
	4.5	5UN-22212-10	Green/1	260
	4.7	5UN-22212-20	Red/1	260
	4.9	5UN-22212-30	Black/1	260
	5.1	5UN-22212-40	Blue/1	260
STD	5.3	5UN-22212-50	Yellow/1	260
STIFF	5.5	5UN-22212-60	Pink/1	260
	5.7	5UN-22212-70	White/1	260


[Unequal pitch spring]

TYPE	SPRING RATE (approx.)	SPRING PART NUMBER	I.D. COLOR/ POINT	SPRING FREE LENGTH
SOFT	4.5	5UN-22212-A0	Green/2	275
	4.7	5UN-22212-B0	Red/2	275
	4.9	5UN-22212-C0	Black/2	275
	5.1	5UN-22212-D0	Blue/2	275
*STD	5.3	5UN-22212-E0	Yellow/2	275
STIFF	5.5	5UN-22212-F0	Pink/2	275
	5.7	5UN-22212-G0	White/2	275

^{*}For EUROPE

NOTE: _

- The unequal pitch spring is softer in initial characteristic than the equal pitch spring and is difficult to bottom out under full compression.
- The I.D. color @ is marked at the end of the spring.

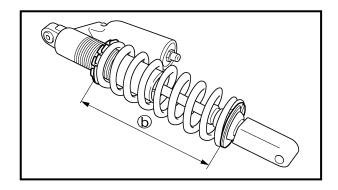

• Extent of adjustment (spring length)

	· · · · · · · · · · · · · · · · · · ·
SPRING FREE	EXTENT OF
LENGTH	ADJUSTMENT (b)
260 mm (10.24 in)	240.5 ~ 258.5 mm (9.47 ~ 10.18 in)
275 mm (10.83 in)	255.5 ~ 273.5 mm (10.06 ~ 10.77 in)

TUN	
-----	--

EC72H002

Suspension setting

Front fork

NOTE: _

- If any of the following symptoms is experienced with the standard position as the base, make resetting by reference to the adjustment procedure given in the same chart.
- \bullet Before any change, set the rear shock absorber sunken length to the standard figure 90 \sim 100 mm (3.5 \sim 3.9 in).

		Sec	tion			
Symptom	Jump	Large gap	Medium gap	Small gap	Check	Adjust
Stiff over entire range	0	0	0		Compression damping Oil level (oil amount) Spring	Turn adjuster counterclockwise (about 2 clicks) to decrease damping. Decrease oil level by about 5 ~ 10 mm (0.2 ~ 0.4 in). Replace with soft spring.
Unsmooth movement over entire range	0	0	0	0	Outer tube Inner tube Under bracket tightening torque	Check for any bends, dents, and other noticeable scars, etc. If any, replace affected parts. Retighten to specified torque.
Poor initial movement				0	Rebound damping Oil seal	Turn adjuster counterclockwise (about 2 clicks) to decrease damping. Apply grease in oil seal wall.
Soft over entire range, bottoming out	0	0			Compression damping Oil level (oil amount) Spring	Turn adjuster clockwise (about 2 clicks) to increase damping. Increase oil level by about 5 ~ 10 mm (0.2 ~ 0.4 in). Replace with stiff spring.
Stiff toward stroke end	0				Oil level (oil amount)	Decrease oil level by about 5 mm (0.2 in).
Soft toward stroke end, bottoming out	0				Oil level (oil amount)	Increase oil level by about 5 mm (0.2 in).
Stiff initial movement	0	0	0	0	Compression damping	Turn adjuster counterclockwise (about 2 clicks) to decrease damping.
Low front, tending to lower front posture			0	0	Compression damping Rebound damping Balance with rear end Oil level (oil amount)	Turn adjuster clockwise (about 2 clicks) to increase damping. Turn adjuster counterclockwise (about 2 clicks) to decrease damping. Set sunken length for 95 ~ 100 mm (3.7 ~ 3.9 in) when one passenger is astride seat (lower rear posture). Increase oil level by about 5 mm (0.2 in).
"Obtrusive" front, tending to upper front posture			0	0	Compression damping Balance with rear end Spring Oil lever (oil amount)	Turn adjuster counterclockwise (about 2 clicks) to decrease damping. Set sunken length for 90 ~ 95 mm (3.5 ~ 3.7 in) when one passenger is astride seat (upper rear posture). Replace with soft spring. Decrease oil level by about 5 ~ 10 mm (0.2 ~ 0.4 in).

TUN	
-----	--

• Rear shock absorber

NOTE: _

- If any of the following symptoms is experienced with the standard position as the base, make resetting by reference to the adjustment procedure given in the same chart.
- Adjust the rebound damping in 2-click increments or decrements.
- Adjust the low compression damping in 1-click increments or decrements.
- Adjust the high compression damping in 1/6 turn increments or decrements.

		Sec	tion				
Symptom	Jump	Large gap	Medium gap	Small gap	Check	Adjust	
Stiff, tending to sink			0	0	Rebound damping Spring set length	Turn adjuster counterclockwise (about 2 clicks) to decrease damping. Set sunken length for 90 ~ 100 mm (3.5 ~ 3.9 in) when one passenger is astride seat.	
Spongy and unstable			0	0	Rebound damping Low compression damping Spring	Turn adjuster clockwise (about 2 clicks) to increase damping. Turn adjuster clockwise (about 1 click) to increase damping. Replace with stiff spring.	
Heavy and dragging			0	0	Rebound damping Spring	Turn adjuster counterclockwise (about 2 clicks) to decrease damping. Replace with soft spring.	
Poor road gripping				0	Rebound damping Low compression damping High compression damping Spring set length Spring	Turn adjuster counterclockwise (about 2 clicks) to decrease damping. Turn adjuster clockwise (about 1 clicks) to increase damping. Turn adjuster clockwise (about 1/6 clicks) to increase damping. Set sunken length for 90 ~ 100 mm (3.5 ~ 3.9 in) when one passenger is astride seat. Replace with soft spring.	
Bottoming out	0	0			High compression damping Spring set length Spring	Turn adjuster clockwise (about 1/6 turn) to increase damping. Set sunken length for 90 ~ 100 mm (3.5 ~ 3.9 in) when one passenger in astride seat. Replace with stiff spring.	
Bouncing	0	0			Rebound damping Spring	Turn adjuster clockwise (about 2 clicks) to increase damping. Replace with soft spring.	
Stiff travel	0	0			High compression damping Spring set length Spring	Turn adjuster counterclockwise (about 1/6 turn) to decrease damping. Set sunken length for 95 ~ 100 mm (3.7 ~ 3.9 in) when one passenger is astride seat. Replace with soft spring.	

PROTECT YOUR INVESTMENT Use **Genuine YAMAHA** Parts And Accessories

